

Thin and Small ROBO Cylinder Mini Cylinder RCD Actuator

First Step Guide Third Edition

Thank you for purchasing our product.

Make sure to read the Safety Guide and detailed Instruction Manual as well as this First Step Guide to ensure correct use.

This Instruction Manual is original.



Warning : Read the instruction manual carefully and follow the instruction manual when handling this equipment. Please downloaded the user's manual from our website. You can download it free of charge. User registration is required for first time users.
URL: www.iai-robot.co.jp/data_dl/CAD_MANUAL/
Keep a printout of the introduction manual near the equipment in which this product is installed so that it can be checked at all times, or display it on your computer, tablet terminal, etc. so that you can check it immediately.
If you need a bound copy of the instruction manual, order it from the nearest sales office listed in the First Step Guide or at the end of the instruction manual. It will be provided for a fee.

- Using or copying all or part of this Instruction Manual without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the sentences are registered trademarks.

Product Check

This product is comprised of the following parts if it is of standard configuration.

If you find any fault in the contained model or any missing parts, contact us or our distributor.

1. Product Check

No.	Part Name	Model	Remarks
1	Actuator Main Body	Refer to "How to read the model plate", "How to read the model No."	
Accessories			
2	Motor • Encoder Cable*1		
3	Nut		Refer to list below
4	Safety Guide	M0194	

 
*1 Please refer to the wiring layout for the enclosed motor cable and encoder cable.

Type	Attachment Nut M10×1.0	Rod Tip Nut M4×0.7
RA1DA	1	2


2. Instruction Manuals for the Controllers Related to This Product

No.	Name	Control No.
1	ASEP/PSEP/DSEP Controller Operation Manual	ME0267
2	ACON-CA/DCON-CA Controller Operation Manual	ME0326
3	ACON-CB/DCON-CB Controller Operation Manual	ME0343
4	RC PC Software RCM-101-MW/RCM-101-USB Operation Manual	ME0155
5	Touch Panel Teaching Pendant TB-01/01D/01DR Operation Manual (Applicable for Position Controller)	ME0324
6	Touch Panel Teaching Pendant TB02/TB02D Operation Manual (Applicable for Position Controller)	ME0355

3. How to read the model plate



4. How to read the Model No.

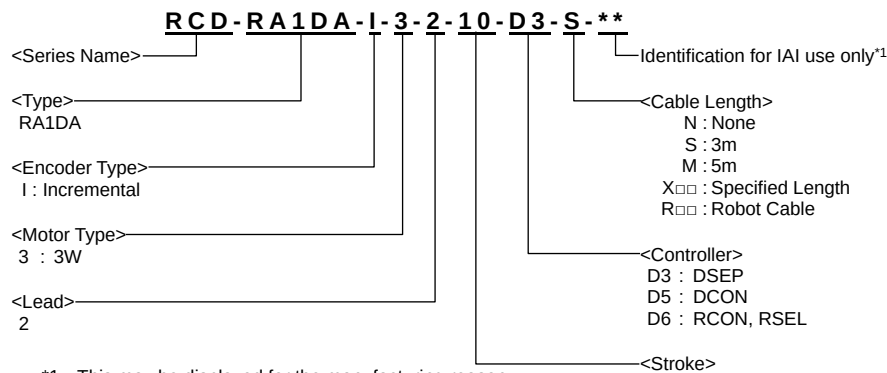

*1 This may be displayed for the manufacturing reason.
(This is not to indicate the manufacturing model code.)

Precautions in Handling


1. Handling of the Packed Product

Take the greatest care in transporting the product, not to bump or drop it.

- An operator should never attempt to carry a heavy package on his own.
- When setting down the package temporarily, keep it horizontal.
- Do not step on the package.
- Do not place on the package a heavy object that may cause the box deformation or apply stress on it.

2. Handling of the Unpacked Product

Do not transport the actuator by holding the Motor Unit, cable or move it by pulling the cable.

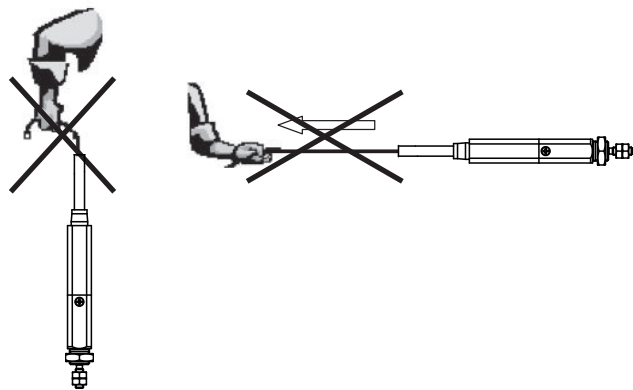

- When the actuator is taken out from the package and handled, hold the base section.
- When transporting the actuator, be careful not to hit it against other objects.
- Do not give any unnatural force to any of the sections in the actuator.

Environments for Installation, Storage and Preservation

1. Installation Environment

Please attempt to avoid installing the product to such places as listed below.

It is generally the environment where a worker can work without any protection gear.

Also, make sure to keep enough space necessary for maintenance work.

- Place where exposed to radiant heat from a huge heat source such as heat treatment
- Place where the ambient temperature goes out of the applicable range from 0 to 40°C
- Place where condensation would occur due to sudden temperature change
- Place where the relative humidity exceeds 85% RH
- Place where exposed to the direct sunlight
- Place where corrosive gas or flammable gas exist
- Place where it contains a lot of dust, salt or iron (Outside of an ordinary assembly plant)
- Place where water, oil (includes oil mist and cutting fluid) or chemical is splashed
- Place where the product main body receives vibration or hit impact

Make sure to have a treatment for blocking when using in the following conditions:

- Place where noise is generated by such facts as static electricity
- Place where exposed to the influence of strong electric or magnetic field
- Place where exposed to the influence of ultraviolet or radiant rays

2. Storage and Preservation Environment

The storage and preservation environment should comply with the same standards as those for the installation environment. In particular, when the machine is to be stored for a long time, pay close attention to environmental conditions so that no dew condensation forms.


Unless specially specified, moisture absorbcency protection is not included in the package when the machine is delivered. In the case that the machine is to be stored and preserved in an environment where dew condensation is anticipated, take the condensation preventive measures from outside of the entire package, or directly after opening the package.

For storage and preservation temperature, the machine withstands temperatures up to 60°C for a short time, but in the case of the storage and preservation period of 1 month or more, control the temperature to 50°C or less.

The product should be settled in the horizontal orientation while in storage and reservation. In the case it is stored in the packaged condition, follow the posture instruction if any displayed on the package.

Names of the Parts

This manual indicates the right and left of the actuator in the view that it is placed in the horizontal orientation, and is looked from the top view and the motor side.

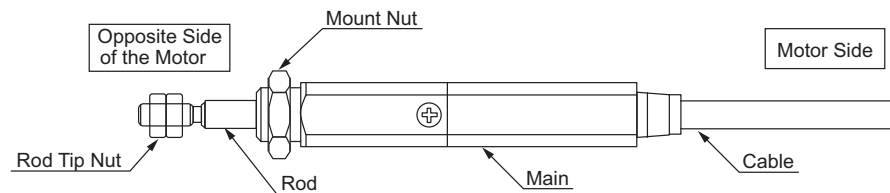

For the details of dimensions and outlines, refer to the catalog or Instruction Manual.

Attachment

Refer to the Instruction Manual for the attachments of the actuator and loads.



[Precautions for Attachments]


No.	Item	Precautions
1	Attachment Surface	• The installation bracket should possess enough stiffness, and also prevent vibration exceeding 0.3G from being applied to the main unit. • Secure the space where maintenance work can be performed.
2	Tightening Torque	• Please follow the specification values stated in the Instruction Manual for the tightening torque. Failure to do so may cause an operation problem.
3	Load Moment and Overhung length	• Please do not apply any external force from other than rod moving direction (radial load) to the rod. Any perpendicular or radial force to the rod may cause damage to the actuator or operation problem. Equip an external guide if any external force from other direction than the rod moving direction is applied.
4	Stainless sheet	• Do not attempt to apply torque of 0.02Nm or more to the rod while in installation. Doing so may cause a risk of a breakage or malfunction of the actuator. • When transporting a heavy work piece (0.02kg or more), make sure to join either the work piece or the rod to the external guide. In this case, use a free joint to kill the difference in the moving directions of the work piece and the rod (traveling parallelism).

Wiring

For the controller, only the dedicated controller manufactured by our company can be used.


For the connection between the actuator and controller, use the attached dedicated connection cable.

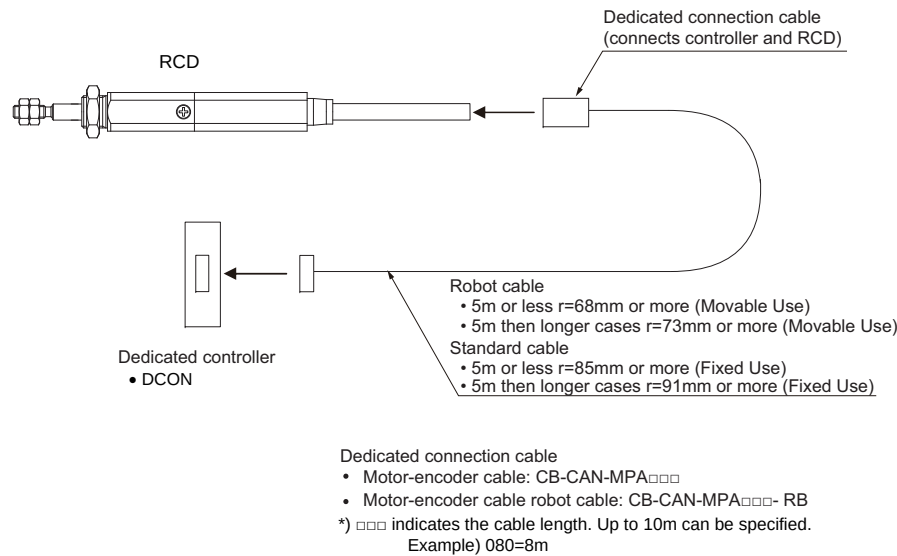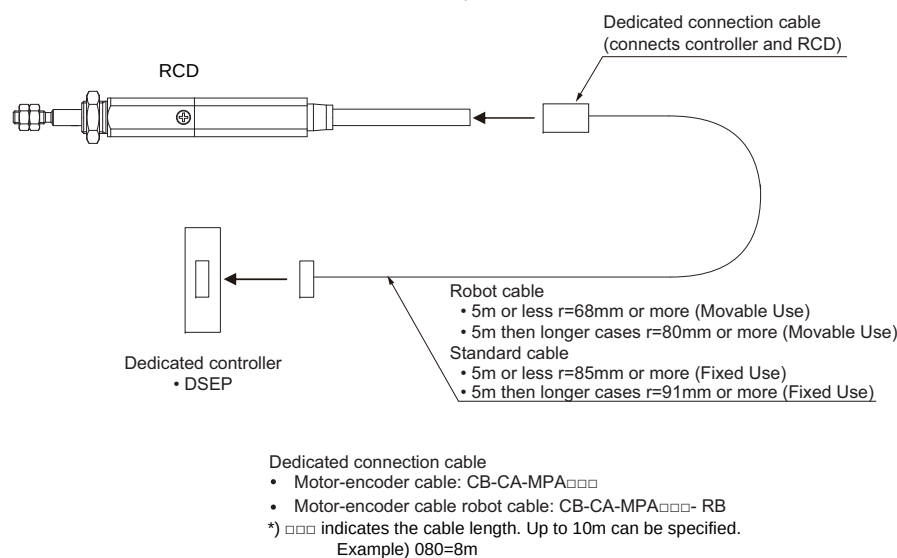

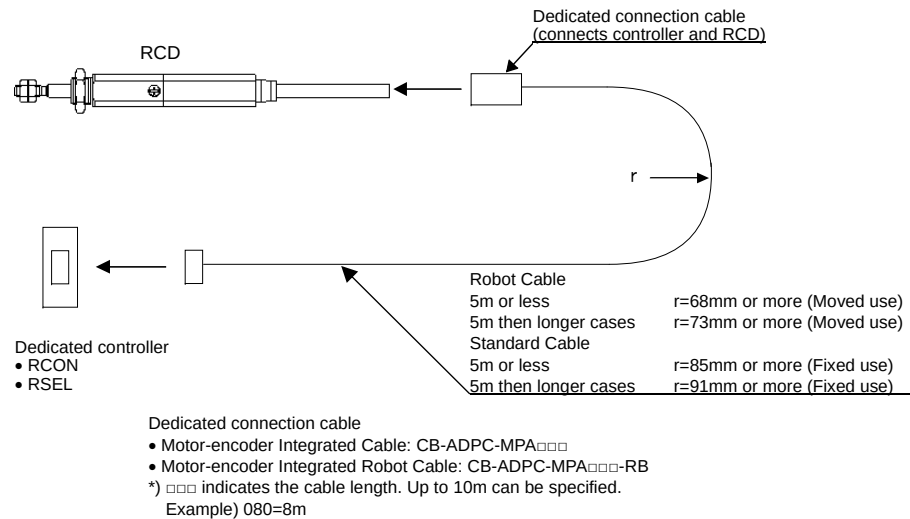


[Prohibited Items in the Cable Processing]


- Do not pull or bend forcibly the cable so as not to give any extra load or tension to the cable.
- Do not process the cable to extend or shortening by means of cutting out, combination or connecting with another cable.
- Do not bend the cable in the area from the connector tip inward to 150mm on both ends.
CB-CA-MPA□□□, CB-CAN-MPA□□□, CB-ADPC-MPA□□□
CB-CA-MPA□□□-RB, CB-CAN-MPA□□□-RB, CB-ADPC-MPA□□□-RB

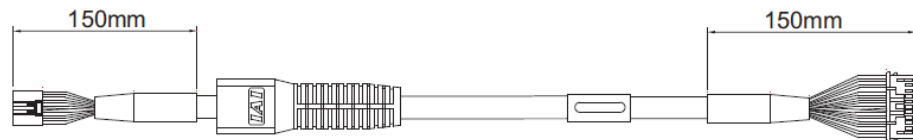


- Do not let the cable flex at a single point.

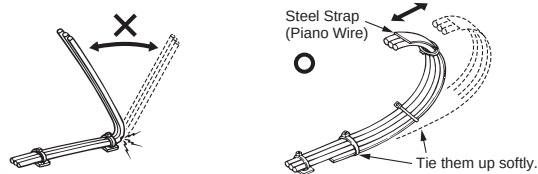


- Do not let the cable bend, kink or twist.

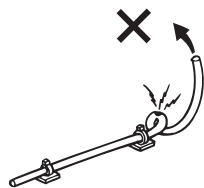


- Do not pull the cable with a strong force.

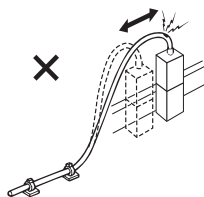


- Do not let the cable receive a turning force at a single point.

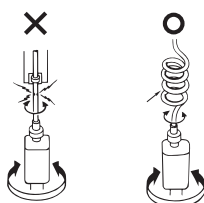


- Do not pinch, drop a heavy object onto or cut the cable.

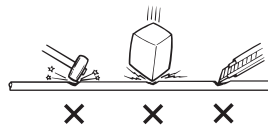

- When fixing the cable, provide a moderate slack and do not tension it too tight.

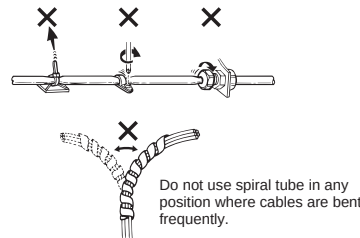


- Separate the I/O line, communication line and power line from each other.
Do not store in the same duct.

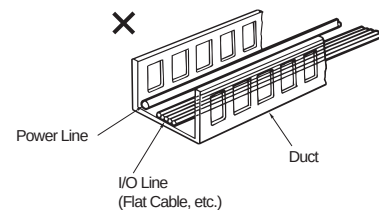

Follow the instructions below when using a cable carrier.

- If there is an indication to the cable for the space factor in a cable carrier, refer to the wiring instruction given by the supplier when storing the cable in the cable carrier.
- Avoid the cables to get twined or twisted in the cable carrier, and also to have the cables move freely and do not tie them up. (Avoid tension being applied when the cables are bent.)
Do not pile up cables. It may cause faster abrasion of the sheaths or cable breakage.

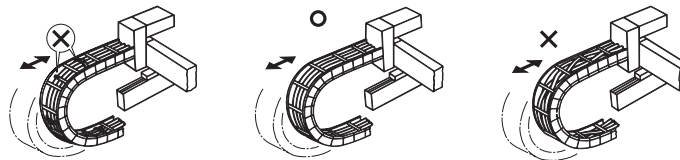

- ⚠ Note:
- When the cable is connected or disconnected, make sure to turn off the power to the controller. When the cable is connected or disconnected with the controller power turned ON, it might cause a malfunction of the actuator and result in a serious injury or damage to the machinery.
 - When the connector connection is not correct, it would be dangerous because of a malfunction of the actuator. Make sure to confirm that the connector is connected correctly.

IAI
Quality and Innovation

IAI Corporation

Head Office: 1210 Iharacho Shimizu-KU Shizuoka City Shizuoka 424-0114, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL +1-310-891-6015 FAX +1-310-891-0815
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173
TEL +1-847-908-1400 FAX +1-847-908-1399
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL +1-678-354-9470 FAX +1-678-354-9471
website: www.intelligentactuator.com

Technical Support available in Europe

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL +49(0)6196-88950 FAX +49(0)6196-889524
website: www.iai-automation.com

Technical Support available in Great Britain

LC Automation
control & safety

Duttons Way, Shadsworth Business Park, Blackburn, Lancashire, BB1 2QR, United Kingdom
TEL +44(0)1254-685900
website: www.lcautomation.com

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL +86-21-6448-4753 FAX +86-21-6448-3992
website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825 PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand
TEL +66-2-361-4458 FAX +66-2-361-4456
website: www.iai-robot.co.th