

DeviceNet

Operation Manual Twenty Six Edition

Programming Type Controller Section
RCS-C, E-Con, SCON-C Section



Overview	Chapter 1
XSEL-J/K/P/Q/JX/KX/PX/QX	Chapter 2
XSEL-R(A)/S(A)/R(A)X/S(A)X/R(A)XD/S(A)XD	Chapter 3
MSEL	Chapter 4
Tabletop Robot TTA	Chapter 5
Tabletop Robot TT	Chapter 6
RCS-C and E-Con	Chapter 7
SCON-C	Chapter 8
ASEL, PSEL, SSEL	Chapter 9
Troubleshooting	Chapter 10
Common Items and Others	Chapter 11
EDS File	Chapter 12

IAI Corporation

Please Read Before Use

Thank you for purchasing our product.

This instruction manual explains the handling methods, structure and maintenance of this product, providing the information you need in order to use the product safely.

Before using the product, be sure to read this manual and fully understand the contents explained herein to ensure safe use of the product.

Please download the user's manual from our website.

You can download it free of charge. User registration is required for the first time downloading.

URL : www.iai-robot.co.jp/data_dl/CAD_MANUAL/

When using the product, print out of the necessary portions of the relevant manual, or please display it on your computer, tablet terminal, etc. so that you can check it immediately.

After reading the instruction manual, keep it in a convenient place so that whoever is handling the product can refer to it quickly when necessary.

[Important]

- This instruction manual is an original document dedicated for this product.
- This product cannot be used in ways not shown in this instruction manual. IAI shall not be liable for any result whatsoever arising from the use of the product in any other way than what is noted in the manual.
- The information contained in this instruction manual is subject to change without notice for the purpose of product improvement.
- If any issues arise regarding the information contained in this instruction manual, contact our customer center or the nearest sales office.
- Use or reproduction of this instruction manual in full or in part without permission is prohibited.
- DeviceNet is a trademark of ODVA.
- The company names, names of products and trademarks of each company shown in the text are registered trademarks.

Notes on DeviceNet Products

Please note that the IAI products and Omron PLCs listed below cannot be connected via DeviceNet:

[IAI's products subject to this limitation]

Controller: All XSEL models

Tabletop actuator: TT series

Gateway unit: RCM-GW-DV

* Units shipped on or after July 30, 2008

[Omron's products subject to this limitation]

DeviceNet master unit C200HW-DRM21-V1

CVM1-DRM21-V1

* Units manufactured in or before September 2008

Units manufactured in or after October 2008 can be connected to the above-listed products by IAI.

[Cause]

Communication disharmony

[Action]

Use a PLC of other type, or use a DeviceNet master unit C200HW-DRM21-V1 or CVM1-DRM21-V1 manufactured in or after October 2008. If changing the PLC is difficult, contact the IAI sales office near you or our customer center "Eight."

⚠ Caution :The following functions are described in the separate operation manual.

	Series	Document Title	Control number	Model
1	CON system Controllers	DeviceNet Operation Manual	ME0256	ACON, DCON, PCON, SCON (excluding SCON-C)
2	MSEP	MSEP-C/LC Controller Operation Manual	ME0299	MSEP-C
3	MSCON	MSCON-C Controller Operation Manual	ME0306	MSCON-C
4	MCON	MCON-C/CG Controller Operation Manual	ME0341	MCON-C/CG
5	RCP6S Gateway	RCP6S Fieldbus Communication Operation Manual	ME0349	RCM-P6GW/P6GWG, RCM-P6PC/P6AC/P6DC
6	RCON	RCON System Operation Manual	ME0384	RCON-GW/GWG/LC/LCG
7	REC	REC System Operation Manual	ME0394	REC-GW
8	RSEL	RSEL System Operation Manual	ME0392	RSEL-G
9	RCON-NCN	RCON Gateway Unit Driver non-connection specification Operation Manual	ME0456	RCON-GWG-NCN

Table of Contents

Safety Guide.....	1
1. Overview	9
2. XSEL-J/K/P/Q/JX/KX/PX/QX	10
2.1 Models	10
(1) Compact type (J type).....	11
(2) General-purpose type (K type).....	11
(3) P/Q types.....	12
2.2 Interface Specifications.....	13
2.3 DeviceNet board	14
2.3.1 Name of Each Part.....	14
2.3.2 DIP Switch Settings.....	15
(1) Setting the node address (MAC ID).....	15
(2) Setting the baud rate.....	15
2.3.3 Monitor LED Indicators.....	16
2.4 Setting of I/O Parameters (Assignment of I/O Ports).....	17
2.4.1 Board Installation Position (Slot) and I/O Parameter Numbers	17
(1) J type.....	17
(2) K type	17
2.4.2 Factory-set Parameters.....	18
(1) Factory-set parameters for J/K types	18
(2) Factory-set parameters for P/Q types.....	19
(3) P/Q types.....	20
2.5 Parameter Setting Examples.....	21
2.5.1 Setting Example for J/K Types.....	21
(1) Setting example when only a DeviceNet board is installed	21
(2) Setting example when a DeviceNet board is used together with an expansion I/O board	23
2.5.2 Setting Example for P/Q Types.....	27
(1) Setting example when only a DeviceNet board is installed	27
(2) Setting example when a DeviceNet board is used together with a standard I/O board.....	30
2.6 I/O Port Numbers for XSEL	36
3. XSEL-R(A)/S(A)/R(A)X/S(A)X/R(A)XD/S(A)XD.....	38
3.1 Models	38
3.2 Interface Specifications	39
3.3 DeviceNet Interface	40
(1) Name of Each Part	40
(2) Monitor LED Indications	40
3.4 Parameter Settings	41
3.5 Setting Example	45
(1) Example for when using only DeviceNet	45
(2) Example for when using DeviceNet and I/O Board 1 together	48
(3) Example for when using DeviceNet and I/O Board 1 together	51
3.6 Standard I/O Ports of XSEL Controller	54
3.7 Troubleshooting	56

4. MSEL.....	58
4.1 Model.....	58
4.2 Interface Specifications.....	59
4.3 DeviceNet Interface.....	60
(1) Communication Connector.....	60
(2) Monitor LED indications.....	60
4.4 Parameter Settings.....	61
4.5 Setting Example.....	64
(1) Example for when using only DeviceNet (I/O2).....	64
(2) Example for when using DeviceNet and I/O Board 1 together.....	66
4.6 I/O Ports of the MSEL.....	68
4.7 Troubleshooting.....	71
5. Tabletop Robot TTA.....	73
5.1 Model.....	73
5.2 Interface Specifications.....	74
5.3 DeviceNet Interface.....	75
(1) Name of Each Part.....	75
(2) Monitor LED indications.....	75
5.4 Parameter Settings.....	76
5.5 Setting Example.....	80
(1) Example for when using only DeviceNet (I/O2).....	80
(2) Example for when using DeviceNet and I/O Board 1 together.....	82
(3) Example for when using DeviceNet (I/O2 and I/O3) together.....	84
5.6 I/O Ports of the TTA.....	86
5.7 Troubleshooting.....	89
6. Tabletop Robot TT.....	91
6.1 Model.....	91
6.2 Interface Specifications.....	92
6.3 DeviceNet board.....	93
6.3.1 Name of Each Part.....	93
6.3.2 DIP Switch Settings.....	94
(1) Setting the node address (MAC ID).....	94
(2) Setting the baud rate.....	94
6.3.3 Monitor LED Indicators.....	95
6.4 Setting of I/O Parameters (Assignment of I/O Ports).....	96
(1) Board Installation Position (Slot) and I/O Parameter Numbers.....	96
(2) Factory-set parameters for TT type.....	97
(3) Parameter setting example for tabletop robot TT.....	98
6.5 I/O Port Numbers for TT Robots.....	100
7. RCS-C and E-Con.....	102
7.1 Model.....	102
(1) RCS-C.....	102
(2) E-Con.....	102

7.2	Interface Specifications.....	103
7.3	DeviceNet Interface	104
7.3.1	Name of Each Part.....	104
7.3.2	DIP Switch Settings.....	105
(1)	Setting the node address (MAC ID).....	105
(2)	Setting the baud rate.....	105
7.3.3	Monitor LED Indicators.....	106
7.4	Input/Output (I/O).....	107
(1)	RCS-C signal assignments	107
(2)	E-Con signal assignments	108
8.	SCON-C	110
8.1	Model	110
8.2	Interface Specifications.....	111
8.3	DeviceNet Interface	112
8.3.1	Name of Each Part.....	112
8.3.2	DIP Switch Settings.....	113
(1)	Setting the node address (MAC ID).....	113
(2)	Setting the baud rate.....	113
8.3.3	Monitor LED Indicators.....	114
8.4	Assignment of I/O Signals	115
8.5	Assignment of DeviceNet Addresses	117
9.	ASEL, PSEL and SSEL.....	118
9.1	Models	118
9.1.1	ASEL, PSEL	118
9.1.2	SSEL	119
9.2	Interface Specifications.....	120
9.3	DeviceNet Interface	121
(1)	Name of Each Part.....	121
(2)	Status LED indications	122
(3)	DeviceNet connectors	123
9.4	Setting of I/O Parameters	124
(1)	Network type setting.....	124
(2)	Node address	124
(3)	I/O port assignments	124
(4)	Network error monitor	124
9.5	Assignment of I/O Port Numbers and DeviceNet Addresses	127
(1)	Basic example	127
(2)	Using in the positioner mode.....	128
10.	Troubleshooting.....	132
11.	Common Items and Others	133
11.1	Communication Cable	133
11.2	Connection of Communication Cable Connector	134
11.3	Power Supply Connection and Terminal Resistor	134
11.3.1	Power Supply Connection.....	134
11.3.2	Terminal Resistor	134
11.4	Useful Functions You Should Know When Adjusting an XSEL Controller.....	134
12.	EDS File	135
	Change History.....	136

Safety Guide

“Safety Guide” has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

No.	Operation Description	Description
1	Model Selection	<ul style="list-style-type: none"> ● This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications. <ol style="list-style-type: none"> 1) Medical equipment used to maintain, control or otherwise affect human life or physical health. 2) Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility) 3) Important safety parts of machinery (Safety device, etc.) ● Do not use the product outside the specifications. Failure to do so may considerably shorten the life of the product. ● Do not use it in any of the following environments. <ol style="list-style-type: none"> 1) Location where there is any inflammable gas, inflammable object or explosive 2) Place with potential exposure to radiation 3) Location with the ambient temperature or relative humidity exceeding the specification range 4) Location where radiant heat is added from direct sunlight or other large heat source 5) Location where condensation occurs due to abrupt temperature changes 6) Location where there is any corrosive gas (sulfuric acid or hydrochloric acid) 7) Location exposed to significant amount of dust, salt or iron powder 8) Location subject to direct vibration or impact ● For an actuator used in vertical orientation, select a model which is equipped with a brake. If selecting a model with no brake, the moving part may drop when the power is turned OFF and may cause an accident such as an injury or damage on the work piece.

No.	Operation Description	Description
2	Transportation	<ul style="list-style-type: none"> ● When carrying a heavy object, do the work with two or more persons or utilize equipment such as crane. ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● When in transportation, consider well about the positions to hold, weight and weight balance and pay special attention to the carried object so it would not get hit or dropped. ● Transport it using an appropriate transportation measure. The actuators available for transportation with a crane have eyebolts attached or there are tapped holes to attach bolts. Follow the instructions in the instruction manual for each model. ● Do not step or sit on the package. ● Do not put any heavy thing that can deform the package, on it. ● When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. ● When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment’s capability limit. ● Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. ● Do not get on the load that is hung on a crane. ● Do not leave a load hung up with a crane. ● Do not stand under the load that is hung up with a crane.
3	Storage and Preservation	<ul style="list-style-type: none"> ● The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation. ● Store the products with a consideration not to fall them over or drop due to an act of God such as earthquake.
4	Installation and Start	<p>(1) Installation of Robot Main Body and Controller, etc.</p> <ul style="list-style-type: none"> ● Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. Also, be equipped for a fall-over or drop due to an act of God such as earthquake. ● Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. ● When using the product in any of the places specified below, provide a sufficient shield. <ol style="list-style-type: none"> 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location with the mains or power lines passing nearby 4) Location where the product may come in contact with water, oil or chemical droplets

No.	Operation Description	Description
4	Installation and Start	<p>(2) Cable Wiring</p> <ul style="list-style-type: none"> ● Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool. ● Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error. ● Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error. ● When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction. ● Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product. ● Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire. <p>(3) Grounding</p> <ul style="list-style-type: none"> ● The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation. ● For the ground terminal (PE) on the AC power cable of the controller and the grounding plate in the control panel, make sure for grounding work. For security grounding, it is necessary to select an appropriate wire thickness suitable for the load. Perform wiring that satisfies the specifications (electrical equipment standards and criteria). For detail, follow the description in [an instruction manual of each controller or controller built-in actuator]. ● Conduct functional grounding on the FG terminal for a controller supplying 24V DC or a controller built-in type actuator. In order to minimize influence to mechanical operation given by electromagnetic interference (noise) to an electrical device or insulation failure, conduct grounding on a terminal or a conductor that is electrically stable. The reference impedance should be Type D (Former Class 3, ground resistance 100Ω or less).





No.	Operation Description	Description
4	Installation and Start	<p>(4) Safety Measures</p> <ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot’s movable range. When the robot under operation is touched, it may result in death or serious injury. ● Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. ● Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine suddenly and cause an injury or damage to the product. ● Take the safety measure not to start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. ● When the installation or adjustment operation is to be performed, give clear warnings such as “Under Operation; Do not turn ON the power!” etc. Sudden power input may cause an electric shock or injury. ● Take the measure so that the work part is not dropped in power failure or emergency stop. ● Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. ● Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity.
5	Teaching	<ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. ● When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. ● When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. ● Place a sign “Under Operation” at the position easy to see. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>

No.	Operation Description	Description
6	Trial Operation	<ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation. ● When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation. ● Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc. ● Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction.
7	Automatic Operation	<ul style="list-style-type: none"> ● Check before starting the automatic operation or rebooting after operation stop that there is nobody in the safety protection fence. ● Before starting automatic operation, make sure that all peripheral equipment is in an automatic-operation-ready state and there is no alarm indication. ● Make sure to operate automatic operation start from outside of the safety protection fence. ● In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product. ● When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure.

No.	Operation Description	Description
8	Maintenance and Inspection	<ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. ● When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. ● When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. ● When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. ● Place a sign “Under Operation” at the position easy to see. ● For the grease for the guide or ball screw, use appropriate grease according to the instruction manual for each model. ● Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. ● The slider or rod may get misaligned OFF the stop position if the servo is turned OFF. Be careful not to get injured or damaged due to an unnecessary operation. ● Pay attention not to lose the removed cover or screws, and make sure to put the product back to the original condition after maintenance and inspection works. <p>Use in incomplete condition may cause damage to the product or an injury.</p> <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>
9	Modification and Dismantle	<ul style="list-style-type: none"> ● Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion.
10	Disposal	<ul style="list-style-type: none"> ● When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. ● When removing the actuator for disposal, pay attention to drop of components when detaching screws. ● Do not put the product in a fire when disposing of it. The product may burst or generate toxic gases.
11	Other	<ul style="list-style-type: none"> ● Do not come close to the product or the harnesses if you are a person who requires a support of medical devices such as a pacemaker. Doing so may affect the performance of your medical device. ● See Overseas Specifications Compliance Manual to check whether complies if necessary. ● For the handling of actuators and controllers, follow the dedicated instruction manual of each unit to ensure the safety.

Alert Indication

The safety precautions are divided into “Danger”, “Warning”, “Caution” and “Notice” according to the warning level, as follows, and described in the instruction manual for each model.

Level	Degree of Danger and Damage	Symbol
Danger	This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury.	 Danger
Warning	This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury.	 Warning
Caution	This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage.	 Caution
Notice	This indicates lower possibility for the injury, but should be kept to use this product properly.	 Notice

1. Overview

DeviceNet, which is an open field network, is a multiple-bit type multi-vendor network that combines controls and data on a machine/line control level.


By connecting to DeviceNet, XSEL, TT, TTA, MSEL, ASEL, PSEL, SSEL, ACON, DCON, PCON, SCON, RCS-C and E-Con controllers (hereinafter referred to collectively as “controllers” or individually as a “controller”) can be used to configure a system based on minimal wiring.

ACON, DCON, PCON and SCON (excluding SCON-C) are not specified in this operation manual. Refer to the separate ME0256 DeviceNet.


- * For details of DeviceNet, refer to the operation manual for the programmable controller (hereinafter referred to as “PLC”) in which the master unit is installed. When reading this Operation Manual, also refer to the operation manual for the each controller you are using.

Take note that operations and uses not expressly permitted in this Operation Manual should be considered prohibited.

Example of system configuration

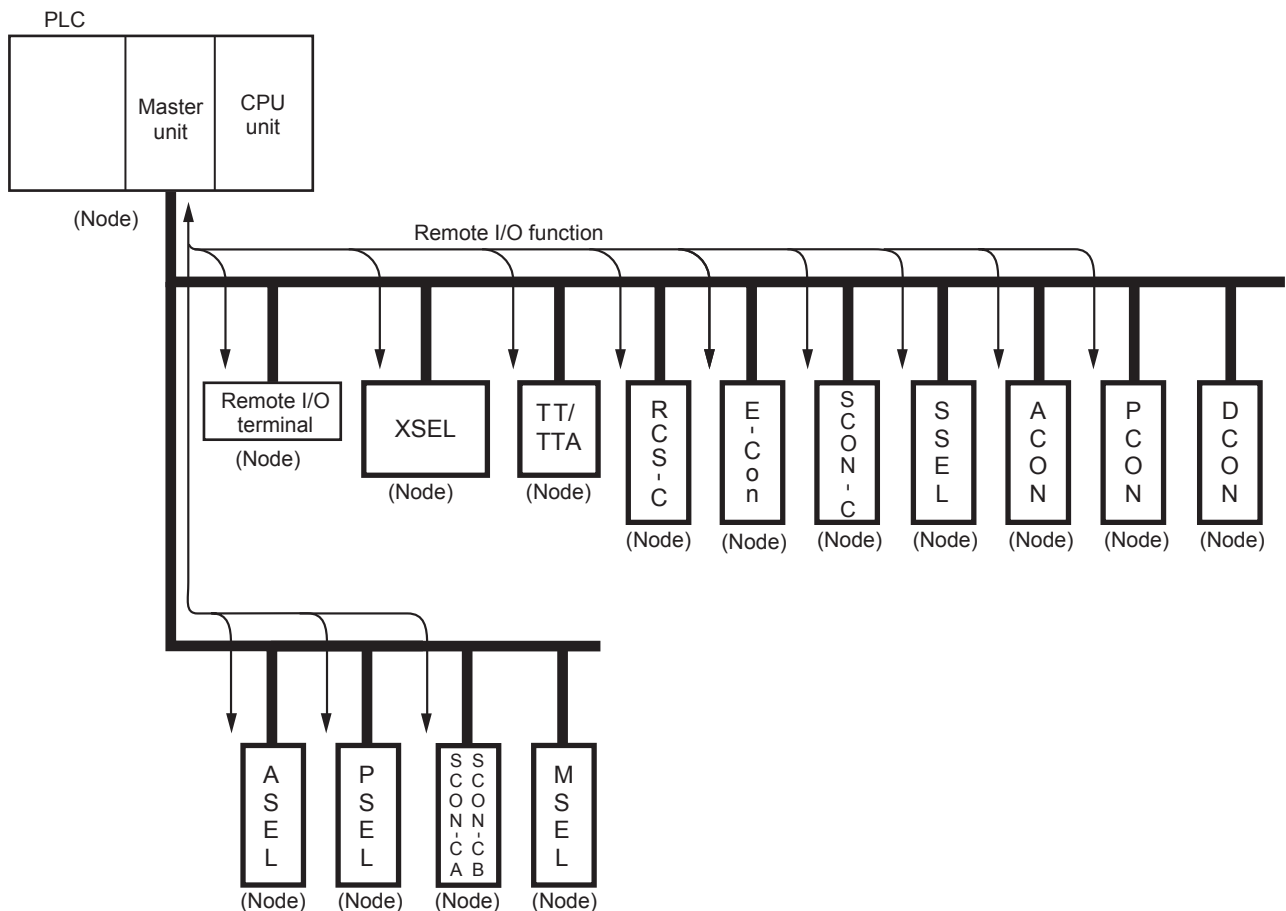

(1) Compact type (J type)

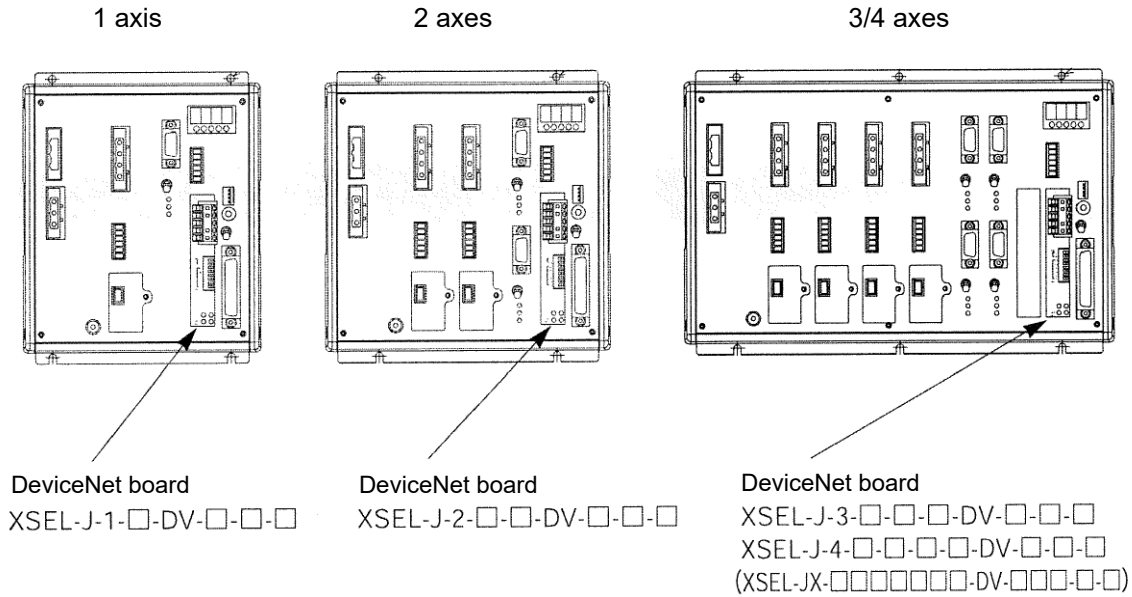

(Note) I/O boards cannot be installed in controllers of 1/2-axis specifications. Only one expansion I/O board ^(Note 1) can be installed in controllers of 3/4-axis specifications.

Fig. 2-1

(2) General-purpose type (K type)

- A DeviceNet board is installed in the standard slot (I/O1 --- the slot at the far left).
- Either an expansion I/O board ^(Note 1) or SIO board ^(Note 2) can be installed in each expansion slot.


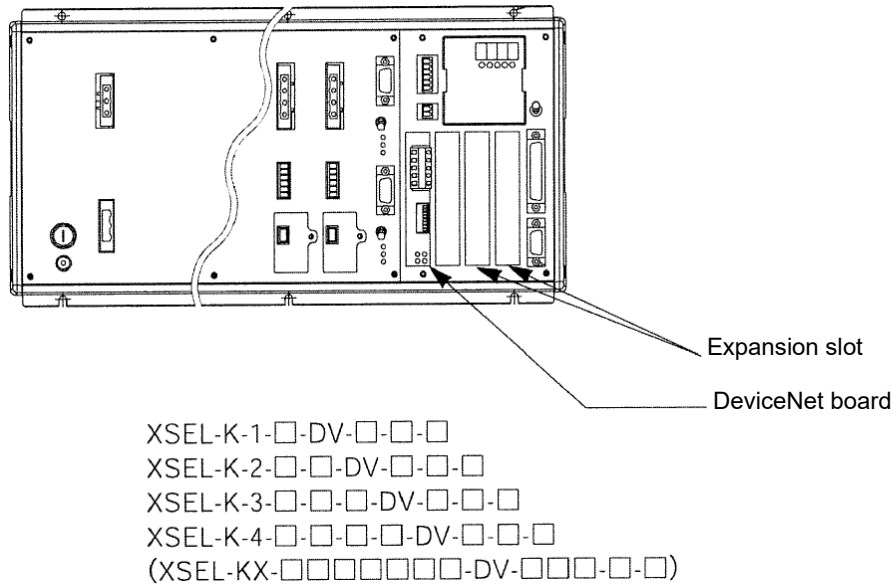


Fig. 2-2

(3) P/Q types

- A DeviceNet board is installed in the installation position of field network board.

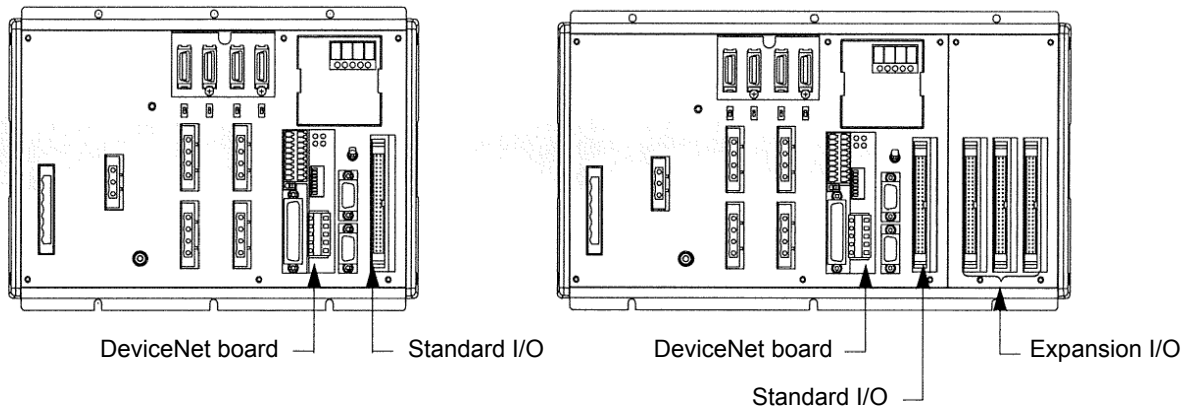

- XSEL-P-1-□-DV-□-□-□-3
- XSEL-P-2-□-□-□-□-□-□-3
- XSEL-P-3-□-□-□-□-□-□-□-3
- XSEL-P-4-□-□-□-□-□-□-□-□-3
- XSEL-P-5-□-□-□-□-□-□-□-□-□-3
- XSEL-P-6-□-□-□-□-□-□-□-□-□-□-3

- XSEL-Q-1-□-□-□-□-□-□-□-3
- XSEL-Q-2-□-□-□-□-□-□-□-□-3
- XSEL-Q-3-□-□-□-□-□-□-□-□-□-3
- XSEL-Q-4-□-□-□-□-□-□-□-□-□-□-3
- XSEL-Q-5-□-□-□-□-□-□-□-□-□-□-□-3
- XSEL-Q-6-□-□-□-□-□-□-□-□-□-□-□-□-3

Fig. 2-3

(Note 1) Expansion I/O board

- Model [1] IA-103-X-32 (32 input points/16 output points, NPN specification)
 [2] IA-103-X-32-P (32 input points/16 output points, PNP specification)
 [3] IA-103-X-16 (16 input points/32 output points, NPN specification)
 [4] IA-103-X-16-P (16 input points/32 output points, PNP specification)
 [5] IA-IO-3204-NP (48 input points/48 output points, NPN specification)
 [6] IA-IO-3204-PN (48 input points/48 output points, PNP specification)
 [7] IA-IO-3205-NP (48 input points/48 output points, NPN specification)
 [8] IA-IO-3205-PN (48 input points/48 output points, PNP specification)
 (Note) [5] and [6] are used for K/P/Q types only, while [7] and [8] are used for J type only.

For details of each specification, refer to the “Operation Manual for XSEL Controller.”

(Note 2) SIO board

- Model [1] IA-105-X-MW-A (RS232C)
 [2] IA-105-X-MW-B (RS422)
 [3] IA-105-X-MW-C (RS485)

With all boards, one board supports two channels.

2.2 Interface Specifications

The DeviceNet interface specifications are summarized below.


Item	Specification			
Communication protocol	A certified DeviceNet 2.0 interface module is used (certification pending).			
	Group 2 only server			
	Network-powered insulation node			
Communication specification	Master-slave connection	Bit strobe		
		Polling		
		Cyclic		
Baud rate	500 k / 250 k / 125 kbps (selectable by DIP switches)			
Communication cable length	Baud rate	Maximum network length	Maximum branch line length	Total branch line length
	500 kbps	100 m	6 m	39 m
	250 kbps	250 m		78 m
	125 kbps	500 m		156 m
Note) When a large-size DeviceNet cable is used.				
Communication power supply	24 VDC (supplied from DeviceNet)			
Consumption current of communication power supply	60 mA			
Number of occupied nodes	1 node			
Connector	MSTBA2.5/5-G-5.08 ABGY AU (*1) by Phoenix Contact			

(*1) The cable-end connector is a standard accessory.
 Phoenix Contact : SMSTB2.5/5-ST-5.08 AU (XSEL-J/K/JX/KX)
 MSTB2.5/5-ST-5.08 ABGY AU (XSEL-P/Q/PX/QX)

2.3 DeviceNet board

2.3.1 Name of Each Part

2. XSEL-J/K/P/Q/JX/KX/PX/QX

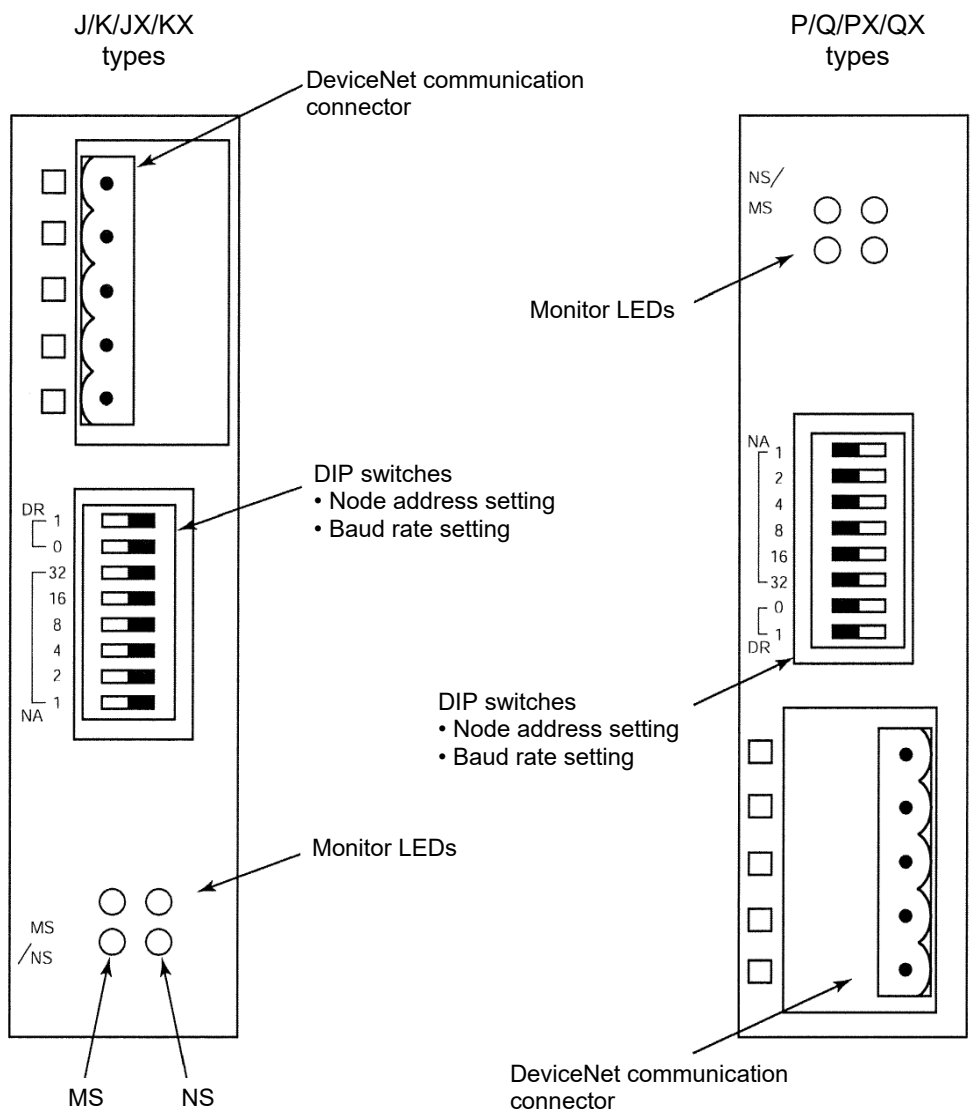

2.3.2 DIP Switch Settings

The DIP switches are used to set the following items:

- (1) Node address
- (2) Baud rate

(Note) Turn off the controller power before setting the DIP switches.

(1) Setting the node address (MAC ID)

Set the node address (MAC ID) using a hexadecimal value according to the table below.

1: ON 0: OFF

Node address (MAC ID)	DIP switches					
	NA32	NA16	NA8	NA4	NA2	NA1
0	0	0	0	0	0	0
1	0	0	0	0	0	1
2	0	0	0	0	1	0
3	0	0	0	0	1	1
⋮	⋮	⋮	⋮	⋮	⋮	⋮
60	1	1	1	1	0	0
61	1	1	1	1	0	1
62	1	1	1	1	1	0
63	1	1	1	1	1	1

(Note) The node address corresponds to the remote I/O address in the PLC. This DeviceNet card supports a maximum of 256 input points and 256 output points. Accordingly, the node address corresponding to the I/O points used will be occupied in the PLC. Take note that all node addresses must be unique. (For details, refer to the operation manual for the PLC.)

(2) Setting the baud rate

Set the baud rate according to the table below.

1: ON 0: OFF

Baud rate	DIP switches	
	DR1	DR0
125 kbps	0	0
250 kbps	0	1
500 kbps	1	0
Setting prohibited	1	1

2.3.3 Monitor LED Indicators

The two LEDs, MS and NS, provided on the front panel of the board are used to check the board (node) condition and network condition. (The remaining two LEDs are not currently used.)

The LEDs illuminate in two colors (red and green), and you can monitor the conditions listed in the table below based on the illumination status and color of each LED.

MS (Module Status) LED: Condition of the board (node) itself

NS (Network Status) LED: Condition of the network

LED	Color	Illumination status	Description (meaning)
MS	Green	Steady light	The board is operating normally.
		Blinking	A hardware error occurred. The board must be replaced.
	Red	Steady light	A minor error occurred, such as a DIP switch setting error or configuration error. The error can be reset by, for example, reconfiguring the applicable setting.
		Blinking	
-	Off	Power is not supplied.	
NS	Green	Steady light	Network connection has been established and the board is communicating normally.
		Blinking	The board is online, but network connection is not yet established. Communication is stopped. (The network is normal.)
	Red	Steady light	Node address duplication or bus-off state was detected. Communication is not possible.
		Blinking	A communication error occurred (communication time-out occurred).
	-	Off	<ul style="list-style-type: none"> • The board is not online. • DeviceNet power is not supplied.

Self test is performed when the power is turned on.

During the test, the monitor LEDs cycle in the following sequence:

- [1] NS turns off.
- [2] MS illuminates in steady green (approx. 0.25 second).
- [3] MS illuminates in steady red (approx. 0.25 second).
- [4] MS illuminates in steady green.
- [5] NS illuminates in steady green (approx. 0.25 second).
- [6] NS illuminates in steady red (approx. 0.25 second).
- [7] NS turns off.

When the self test is finished and the board starts communicating normally, both the MS and NS LEDs change to steady green.

2.4 Setting of I/O Parameters (Assignment of I/O Ports)


Set the XSEL I/O ports to be used in DeviceNet communication. XSEL controllers support various I/O port settings through use of I/O parameters. (For details, refer to the “Operation Manual for XSEL Controller.”)

A representative method to set I/O parameters is explained below.

The basic steps are to set I/O Parameter No. 1, “I/O port assignment type” to “Fixed assignment” and then set I/O port addresses for each I/O slot.


2.4.1 Board Installation Position (Slot) and I/O Parameter Numbers

(1) J type

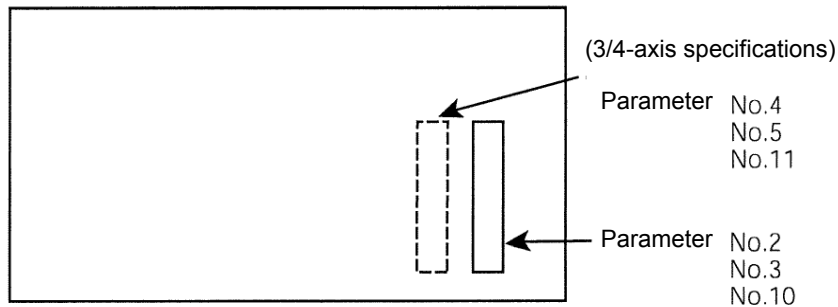

(Note) On J-type controllers, Parameter Nos. 6 to 9 are all set to “-1,” while Parameter Nos. 12 and 13 are set to “0,” because expansion I/O slots 2 and 3 are not available. On controllers of 1/2-axis specifications, similarly Nos. 4 and 5 are both set to “-1,” while No. 11 is set to “0.”

(2) K type

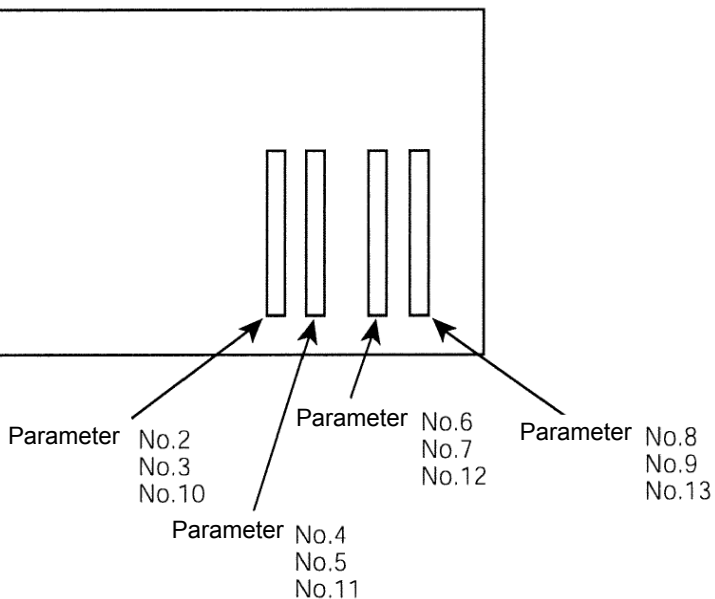

2.4.2 Factory-set Parameters

(1) Factory-set parameters for J/K types

No.	Parameter name	Input range	Setting	Remarks
1	I/O port assignment type	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	-1 ~ 299	000	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	0 ~ 5	2	0: Do not monitor
11	Error monitor for expansion I/O1 (I/O2)	0 ~ 5	0	1: Monitor
12	Error monitor for standard I/O2 (I/O3)	0 ~ 5	0	2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later)
13	Error monitor for expansion I/O3 (I/O4)	0 ~ 5	0	3: Monitor (Monitor 24-V I/O power supply errors only) (Main application version 0.55 or later)
14	Number of ports used for remote input via network I/F card	0 ~ 256	64	Multiple of 8
15	Number of ports used for remote output via network I/F card	0 ~ 256	64	Multiple of 8
122	Network attribute 3	0H ~ FFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-J/K: Main application of Ver.1.16 or later XSEL-JX/KX: Main application of Ver.0.51 or later)


I/O1 through I/O4 indicate slot numbers.

(2) Factory-set parameters for P/Q types

No.	Parameter name	Input range	Setting	Remarks
1	I/O port assignment type	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	0 ~ 5	0	0: Do not monitor
11	Error monitor for expansion I/O1 (I/O2)	0 ~ 5	0	1: Monitor
12	Error monitor for standard I/O2 (I/O3)	0 ~ 5	0	2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later)
13	Error monitor for expansion I/O3 (I/O4)	0 ~ 5	0	3: Monitor (Monitor 24-V I/O power supply errors only) (Main application version 0.55 or later)
14	Number of ports used for remote input via network I/F card	0 ~ 256	64	Multiple of 8
15	Number of ports used for remote output via network I/F card	0 ~ 256	64	Multiple of 8
16	Input port start number for network I/F module based on fixed assignment	-1 ~ 299	0	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
17	Output port start number for network I/F module based on fixed assignment	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
18	Error monitor for network I/F module	0 ~ 5	1	0: Do not monitor 1: Monitor * Some exceptions apply.
121	Network attribute 2	0H ~ FFFFFFFFH	Optional	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later)
122	Network attribute 3	0H ~ FFFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later)


I/O1 through I/O4 indicate slot numbers.

(3) P/Q types

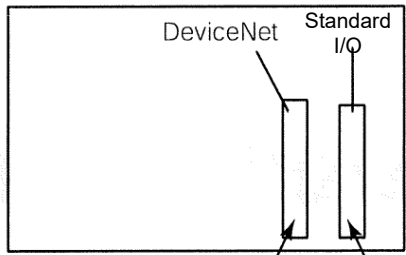

Parameter No.16
 No.17
 No.18

Parameter No.2
 No.3
 No.10

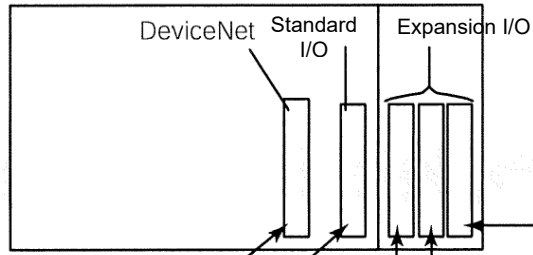

Parameter No.16
 No.17
 No.18

Parameter No.2
 No.3
 No.10

Parameter No.4
 No.5
 No.11

Parameter No.6
 No.7
 No.11

Parameter No.8
 No.9
 No.13

2.5 Parameter Setting Examples


2.5.1 Setting Example for J/K Types

(1) Setting example when only a DeviceNet board is installed

Assign 32 input points and 16 output points to the DeviceNet board from the first standard I/O port, as you would for the standard XSEL I/O board (50-pin connector), and do not use any other I/O port.

* In this case, the I/O power connector need not be connected to 24 VDC (K type).

XSEL (J type)

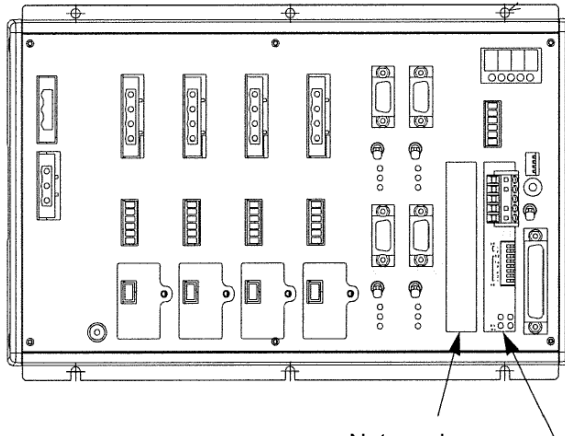


Not used.

(Not available on controllers of 1/2-axis specifications.)

Input port Nos. 000 to 031
Output port Nos. 300 to 315

XSEL (K type)

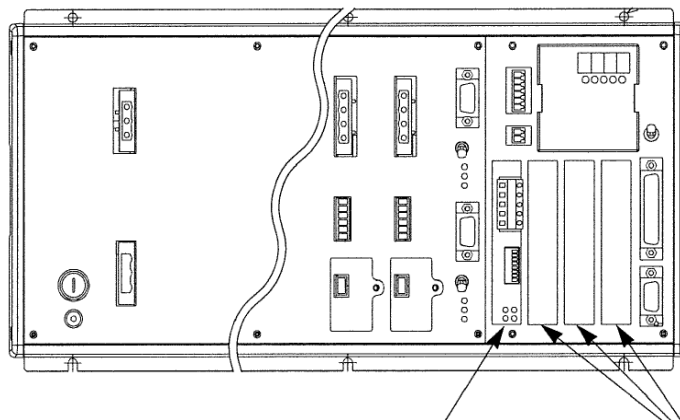

Input port Nos. 000 to 031
Output port Nos. 300 to 315

Not used.

(This example assumes the installed condition shown in Fig. 2-1 and Fig. 2-2 under 2.1.)

I/O parameters for XSEL J/K types


No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
1	I/O port assignment type	0	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	000	-1 ~ 299	000	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	300	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	2	0 ~ 5	2	0: Do not monitor
11	Error monitor for expansion I/O1 (I/O2)	0	0 ~ 5	0	1: Monitor
12	Error monitor for standard I/O2 (I/O3)	0	0 ~ 5	0	2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later)
13	Error monitor for expansion I/O3 (I/O4)	0	0 ~ 5	0	3: Monitor (Monitor 24-V I/O power supply errors only) (Main application version 0.55 or later)
14	Number of ports used for remote input via network I/F card	64	0 ~ 256	32	Multiple of 8
15	Number of ports used for remote output via network I/F card	64	0 ~ 256	16	Multiple of 8
122	Network attribute 3	14H	0H ~ FFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-J/K: Main application of Ver.1.16 or later XSEL-JX/KX: Main application of Ver.0.51 or later)

I/O1 through I/O4 indicate slot numbers.

(2) Setting example when a DeviceNet board is used together with an expansion I/O board

- a. Assign 256 input points and 256 output points to the DeviceNet board from the first standard I/O port, and assign the subsequent I/O port numbers to the expansion I/O board IA-103-X-32 (32 input points, 16 output points).

The same settings apply to J-type controllers.

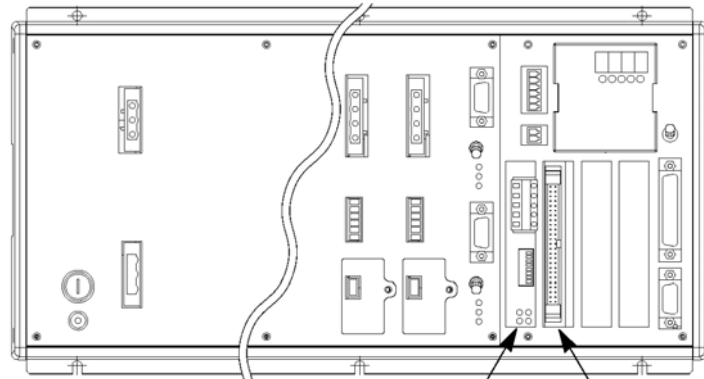

Input port Nos. 256 to 287
Output port Nos. 556 to 571


Input port Nos. 000 to 255
Output port Nos. 300 to 555

I/O parameters for XSEL J/K types

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
1	I/O port assignment type	0	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	000	-1 ~ 299	000	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	300	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 ~ 299	256	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 300 ~ 599	556	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	2	0 ~ 5	2	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later) 3: Monitor (Monitor 24-V I/O power supply errors only)
11	Error monitor for expansion I/O1 (I/O2)	1	0 ~ 5	1	
12	Error monitor for standard I/O2 (I/O3)	0	0 ~ 5	0	
13	Error monitor for expansion I/O3 (I/O4)	0	0 ~ 5	0	
14	Number of ports used for remote input via network I/F card	64	0 ~ 256	256	Multiple of 16
15	Number of ports used for remote output via network I/F card	64	0 ~ 256	256	Multiple of 16
122	Network attribute 3	14H	0H ~ FFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-J/K: Main application of Ver.1.16 or later XSEL-JX/KX: Main application of Ver.0.51 or later)

I/O1 through I/O4 indicate slot numbers.

- b. Use the expansion I/O board IA-103-X-32 (32 input points, 16 output points) for standard I/O ports, and assign 256 input points and 256 output points to the DeviceNet board as general-purpose I/O ports. The same settings apply to J-type controllers.

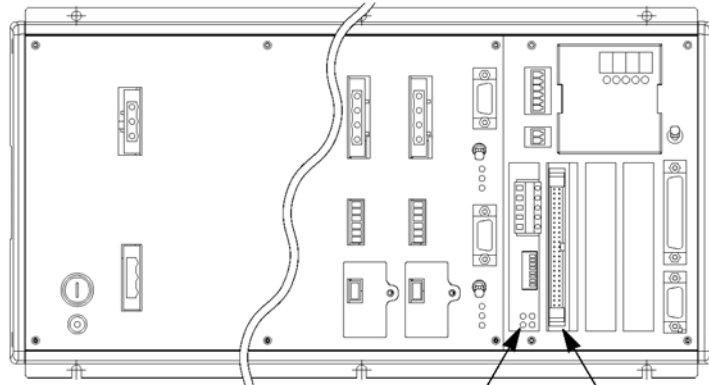

Input port Nos. 000 to 031
Output port Nos. 300 to 315

Input port Nos. 032 to 287
Output port Nos. 316 to 571

I/O parameters for XSEL J/K types


No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
1	I/O port assignment type	0	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	000	-1 ~ 299	032	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	300	-1 300 ~ 599	316	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 ~ 299	000	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	2	0 ~ 5	2	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later) 3: Monitor (Monitor 24-V I/O power supply errors only)
11	Error monitor for expansion I/O1 (I/O2)	1	0 ~ 5	1	
12	Error monitor for standard I/O2 (I/O3)	0	0 ~ 5	0	
13	Error monitor for expansion I/O3 (I/O4)	0	0 ~ 5	0	
14	Number of ports used for remote input via network I/F card	64	0 ~ 256	256	Multiple of 8
15	Number of ports used for remote output via network I/F card	64	0 ~ 256	256	Multiple of 8
122	Network attribute 3	14H	0H ~ FFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-J/K: Main application of Ver.1.16 or later XSEL-JX/KX: Main application of Ver.0.51 or later)

I/O1 through I/O4 indicate slot numbers.

2.5.2 Setting Example for P/Q Types

(1) Setting example when only a DeviceNet board is installed

Assign 32 input points and 16 output points to the DeviceNet board from the first standard I/O port, as you would for the standard XSEL I/O board (50-pin connector), and do not use any other I/O port.

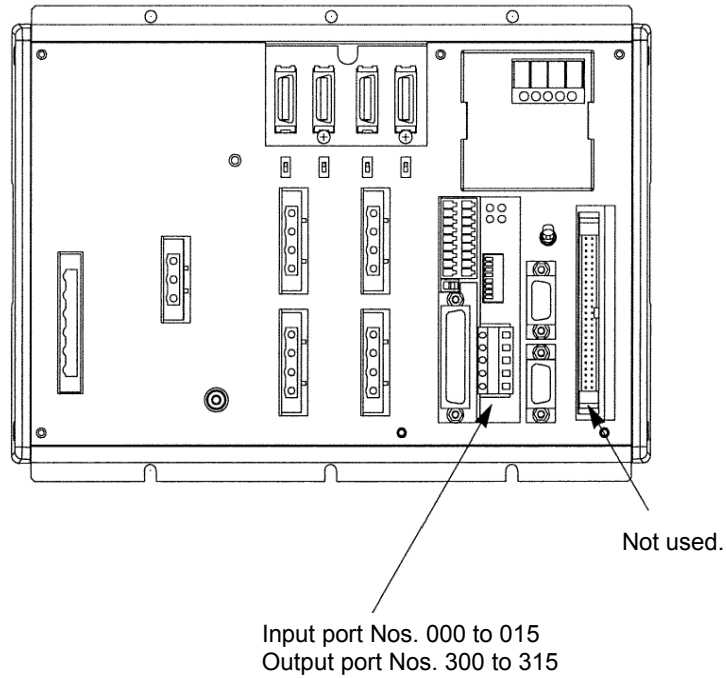


I/O parameters for XSEL P/Q types

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
1	I/O port assignment type	0	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	0	0 ~ 5	0	0: Do not monitor
11	Error monitor for expansion I/O1 (I/O2)	0	0 ~ 5	0	1: Monitor
12	Error monitor for standard I/O2 (I/O3)	0	0 ~ 5	0	2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later)
13	Error monitor for expansion I/O3 (I/O4)	0	0 ~ 5	0	3: Monitor (Monitor 24-V I/O power supply errors only) (Main application version 0.55 or later)
14	Number of ports used for remote input via network I/F card	64	0 ~ 256	32	Multiple of 8
15	Number of ports used for remote output via network I/F card	64	0 ~ 256	16	Multiple of 8
16	Input port start number for network I/F module based on fixed assignment	0	-1 ~ 299	0	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
17	Output port start number for network I/F module based on fixed assignment	300	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
18	Error monitor for network I/F module	1	0 ~ 5	1	0: Do not monitor 1: Monitor * Some exceptions apply.

I/O1 through I/O4 indicate slot numbers.

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
121	Network attribute 2	C80000H	0H ~ FFFFFFFFH	Optional	<p>Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later) (Example) The initial value C80000H is bit 16 to 27= C8H = 200 (in 100ms unit) 200 × 100ms = 20sec It waits for communication to be established for 20sec at the maximum from the startup.</p>
122	Network attribute 3	1CH	0H ~ FFFFFFFFH	Optional	<p>Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later)</p>

- (2) Setting example when a DeviceNet board is used together with a standard I/O board
 - a. Assign 256 input points and 256 output points to the DeviceNet board from the first standard I/O port, and assign the subsequent I/O port numbers to the standard I/O board.

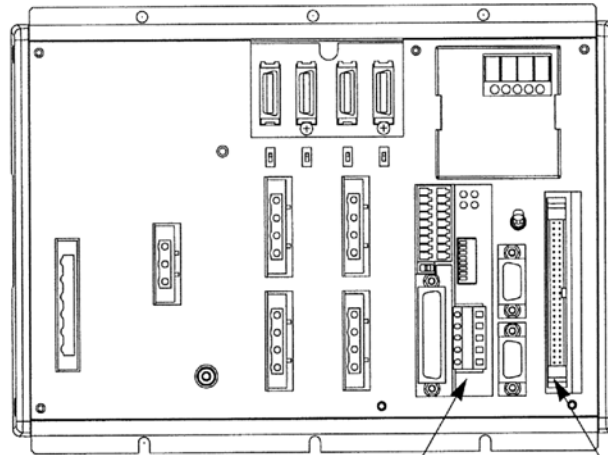

Input port Nos. 256 to 287
Output port Nos. 556 to 571

Input port Nos. 000 to 255
Output port Nos. 300 to 555


I/O parameters for XSEL P/Q types

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
1	I/O port assignment type	0	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	-1	-1 ~ 299	256	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	-1	-1 300 ~ 599	256	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	0	0 ~ 5	1	0: Do not monitor
11	Error monitor for expansion I/O1 (I/O2)	0	0 ~ 5	0	1: Monitor
12	Error monitor for standard I/O2 (I/O3)	0	0 ~ 5	0	2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later)
13	Error monitor for expansion I/O3 (I/O4)	0	0 ~ 5	0	3: Monitor (Monitor 24-V I/O power supply errors only)
14	Number of ports used for remote input via network I/F card	64	0 ~ 256	256	Multiple of 16
15	Number of ports used for remote output via network I/F card	64	0 ~ 256	256	Multiple of 16
16	Input port start number for network I/F module based on fixed assignment	0	-1 ~ 299	0	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
17	Output port start number for network I/F module based on fixed assignment	300	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
18	Error monitor for network I/F module	1	0 ~ 5	1	0: Do not monitor 1: Monitor * Some exceptions apply.

I/O1 through I/O4 indicate slot numbers.

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
121	Network attribute 2	C80000H	0H ~ FFFFFFFFH	Optional	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later) (Example) The initial value C80000H is bit 16 to 27= C8H = 200 (in 100ms unit) 200 × 100ms = 20sec It waits for communication to be established for 20sec at the maximum from the startup.
122	Network attribute 3	1CH	0H ~ FFFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later)

- b. Use the standard I/O board IA-103-X-32 (32 input points, 16 output points) for standard I/O ports, and assign 256 input points and 256 output points to the DeviceNet board as general-purpose I/O ports. The same settings apply to J-type controllers.

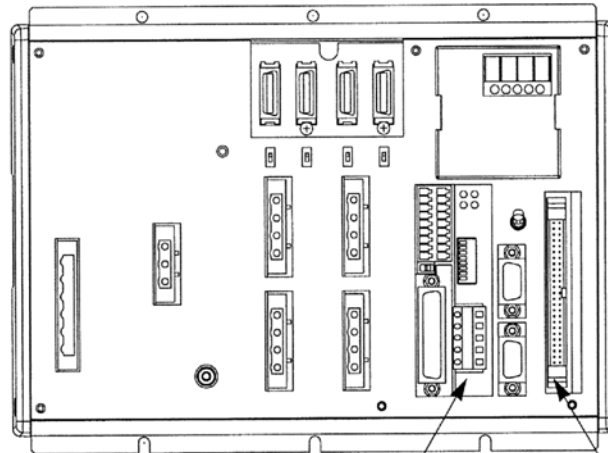

Input port Nos. 000 to 031
Output port Nos. 300 to 315

Input port Nos. 032 to 287
Output port Nos. 316 to 571

I/O parameters for XSEL P/Q types

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
1	I/O port assignment type	0	0 ~ 20	0	0: Fixed assignment 1: Automatic assignment (Priority: Assigned from slot 1) * Ports are assigned consecutively only for slots where a board is physically installed, starting from slot 1, for safety reasons.
2	Input port start number for standard I/O based on fixed assignment (I/O1)	-1	-1 ~ 299	000	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O based on fixed assignment (I/O1)	-1	-1 300 ~ 599	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.) (Slot immediately next to the standard I/O slot)
5	Output port start number for expansion I/O1 based on fixed assignment (I/O2)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O2 based on fixed assignment (I/O3)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Input port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 ~ 299	-1	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
9	Output port start number for expansion I/O3 based on fixed assignment (I/O4)	-1	-1 300 ~ 599	-1	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
10	Error monitor for standard I/O (I/O1)	0	0 ~ 5	1	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) (Main application version 0.55 or later) 3: Monitor (Monitor 24-V I/O power supply errors only) (Main application version 0.55 or later)
11	Error monitor for expansion I/O1 (I/O2)	0	0 ~ 5	0	
12	Error monitor for standard I/O2 (I/O3)	0	0 ~ 5	0	
13	Error monitor for expansion I/O3 (I/O4)	0	0 ~ 5	0	
14	Number of ports used for remote input via network I/F card	64	0 ~ 256	256	Multiple of 8
15	Number of ports used for remote output via network I/F card	64	0 ~ 256	256	Multiple of 8
16	Input port start number for network I/F module based on fixed assignment	0	-1 ~ 299	032	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
17	Output port start number for network I/F module based on fixed assignment	300	-1 300 ~ 599	316	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
18	Error monitor for network I/F module	1	0 ~ 5	1	0: Do not monitor 1: Monitor * Some exceptions apply.

I/O1 through I/O4 indicate slot numbers.

No.	Parameter name	Default value (reference)	Input range	Setting	Remarks
121	Network attribute 2	C80000H	0H ~ FFFFFFFFH	Optional	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later) (Example) The initial value C80000H is bit 16 to 27= C8H = 200 (in 100ms unit) 200 × 100ms = 20sec It waits for communication to be established for 20sec at the maximum from the startup.
122	Network attribute 3	1CH	0H ~ FFFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (XSEL-P/Q: Main application of Ver.1.28 or later XSEL-PX/QX: Main application of Ver.0.60 or later)

2.6 I/O Port Numbers for XSEL

The table below lists the standard I/O port numbers for XSEL controllers.

On XSEL controllers, port numbers and function assignments can be changed using I/O parameters. (For details, refer to the "Operation Manual for XSEL Controller.")

	Port No.	Function		Port No.	Function
Input	000	Program start	Output	300	Alarm output
	001	General-purpose input		301	Ready output
	002	General-purpose input		302	Emergency stop output
	003	General-purpose input		303	General-purpose output
	004	General-purpose input		304	General-purpose output
	005	General-purpose input		305	General-purpose output
	006	General-purpose input		306	General-purpose output
	007	Program specification (PRG No. 1)		307	General-purpose output
	008	Program specification (PRG No. 2)		308	General-purpose output
	009	Program specification (PRG No. 4)		309	General-purpose output
	010	Program specification (PRG No. 8)		310	General-purpose output
	011	Program specification (PRG No. 10)		311	General-purpose output
	012	Program specification (PRG No. 20)		312	General-purpose output
	013	Program specification (PRG No. 40)		313	General-purpose output
	014	General-purpose input		314	General-purpose output
015	General-purpose input	315	General-purpose output		
⋮	⋮		⋮	⋮	


(Note) The numbers of I/O ports are as follows:

Inputs: 000 to 299 (maximum of 300 points)
 Outputs: 300 to 599 (maximum of 300 points)

If DeviceNet and expansion I/O boards are used together, pay attention to the numbers of I/O ports.

Reference

Port numbers are assigned to bit addresses in the PLC in units of 16 points, starting from the channel corresponding to the node address set with the DIP switches.
 (This does not apply if a configurator is used to assign port numbers.)

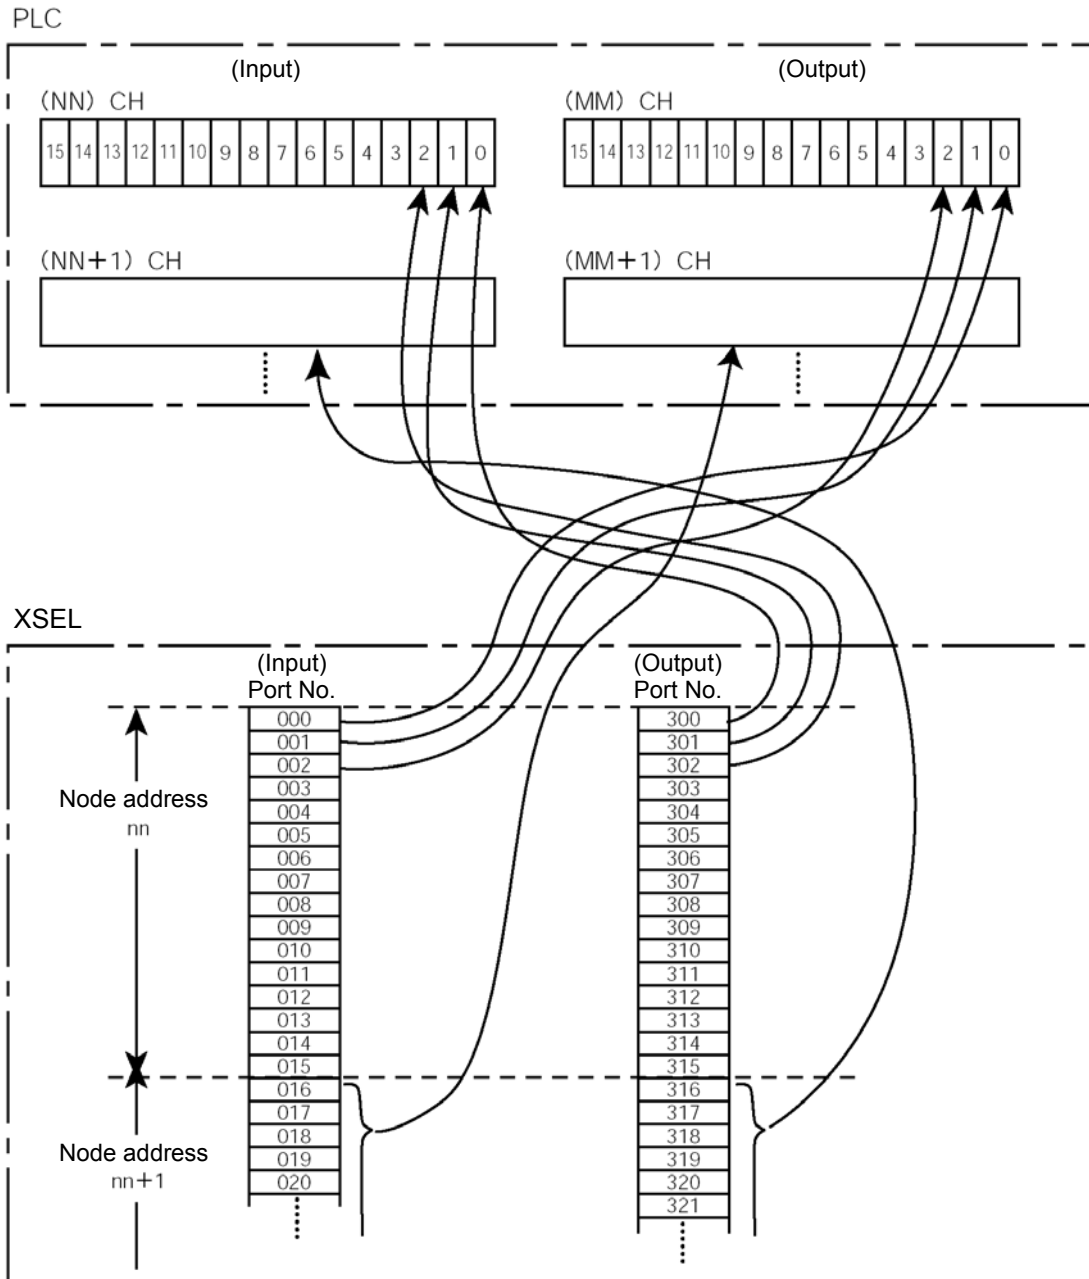

(NN) CH and (MM) CH as indicated above represent PLC channel addresses corresponding to node address nn.

As for nn, nn+1, nn+2, etc., bit addresses corresponding to each node address are occupied in accordance with the numbers of I/O points used. Accordingly, exercise caution to prevent node address duplication.

3. XSEL-R(A)/S(A)/R(A)X/S(A)X/R(A)XD/S(A)XD

The I/O data is handled as either bit data or word data. The I/O data is mapped to input and output ports.

3.1 Models


The model code of each of XSEL-R(A)/S(A)/R(A)X/S(A)X/R(A)XD/S(A)XD applicable for DeviceNet is as shown below.

XSEL-R/S Series

- XSEL-R-□-DV-□
- XSEL-S-□-DV-□
- XSEL-RX-□-DV-□
- XSEL-SX-□-DV-□
- XSEL-RXD-□-DV-□
- XSEL-SXD-□-DV-□

XSEL-RA/SA Series

- XSEL-RA-□-DV-□
- XSEL-SA-□-DV-□
- XSEL-RAX-□-DV-□
- XSEL-SAX-□-DV-□
- XSEL-RAXD-□-DV-□
- XSEL-SAXD-□-DV-□

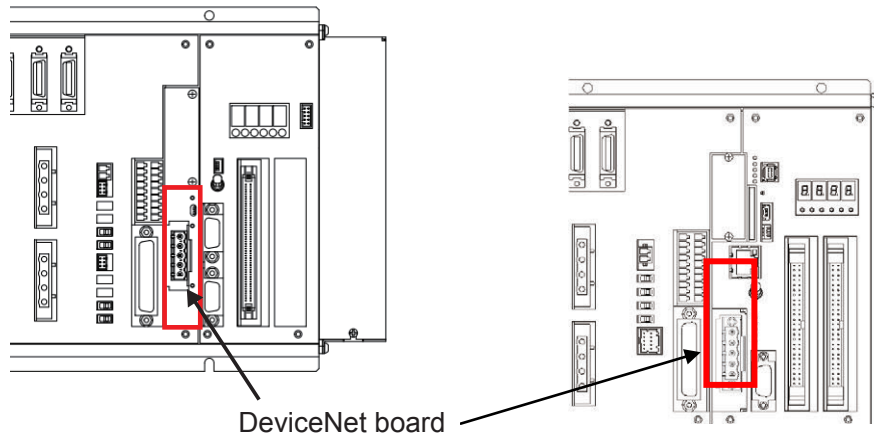


3.2 Interface Specifications

Item	Specification			
Communication protocol	DeviceNet 2.0			
	Group 2 only server			
	Network-powered insulation node			
Communication specification	Master-slave connection		Bit strobe	
			Polling	
			Cyclic	
Baud rate	500 k / 250 k / 125 kbps			
Communication cable length	Baud rate	Maximum network length	Maximum branch line length	Total branch line length
	500 kbps	100m	6 m	39 m
	250 kbps	250 m		78 m
	125 kbps	500 m		156 m
Note) When a large-size DeviceNet cable is used.				
Communication power supply	24 VDC (supplied from DeviceNet)			
Consumption current of communication power supply	60 mA			
Number of occupied nodes	1 node			
Connector	MSTB2.5/5-GF-5.08 AU (*1) by Phoenix Contact			

(*1) The cable-end connector is a standard accessory.
SMSTB2.5/5-STF-5.08 AU by Phoenix Contact

3.3 DeviceNet Interface

(1) Name of Each Part

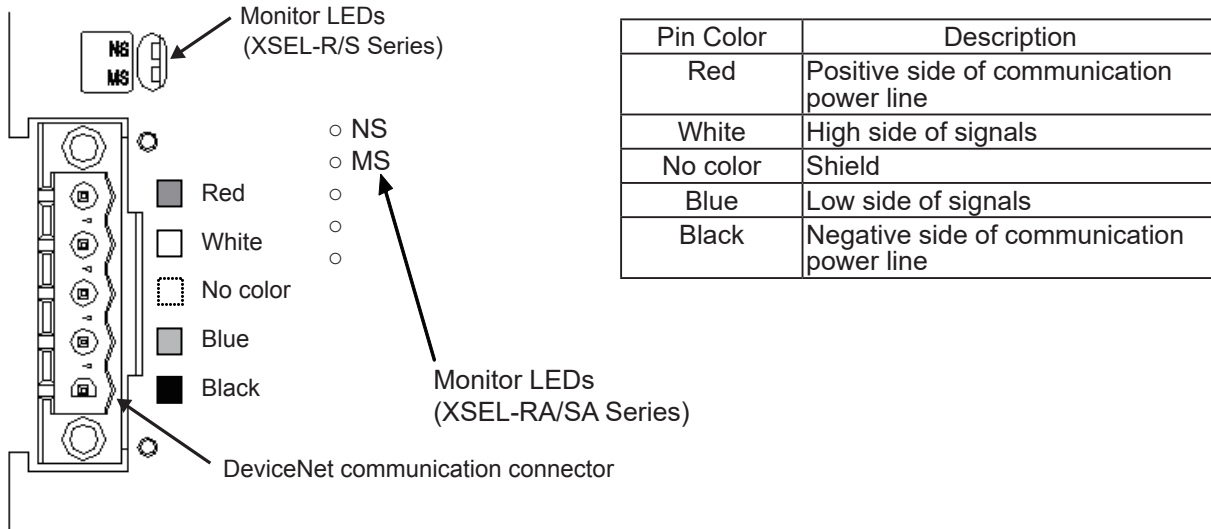

(2) Monitor LED Indicators

The board operation status and network condition are obtained with the two LEDs located in the front of the communication board.


○: Illuminating ×: OFF ☆: Flashing

LED	Color	Indication Status	Indication Description (Detailed Explanation)
NS (Network Status)	Green	○	• Online, Communication in normal condition
		☆	• Online, No connection established
	Orange	○	• Critical link error
		☆	• Connection timeout
	Green/ Orange	Blink by turn	• Self-testing
—	×	• Offline / No power supply confirmed	
MS (Module Status)	Green	○	• Normal Operation
		☆	• Configuration setting not established or not complete, test run required
	Orange	○	• An error that cannot be recovered
		☆	• An error that can be recovered
	Green/ Orange	Blink by turn	• Self-testing
—	×	No power supply confirmed	

3.4 Parameter Settings

Set to the I/O parameters in the controller by using a teaching tool.
 Place the controller's AUTO/MANU switch in the MANU position.
 The teaching tool version applicable for this controller check the instruction manual of each teaching tool.

* The figure shown below is XSEL-R/S series. The setting should be the same for XSEL-RA/SA series.
 (Except for I/O Parameter No. 225)

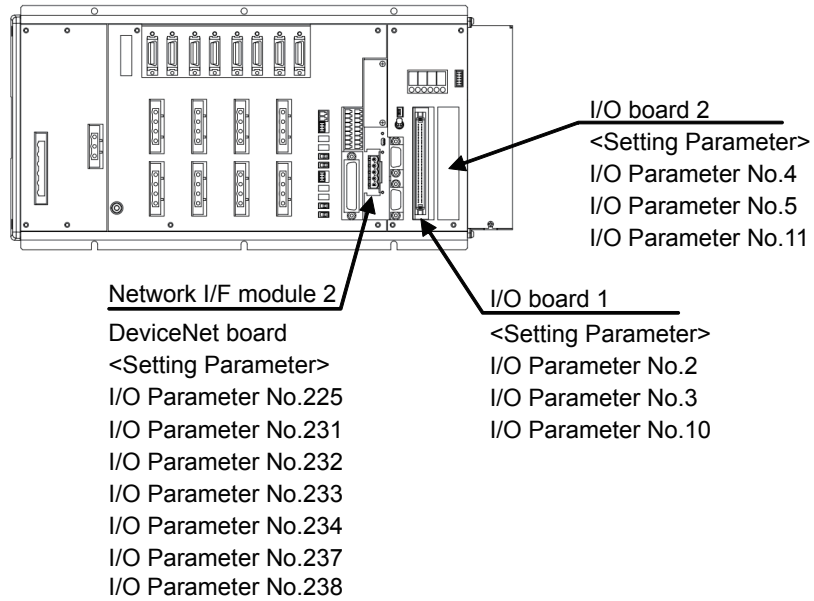

[1] Network Setting Check

• For XSEL-R/S Series

Confirm that the 2nd digit of I/O Parameter No.225 Network I/F Module Control setting is showing “2” (DeviceNet).

No.	Parameter name	Default	Input Range	Unit	Remarks
225	Network I/F Module Control	2*	20H to 2FH	—	bits 4-7 (2nd digit):Network I/F Module 2 types 0:Not Mounted 1:CC-Link 2:DeviceNet 3:PROFIBUS

• For XSEL-RA/SA Series

Confirm that the 3rd digit of I/O Parameter No.225 Network I/F Module Control setting is showing “2” (DeviceNet).

No.	Parameter name	Default	Input Range	Unit	Remarks
225	Network I/F Module Control	2**	200H to 2FFH	—	Bits 0-7 (1st and 2nd digit):Network I/F Module 1type 0:Not Mounted 6:EtherCAT® 7:EtherNet/IP bits 8-15 (3rd and 4th digit): Network I/F Module 2type 0:Not Mounted 1:CC-Link 2:DeviceNet 3:PROFIBUS-DP 4 to C:System Reservation D:CC-Link IE Field (XSEL-RA/SA only)

[2] I/O Port Assignment Classification Setting

I/O Parameter No.1 Set I/O Port Assignment Classification

No.	Parameter name	Default	Input Range	Unit	Remarks
1	I/O Port Assignment Classification Setting (Note)	1	0 to 1	—	0: Fixed Allocation 1: Automatic Allocation • Reference 1 Priority of I/O Port Assignment when automatically assigned Port Number (No.0 to 299/No.300 to 599) 1) Network I/F Module1 2) I/O slot 1 (I/O1) Mounting board 3) I/O slot 2 (I/O2) Mounting board * I/O slot 1 (I/O1) Assigned for the continuously mounted range from mounting board • Reference 2 Priority of extension I/O ports at automatic assignment Port Number (No.1000 to 3999/No.4000 to 6999) 1) Network I/F Module 2 2) Expansion I/O unit 3) IA Net * 2) and 3) are for XSEL-R/S Series only

Note If the automatic assignment is selected, the input port is assigned to an extension input port area (No.1000 to 3999). The output port is assigned to an extension output port area (No.4000 to 6999). If the fixed assignment is selected, the user will manually assign the input standard input port area (No.0 to 299) or extension input port area (No.1000 to 3999). For the output port, the user will manually assign the output standard output port area (No.300 to 599) or the extension output port area (No.4000 to 6999).

[3] DeviceNet Board Use Setting

Set "1" (Monitoring: use DeviceNet board) to I/O Parameter No.235.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
235	Network I/F Module 2 Error Monitoring	1	0 to 5	—	0:No Monitoring (Not to monitor condition of link to PLC (master)) 1:Monitoring

[4] Node address setting

Set the node address to I/O Parameter No. 237

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
237	Network I/F Module 2 Node Address	0	0 to 63	—	DeviceNet node address range: 0 to 63

Note If a number out of the settable range is selected, "D75: Fieldbus Parameter Error" will occur.

[5] Baud Rate Setting

Set the communication speed in I/O Parameter No. 238. Match the setting to the communication speed of the master unit.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
238	Network I/F Module 2 Baud Rate	0	0 to 2	—	0: 125Kbps 1: 250Kbps 2: 500Kbps

Note If a number out of the settable range is selected, "D75: Fieldbus Parameter Error" will occur.

[6] Number of I/O Port Setting

Set the number of ports to be used for I/O Parameters No. 231 to 232.

Note Set a number that is a multiple of 8.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
231	No. of Network I/F Module 2 Remote Input Ports	0	0 to 256	—	8 port unit
232	No. of Network I/F Module 2 Remote Output Ports	0	0 to 256	—	8 port unit

[7] I/O Port Top Number Setting

Set the top port number of the port range used in I/O Parameters No. 233 to 234.

Note The port numbers assigned here are the starting input and output port numbers. The max I/O port will be determined by adding parameters 233 and 234 to parameters 231 and 232 respectively.

The values entered into these parameters must be evenly divisible by 8 (EX: 300).

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
233	(Extension) ^(Note 1) Input Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 to 299 1000 to 3999	—	0+ (Multiples of 8) or 1000+ (Multiples of 8) [Ineffective when -1 is selected]
234	(Extension) ^(Note 1) Output Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 300 to 599 4000 to 6999	—	300+ (Multiples of 8) or 4000+ (Multiples of 8) [Ineffective when -1 is selected]

Note 1: The commands with “Extended” in the parameter name should only be applied for XSEL-R/S.

[8] Time Setting to Wait for DeviceNet Communication Establishment

To I/O Parameter No.121, set the maximum allowable time to establish DeviceNet communication at the start. Change this setting when XSEL starts faster than the master unit, which results in a generation of D5D or A6B.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
121	Network attribute 2	C80000H	0 to FFFFFFFFH	100ms	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (Example) The initial value C80000H is bit 16 to 27 = C8H = 200 (in 100ms unit) 200×100ms = 20sec Check in 20sec after startup

[9] Data Retaining Setting at DeviceNet Communication Error

Set in I/O Parameter No. 120 and 121 whether to clear the input port data to 0 or to retain it at a communication error.


No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
120	Network attribute 1	640001H	0 to FFFFFFFFH	—	Bits 28 to 31: Input port data selected at Network I/F Module 1 link error 0: Input port data clear 1: Input port data retained
121	Network attribute 2	C80000H	0 to FFFFFFFFH	—	Bits 8 to 11: Input port data selected at Network I/F Module 2 link error 0: Input port data clear 1: Input port data retained

3.5 Setting Example

(1) Example for when using only DeviceNet

It is how to establish the setting when using DeviceNet to 16 points of each input and output from the top of the standard I/O ports, and no other I/O port (for I/O board, etc.) is to be used.

* The figure shown below is XSEL-R/S series. The setting should be the same for XSEL-RA/SA series. (Except for I/O Parameter No. 225)

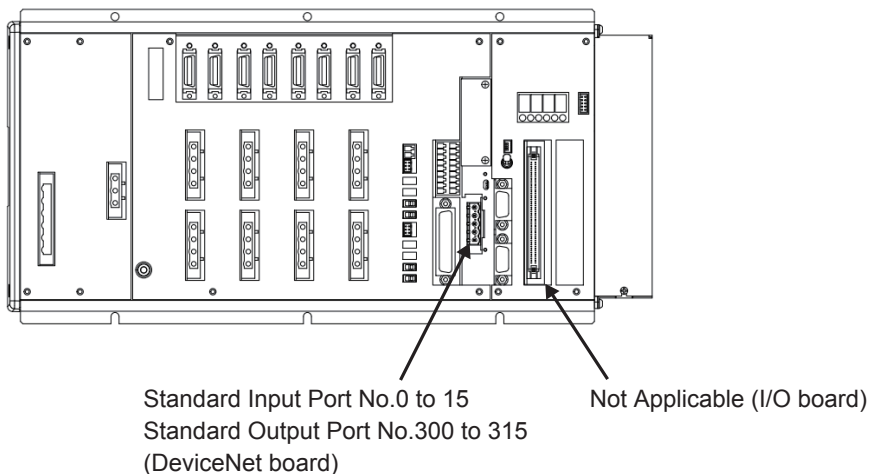

• I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
1	I/O Port Allocation Type	1	0 to 1	0	0:Fixed Allocation 1:Automatic Allocation • Reference 1 Priority of I/O Port Assignment when automatically assigned Port Number (No.0 to 299/No.300 to 599) 1) Network I/F Module 1 2) I/O slot 1 (I/O1) Mounting board 3) I/O slot 2 (I/O2) Mounting board * I/O slot 1 (I/O1) Assigned for the continuously mounted range from mounting board • Reference 2 Priority of extension I/O ports at automatic assignment Port Number (No.1000 to 3999/No.4000 to 6999) 1) Network I/F Module 2 2) Expansion I/O unit 3) IA Net * 2) and 3) are for XSEL-R/S Series only
2	Standard I/O Fix-Allocated Input Port Start No.	0	-1 to 299	-1	0+ (Multiples of 8) [Ineffective when -1 is selected]
3	Standard I/O Fix-Allocated Output Port Start No.	300	-1 300 to 599	-1	300+ (Multiples of 8) [Ineffective when -1 is selected]

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
10	Standard I/O Error Monitoring (I/O1)	1	0 to 5	0	0:No Monitoring (Not to use I/O board) 1:Monitoring 2:Monitoring (Not to monitor 24V I/O power related error) 3:Monitoring (To monitor only 24V I/O power related error)
14	No. of Network I/F Module 1 Remote Input Ports	0	0 to 256	0	8 port unit
15	No. of Network I/F Module 1 Remote Output Ports	0	0 to 256	0	8 port unit
16	Input Port Start No. in Network I/F Module Fix-Allocated	-1	-1 to 299	-1	0+ (Multiples of 8) [Ineffective when -1 is selected]
17	Output Port Start No. in Network I/F Module Fix-Allocated	-1	-1 300 to 599	-1	300+ (Multiples of 8) [Ineffective when -1 is selected]
18	Network I/F Module 1 Error Monitoring	1	0 to 5	0	0:No Monitoring (Not to use Network I/F Module 1) 1:Monitoring
120	Network attribute 1	640001H	0H to FFFFFFFFH	Optional	Bits 28 to 31: Input port data selected at Network I/F Module 1 link error (0: Clear, 1: Hold)
121	Network attribute 2	C80000H	0H to FFFFFFFFH	Optional	Bits 8 to 11: Input port data selected at Network I/F Module 2 link error (0: Clear, 1: Hold) Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)
225	Network I/F Module Control Those stated in brackets () are for XSEL-RA/SA Series	2* (2**)	20H to 2FH (200H to 2FFH)	2* (2**)	Bits 0-7 (1st and 2nd digit): Network I/F Module 1type 0:Not Mounted 6:EtherCAT® 7:EtherNet/IP bits 8-15 (3rd and 4th digit): Network I/F Module 2type 0:Not Mounted 1:CC-Link 2:DeviceNet 3:PROFIBUS-DP 4 to C:System Reservation D:CC-Link IE Field (XSEL-RA/SA only)
231	No. of Network I/F Module 2 Remote Input Ports	0	0 to 256	16	8 port unit
232	No. of Network I/F Module 2 Remote Output Ports	0	0 to 256	16	8 port unit
233	(Extension) ^(Note 1) Input Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 to 299 1000 to 3999	0	0+ (Multiples of 8) or 1000+ (Multiples of 8) [Ineffective when -1 is selected]
234	(Extension) ^(Note 1) Output Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 300 to 599 4000 to 6999	300	300+ (Multiples of 8) or 4000+ (Multiples of 8) [Ineffective when -1 is selected]
235	Network I/F Module 2 Error Monitoring	1	0 to 5	1	0:No Monitoring (Not to monitor condition of link to PLC (master)) 1:Monitoring


237	Network I/F Module 2 Node Address	0	0 to 63	Optional	DeviceNet node address range: 0 to 63
238	Network I/F Module 2 Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps

Note 1: The commands with "Extended" in the parameter name should only be applied for XSEL-R/S.

(2) Example for when using DeviceNet and I/O Board 1 together

It is how to establish the setting when using DeviceNet to 256 points of each input and output from the top of the extended I/O ports and assigning the I/O board (48 points for each input and output) to the standard I/O ports.

* The figure shown below is XSEL-R/S series. The setting should be the same for XSEL-RA/SA series. (Except for I/O Parameter No. 225)

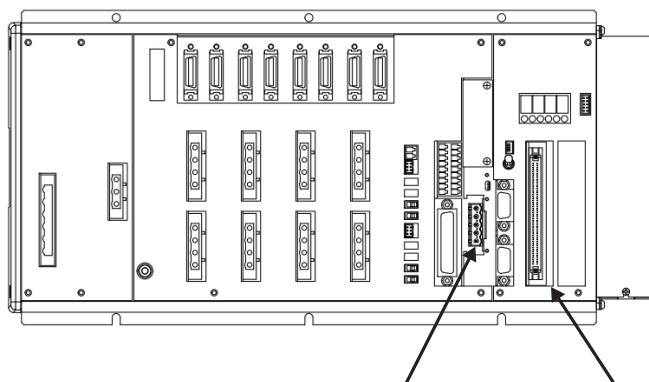

Extended Input Ports No.1000 to 1255
 Extended Output Ports No.4000 to 4255
 (DeviceNet board)

Standard Input Port No.0 to 47
 Standard Output Port No.300 to 347
 (I/O board)

• I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
1	I/O Port Allocation Type	1	0 to 1	0	0:Fixed Allocation 1:Automatic Allocation • Reference 1 Priority of I/O Port Assignment when automatically assigned Port Number (No.0 to 299/No.300 to 599) 1) Network I/F Module 1 2) I/O slot 1 (I/O1) Mounting board 3) I/O slot 2 (I/O2) Mounting board * I/O slot 1 (I/O1) Assigned for the continuously mounted range from mounting board • Reference 2 Priority of extension I/O ports at automatic assignment Port Number (No.1000 to 3999/No.4000 to 6999) 1) Network I/F Module 2 2) Expansion I/O unit 3) IA Net * 2) and 3) are for XSEL-R/S Series only
2	Standard I/O Fix-Allocated Input Port Start No.	0	-1 to 299	0	0+ (Multiples of 8) [Ineffective when -1 is selected]
3	Standard I/O Fix-Allocated Output Port Start No.	300	-1 300 to 599	300	300+ (Multiples of 8) [Ineffective when -1 is selected]

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
10	Standard I/O Error Monitoring (I/O1)	1	0 to 5	1	0:No Monitoring (Not to use I/O board) 1:Monitoring 2:Monitoring (Not to monitor 24V I/O power related error) 3:Monitoring (To monitor only 24V I/O power related error)
14	No. of Network I/F Module 1 Remote Input Ports	0	0 to 256	0	8 port unit
15	No. of Network I/F Module 1 Remote Output Ports	0	0 to 256	0	8 port unit
16	Input Port Start No. in Network I/F Module Fix-Allocated	-1	-1 to 299	-1	0+ (Multiples of 8) [Ineffective when -1 is selected]
17	Output Port Start No. in Network I/F Module Fix-Allocated	-1	-1 300 to 599	-1	300+ (Multiples of 8) [Ineffective when -1 is selected]
18	Network I/F Module 1 Error Monitoring	1	0 to 5	0	0:No Monitoring (Not to use Network I/F Module 1) 1:Monitoring
120	Network attribute 1	640001H	0H to FFFFFFFFH	Optional	Bits 28 to 31: Input port data selected at Network I/F Module 1 link error (0: Clear, 1: Hold)
121	Network attribute 2	C80000H	0H to FFFFFFFFH	Optional	Bits 8 to 11: Input port data selected at Network I/F Module 2 link error (0: Clear, 1: Hold) Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)
225	Network I/F Module Control Those stated in brackets () are for XSEL-RA/SA Series	2* (2**)	20H to 2FH (200H to 2FFH)	2* (2**)	Bits 0-7 (1st and 2nd digit): Network I/F Module 1type 0:Not Mounted 6:EtherCAT® 7:EtherNet/IP bits 8-15 (3rd and 4th digit): Network I/F Module 2type 0:Not Mounted 1:CC-Link 2:DeviceNet 3:PROFIBUS-DP 4 to C:System Reservation D:CC-Link IE Field (XSEL-RA/SA only)
231	No. of Network I/F Module 2 Remote Input Ports	0	0 to 256	256	8 port unit
232	No. of Network I/F Module 2 Remote Output Ports	0	0 to 256	256	8 port unit
233	(Extension) ^(Note 1) Input Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 to 299 1000 to 3999	1000	0+ (Multiples of 8) or 1000+ (Multiples of 8) [Ineffective when -1 is selected]
234	(Extension) ^(Note 1) Output Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 300 to 599 4000 to 6999	4000	300+ (Multiples of 8) or 4000+ (Multiples of 8) [Ineffective when -1 is selected]
235	Network I/F Module 2 Error Monitoring	1	0 to 5	1	0:No Monitoring (Not to monitor condition of link to PLC (master)) 1:Monitoring


237	Network I/F Module 2 Node Address	0	0 to 63	Optional	DeviceNet node address range: 0 to 63
238	Network I/F Module 2 Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps

Note 1: The commands with "Extended" in the parameter name should only be applied for XSEL-R/S.

(3) Example for when using DeviceNet and I/O Board 1 together

It is how to establish the setting when using DeviceNet to 192 points of each input and output from the top of the extended I/O ports and assigning the I/O board (48 points for each input and output) to the standard I/O ports.

* The figure shown below is XSEL-R/S series. The setting should be the same for XSEL-RA/SA series. (Except for I/O Parameter No. 225)

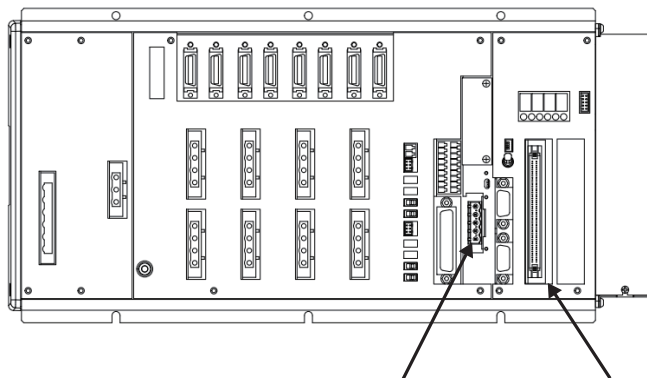

Standard Input Ports No.0 to 191
Standard Output Ports No.300 to 491
(DeviceNet board)

Standard Input Port No.192 to 239
Standard Output Port No.492 to 539
(I/O board)

• I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
1	I/O Port Allocation Type	1	0 to 1	0	0:Fixed Allocation 1:Automatic Allocation • Reference 1 Priority of I/O Port Assignment when automatically assigned Port Number (No.0 to 299/No.300 to 599) 1) Network I/F Module 1 2) I/O slot 1 (I/O1) Mounting board 3) I/O slot 2 (I/O2) Mounting board * I/O slot 1 (I/O1) Assigned for the continuously mounted range from mounting board • Reference 2 Priority of extension I/O ports at automatic assignment Port Number (No.1000 to 3999/No.4000 to 6999) 1) Network I/F Module 2 2) Expansion I/O unit 3) IA Net * 2) and 3) are for XSEL-R/S Series only
2	Standard I/O Fix-Allocated Input Port Start No.	0	-1 to 299	192	0+ (Multiples of 8) [Ineffective when -1 is selected]
3	Standard I/O Fix-Allocated Output Port Start No.	300	-1 300 to 599	492	300+ (Multiples of 8) [Ineffective when -1 is selected]

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
10	Standard I/O Error Monitoring (I/O1)	1	0 to 5	1	0:No Monitoring (Not to use I/O board) 1:Monitoring 2:Monitoring (Not to monitor 24V I/O power related error) 3:Monitoring (To monitor only 24V I/O power related error)
14	No. of Network I/F Module 1 Remote Input Ports	0	0 to 256	0	8 port unit
15	No. of Network I/F Module 1 Remote Output Ports	0	0 to 256	0	8 port unit
16	Input Port Start No. in Network I/F Module Fix-Allocated	-1	-1 to 299	-1	0+ (Multiples of 8) [Ineffective when -1 is selected]
17	Output Port Start No. in Network I/F Module Fix-Allocated	-1	-1 300 to 599	-1	300+ (Multiples of 8) [Ineffective when -1 is selected]
18	Network I/F Module 1 Error Monitoring	1	0 to 5	0	0:No Monitoring (Not to use Network I/F Module 1) 1:Monitoring
120	Network attribute 1	640001H	0H to FFFFFFFFH	Optional	Bits 28 to 31: Input port data selected at Network I/F Module 1 link error (0: Clear, 1: Hold)
121	Network attribute 2	C80000H	0H to FFFFFFFFH	Optional	Bits 8 to 11: Input port data selected at Network I/F Module 2 link error (0: Clear, 1: Hold) Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)
225	Network I/F Module Control Those stated in brackets () are for XSEL-RA/SA Series	2* (2**)	20H to 2FH (200H to 2FFH)	2* (2**)	Bits 0-7 (1st and 2nd digit): Network I/F Module 1type 0:Not Mounted 6:EtherCAT® 7:EtherNet/IP bits 8-15 (3rd and 4th digit): Network I/F Module 2type 0:Not Mounted 1:CC-Link 2:DeviceNet 3:PROFIBUS-DP 4 to C:System Reservation D:CC-Link IE Field (XSEL-RA/SA only)
231	No. of Network I/F Module 2 Remote Input Ports	0	0 to 256	192	8 port unit
232	No. of Network I/F Module 2 Remote Output Ports	0	0 to 256	192	8 port unit
233	(Extension) ^(Note 1) Input Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 to 299 1000 to 3999	0	0+ (Multiples of 8) or 1000+ (Multiples of 8) [Ineffective when -1 is selected]
234	(Extension) ^(Note 1) Output Port Start No. at Network I/F Module 2 Fixed Assignment	-1	-1 300 to 599 4000 to 6999	300	300+ (Multiples of 8) or 4000+ (Multiples of 8) [Ineffective when -1 is selected]
235	Network I/F Module 2 Error Monitoring	1	0 to 5	1	0:No Monitoring (Not to monitor condition of link to PLC (master)) 1:Monitoring

237	Network I/F Module 2 Node Address	0	0 to 63	Optional	DeviceNet node address range: 0 to 63
238	Network I/F Module 2 Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps

Note 1: The commands with "Extended" in the parameter name should only be applied for XSEL-R/S.

3.6 Standard I/O Ports of XSEL Controller

For the standard I/O ports of XSEL controller, it is possible to change the specified functions except for the general-purposed I/O with the I/O parameters. [Refer to the instruction manual for the XSEL-R/S/RX/SX/RXD/SXD controller or XSEL-RA/SA/RAX/SAX/RAXD/SAXD controller for more information.]

• Settings of Standard I/O Ports at Delivery

Input Port		Output Port		
Port No.	Function	Port No.	Function	
000	Program Start	300	Alarm Output	
001	Universal Input	301	Ready Output	
002	Universal Input	302	Emergency Stop Output	
003	Universal Input	303	Universal Output	
004	Universal Input	304	Universal Output	
005	Universal Input	305	Universal Output	
006	Universal Input	306	Universal Output	
007	Program Specification	(LSB) Startup program to be indicated with binary	307	Universal Output
008	Program Specification		308	Universal Output
009	Program Specification		309	Universal Output
010	Program Specification		310	Universal Output
011	Program Specification		311	Universal Output
012	Program Specification		312	Universal Output
013	Program Specification		(MSB)	313
014	Universal Input	314	Universal Output	
015	Universal Input	315	Universal Output	
⋮	⋮	⋮	⋮	


Note The number of standard I/O ports is;

- Input 000 to 299 (MAX 300 points)
- Output 300 to 599 (MAX 300 points)

Be careful of the number of I/O ports when using DeviceNet and PIO together.

Reference

When bit addresses are set in the PLC, port numbers are assigned in units of 16 points, starting from the channels corresponding to the node address set by the parameters. (This does not apply when a configurator is used.)

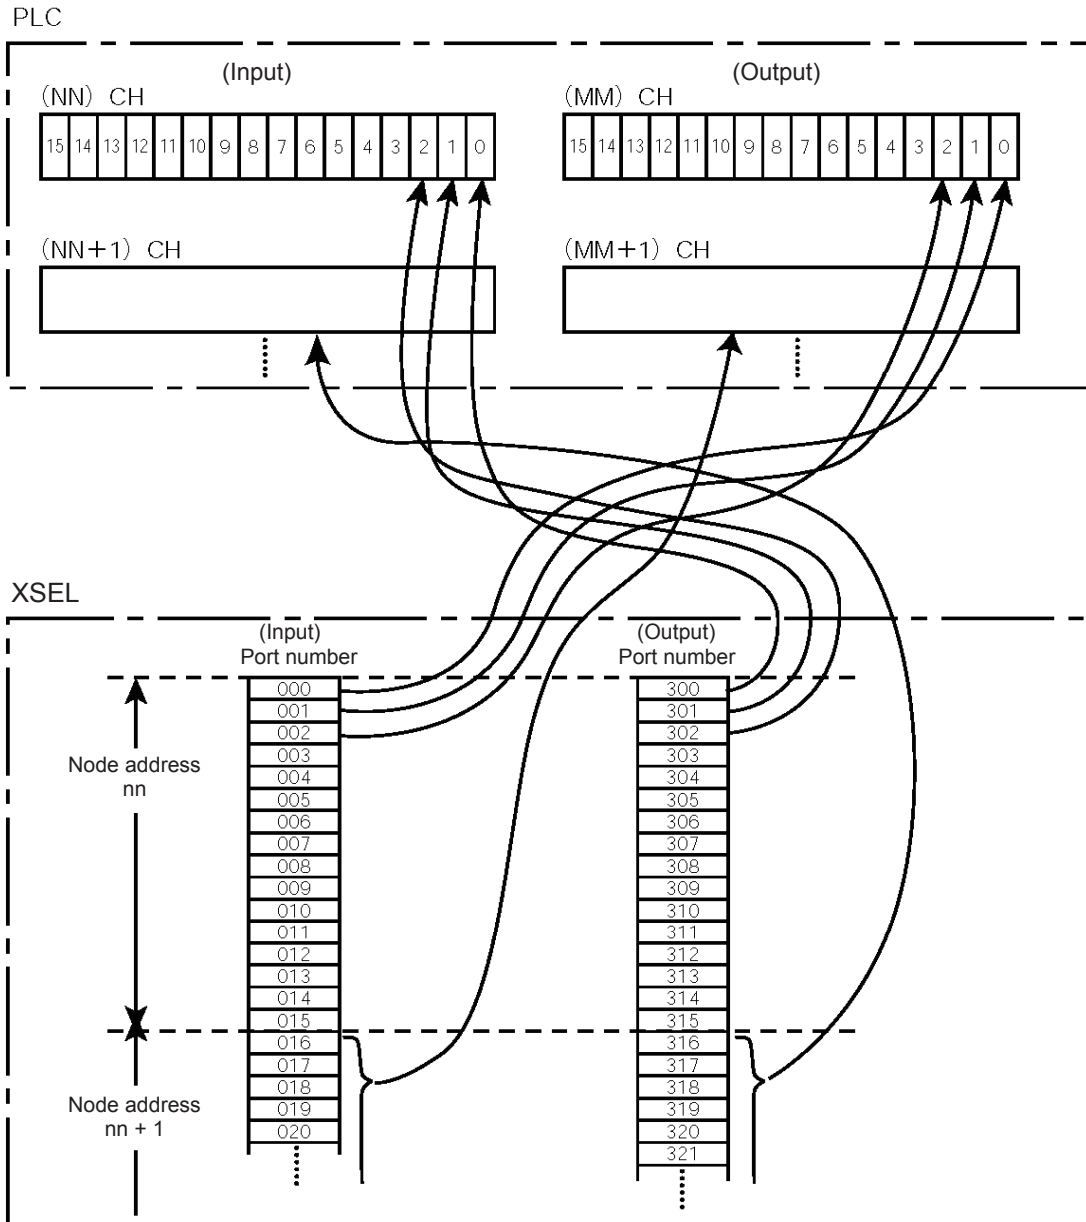

The numbers under (NN)/(MM) CH are PLC channel addresses corresponding to node address nn. Since node addresses (nn, nn+1, nn+2, and so on) are occupied in accordance with the numbers of input/output points used, pay attention to prevent duplicate node addresses.

3.7 Troubleshooting

- 1) In case it is not possible to connect the network, check the current condition on the display of monitoring LEDs of DeviceNet Board. [Refer to Section 3.2]
Check the settings of the XSEL controller and the settings of the master unit referring to the instruction manuals of the master unit.
- 2) When an alarm is issued, an alarm code gets output to the panel window.
 - (1) Find the alarm code that you see on the window from the alarm code list shown below.
Deal with it based on the description for the alarm code in question.
 - (2) In case the alarm code is not found in the following list, search in the alarm contents list contained in XSEL Controller Instruction Manual. Deal with it based on the description for the alarm code in question.

Alarm Code (Fieldbus related items are chosen below)

No.	Error name	Contents and Treatment
678	Extended I/O Port Assignment Parameter Error	There is an error in a parameter related to the extended I/O port assignment.
679	Extended I/O Port Assignment Number Overflow Error	The number of extended I/O port assignment exceeded the specification range.
67A	Extended I/O Port Duplicated Assignment Error	Extended I/O port assignment has duplicated.
D56	Fieldbus error (MinACK Timeout)	An error was detected in the communication board. Check the condition of PLC, and reboot the XSEL controller unless there is an error. If the same error occurs again, please contact us.
D59	Fieldbus error (DPRAM writing and reading)	The writing and reading error was detected in the internal memory. XSEL Controller reboot the controller. If the same error occurs again, please contact us.
D5A	Fieldbus error (TOGGLE Timeout)	A communication board error was detected. XSEL Controller reboot the controller. If the same error occurs again, please contact us.
D5B	Fieldbus error (Access right retry over)	A communication board error was detected. XSEL Controller reboot the controller. If the same error occurs again, please contact us.
D5D	Fieldbus error (FBRS link error)	This occurs when the network connection is not established. 1) Check the station number, the parameters for communication speed and parameters on PLC side. 2) It is concerned the startup of XSEL is faster than that of PLC. Change the settings in I/O Parameter No. 120. [Refer to Section 3.3 (8) for the details.]
D5E	Fieldbus error (Mail BOX response)	A communication board error was detected. Reboot the XSEL controller. If the same error occurs again, please contact us.
D5F	Network I/F Module Class Mismatch Error	The setting of I/O Parameter No. 225 Network I/F Module Class does not match with that of the communication board currently mounted to XSEL. Check the contents of the settings in I/O Parameter No. 225, and in case no doubt is found, please contact us.
D75	Fieldbus Parameter Error	There is an error in a parameter. Check I/O Parameter No. 226 to 227 and 237 to 238. Example) • A node address out of the range was set. • A baud rate out of the range is set.

No.	Error name	Contents and Treatment
D77	Fieldbus error (Exception)	A communication board error was detected. Reboot the XSEL controller. If the same error occurs again, please contact us.
E1F	I/O Assignment Parameter Error	It is a parameter setting error. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to XSEL Controller Instruction Manual.]
E20	I/O Duplication Assignment Error	I/O assignment is duplicated. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to XSEL Controller Instruction Manual.] Check the number of the ports that I/O boards are mounted.
E21	I/O Assignment Number Overflow Error	I/O assignment has exceeded the specified range. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to XSEL Controller Instruction Manual.] Check the number of the ports that I/O boards are mounted.
E8F	Fieldbus logic error	It is a logic error at the Fieldbus initializing.


4.2 Interface Specifications

Item	Specification			
Communication protocol	DeviceNet 2.0			
	Group 2 only server			
	Network-powered insulation node			
Communication specification	Master Slave connection		Bit strobe	
			Polling	
			Cyclic/Change of State	
Baud rate	500k/250k/125kbps (Software setting by I/O parameter)			
Communication cable length	Communication speed	Network Max. length	Maximum branch line length	Total branch line length
	500kpps	100m	6m	39m
	250kpps	250m		78m
	125kpps	500m		156m
Note When a large-size DeviceNet cable is used.				
Communication power supply	24V DC (supplied from DeviceNet)			
Consumption current of communication power supply	60mA			
Number of occupied nodes	1 Node			
Note address	0 to 63 (Software setting by I/O parameter)			
Connector	MSTB2.5/5-GF-5.08 AU (*1) by Phoenix Contact			

(*1) The cable-end connector is a standard accessory.
MSTB2.5/5-STF-5.08 AU M by Phoenix Contact

4.3 DeviceNet Interface

 (1) Communication Connector



- Red ■
- White
- None
- Blue ■
- Black ■

Pin color	Details
Black	Negative side of communication power line
Blue	Low side of signals
None	Shield
White	High side of signals
Red	Positive side of communication power line

(2) Monitor LED indications

The board operation status and network condition are obtained with the two LEDs located in the front of the communication board.

○ : Illuminating × : OFF ☆ : Flashing



LED	Color	Illumination Status	Indication Description (Detailed Explanation)
NS (Network Status)	Green	○	• Online, Communication in normal condition
		☆	• Online, No connection established
	Orange	○	• Critical link error
		☆	• Connection timeout
	Green/Orange	Blink by turn	• Self-testing
-	×	• Offline / No power supply confirmed	
MS (Module Status)	Green	○	• Normal Operation
		☆	• Configuration setting not established or not complete, test run required
	Orange	○	• An error that cannot be recovered
		☆	• An error that can be recovered
	Green/Orange	Blink by turn	• Self-testing
-	×	No power supply confirmed	

4.4 Parameter Settings

Set to the I/O parameters in the controller by using a teaching tool.
Set the mode switchover switch on the front panel to MANU side.

The teaching tool version applicable for MSEL is as shown below:

- XSEL PC software : V10.00.09.00 to
- TB-01 [MSEL-PCX/PGX] : V1.02 to
- TB-01 [MSEL-PC(F)/PG(F)] : V1.10 to
- TB-02 : V1.00 to

[1] Network Setting Check

Confirm that the I/O Parameter No. 225 Network I/F Module Control setting is showing "2" (DeviceNet).
(The setting of this parameter is to be established before delivery)

No.	Parameter name	Default	Input Range	Unit	Remarks
225	Extension I/O Control	*2	2H	-	Bits 0-3: I/O2 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO A: PROFINET IO (Main application of V1.18 or later) B: System Reservation C: Expansion SIO (Main application of V2.00 or later) D to F: System Reservation)

[2] DeviceNet Board Use Setting

Have I/O Parameter No. 18 set to "1" (Monitor: use DeviceNet board).

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
18	I/O2 Error Monitoring	1	0 to 5	-	0: No Monitoring (Not to use DeviceNet board) 1: Monitoring

[3] Node address setting

Have the node address set in I/O Parameter No. 226.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
226	I/O2 Fieldbus Node Address	0	0 to 63	-	DeviceNet node address range: 0 to 63

Note If a number out of the settable range is selected, "D75: Fieldbus Parameter Error" will occur.

[4] Communication Speed Setting

Have the baud rate set in I/O Parameter No. 227. Match the setting to the communication speed of the master unit.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
227	I/O2 Fieldbus Baud Rate	0	0 to 2	-	0: 125Kbps 1: 250Kbps 2: 500Kbps

Note If a number out of the settable range is selected, "D75: Fieldbus Parameter Error" will occur.

[5] Number of I/O Port Setting

Have the port numbers to be used set in I/O Parameter No. 14 and 15.

Note Set a number that is a multiple of 8.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	-	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	-	8 port unit

[6] I/O Port Top Number Setting

Have the top port number in the port range to be used set in I/O Parameter No. 16 and 17.

Note The values entered into these parameters must be evenly divisible by 8.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
16	I/O2 Fixed Assignment Input Port Start Number	48	-1 to 299	-	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	348	-1 300 to 599	-	300+(Multiples of 8) [Ineffective when -1 is selected]

[7] Time Setting to Wait for DeviceNet Communication Establishment

In I/O Parameter No. 121, set the time until check is to be held to see if the DeviceNet communication is established at the startup. Change the parameter in case D5D or A6B error occurs due to a faster startup of MSEL than the master unit.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
121	Network Attribute 2	C80000 _H	0 to FFFFFFF _H	100ms	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (Example) The initial value C80000 _H is bit 16 to 27 = C8 _H = 200 (in 100ms unit) 200×100ms = 20sec Check in 20sec after startup

[8] Data Retaining Setting at DeviceNet Communication Error


Have the setting established in I/O Parameter No. 120 whether to clear the input port data at 0 or to remain the data when a communication error is occurred.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
120	Network Attribute 1	640001 _H	0 to FFFFFFFF _H	-	Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained

4.5 Setting Example

(1) Example for when using only DeviceNet (I/O2)

It is how to establish the setting when using DeviceNet (I/O2) to 16 ports of each input and output from the top of the standard I/O ports, and no other I/O port (for I/O board, etc.) is to be used.

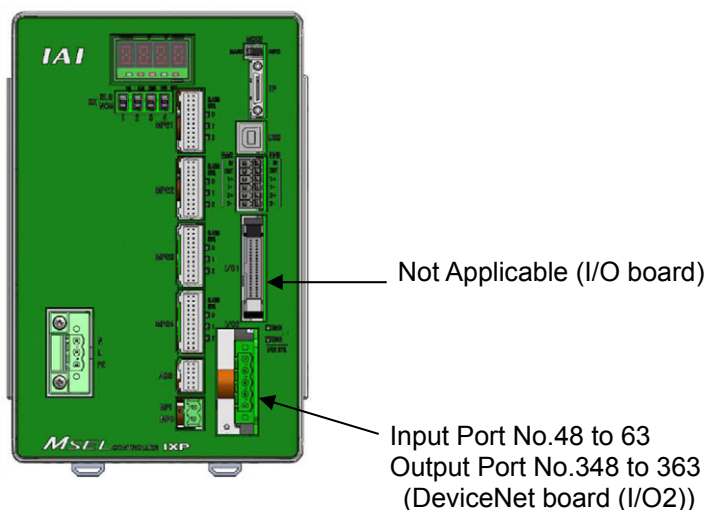


● I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
2	I/O1 Fixed Assignment Input Port Start Number	0	-1 to 299	0	0+(Multiples of 8) [Ineffective when -1 is selected]
3	I/O1 Fixed Assignment Output Port Start Number	300	-1 300 to 599	300	300+(Multiples of 8) [Ineffective when -1 is selected]
10	I/O1 Error Monitoring	1	0 to 5	0	0: No Monitoring (Not to use I/O board) 1: Monitoring 2: Monitoring (Not to monitor 24V I/O power related error) 3: Monitoring (To monitor only 24V I/O power related error)
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	16	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	16	8 port unit
16	I/O2 Fixed Assignment Input Port Start Number	48	-1 to 299	48	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	348	-1 300 to 599	348	300+(Multiples of 8) [Ineffective when -1 is selected]
18	I/O2 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring
120	Network Attribute 1	640001 _H	0 to FFFFFFF _H	Optional	Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained
121	Network Attribute 2	C80000 _H	0 to FFFFFFF _H	Optional	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
225	Extension I/O Control	2	2 _H	2 (Confirmation)	Bits 0-3: I/O2 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO A: PROFINET IO (Main application of V1.18 or later) B: System Reservation C: Expansion SIO (Main application of V2.00 or later) D to F: System Reservation)
226	I/O2 Fieldbus Node Address	0	0 to 63	Optional	DeviceNet node address range: 0 to 63
227	I/O2 Fieldbus Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps



- (2) Example for when using DeviceNet and I/O Board 1 together
 This is a setting to use I/O board (16 points each for input and output) and DeviceNet on I/O port (I/O2) at 240 points of ports each for input and output on the ports.

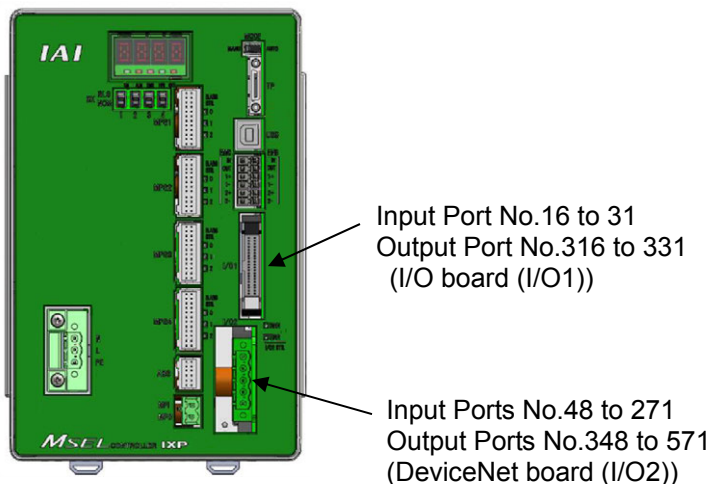

● I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
2	I/O1 Fixed Assignment Input Port Start Number	0	-1 to 299	0	0+(Multiples of 8) [Ineffective when -1 is selected]
3	I/O1 Fixed Assignment Output Port Start Number	300	-1 300 to 599	300	300+(Multiples of 8) [Ineffective when -1 is selected]
10	I/O1 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use I/O board) 1: Monitoring 2: Monitoring (Not to monitor 24V I/O power related error) 3: Monitoring (To monitor only 24V I/O power related error)
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	224	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	224	8 port unit
16	I/O2 Fixed Assignment Input Port Start Number	48	-1 to 299	48	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	348	-1 300 to 599	348	300+(Multiples of 8) [Ineffective when -1 is selected]
18	I/O2 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring
120	Network Attribute 1	640001 _H	0 to FFFFFFFF _H	Optional	Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained
121	Network Attribute 2	C80000 _H	0 to FFFFFFFF _H	Optional	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
225	Extension I/O Control	2	2H	2 (Confirmation)	Bits 0-3: I/O2 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO A: PROFINET IO (Main application of V1.18 or later) B: System Reservation C: Expansion SIO (Main application of V2.00 or later) D to F: System Reservation)
226	I/O2 Fieldbus Node Address	0	0 to 63	Optional	DeviceNet node address range: 0 to 63
227	I/O2 Fieldbus Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps

4.6 I/O Ports of the MSEL

It is available to add special functions beside the general-purposed input and output in the I/O ports. [Refer to MSEL Controller Operation Manual 2.2.5 PIO Circuit, Chapter 5 Parameter for the details.]

● I/O Port Setting at Delivery


	Port No.	Function		Port No.	Function
Internal DI (I/O1)	000	For future expansion	Internal DO (I/O1)	300	ALM (LED on the front panel)
	001			301	RDY (LED on the front panel)
	002			302	EMG (LED on the front panel)
	003			303	For future expansion
	004			304	HPS (LED on the front panel)
	005			305	For future expansion
	006			306	
	007			307	
	008			308	
	009			309	
	010			310	
	011			311	
	012			312	
	013			313	
	014			314	
015	315				
External DI (I/O1)	016 to 031	General-purpose input	External DO (I/O1)	316 to 331	General-purpose output
Internal DI (I/O1)	032	For future expansion	Internal DO (I/O1)	332	7-segment user display digit specification
	033			333	7-segment user display digit specification
	034			334	For future expansion
	035				
	036			336	
	037			337	7-segment display refresh
	038			338	7-segment user/system alternate display
	039			339	7-segment user display specification
	040			340	DT0 (7-segment user display bit)
	041			341	DT1 (7-segment user display bit)
	042			342	DT2 (7-segment user display bit)
	043			343	DT3 (7-segment user display bit)
	044			344	DT4 (7-segment user display bit)
	045			345	DT5 (7-segment user display bit)
	046			346	DT6 (7-segment user display bit)
047	347	For future expansion			

	Port No.	Function		Port No.	Function
External DI (Device Net)	048	Program start	External DO (Device Net)	348	Alarm output
	049	General-purpose input		349	READY output
	050			350	Emergency-stop output
	051			351	General-purpose output
	052			352	
	053			353	
	054			354	
	055			Program number specification (BCD:1 / BIN:1)*	
	056	Program number specification (BCD:2 / BIN:2)*		356	
	057	Program number specification (BCD:4 / BIN:4)*		357	
	058	Program number specification (BCD:8 / BIN:8)*		358	
	059	Program number specification (BCD:10 / BIN:16)*		359	
	060	Program number specification (BCD:20 / BIN:32)*		360	
	061	Program number specification (BCD:40 / BIN:64)*		361	
	062	General-purpose input		362	
063	363				
	064 to 287	General-purpose input		364 to 587	General-purpose output

* Switching over between BCD and BIN in Program Number Indication should be conducted in IO Parameter No. 30 Input Function Select 000.
(1: Program Start BCD, 2: Program Start Binary (BIN))

Reference

When bit addresses are set in the parameter, port numbers are assigned in units of 16 points, starting from the channels corresponding to the node address set by the DIP switches. (This does not apply when a configurator is used.)

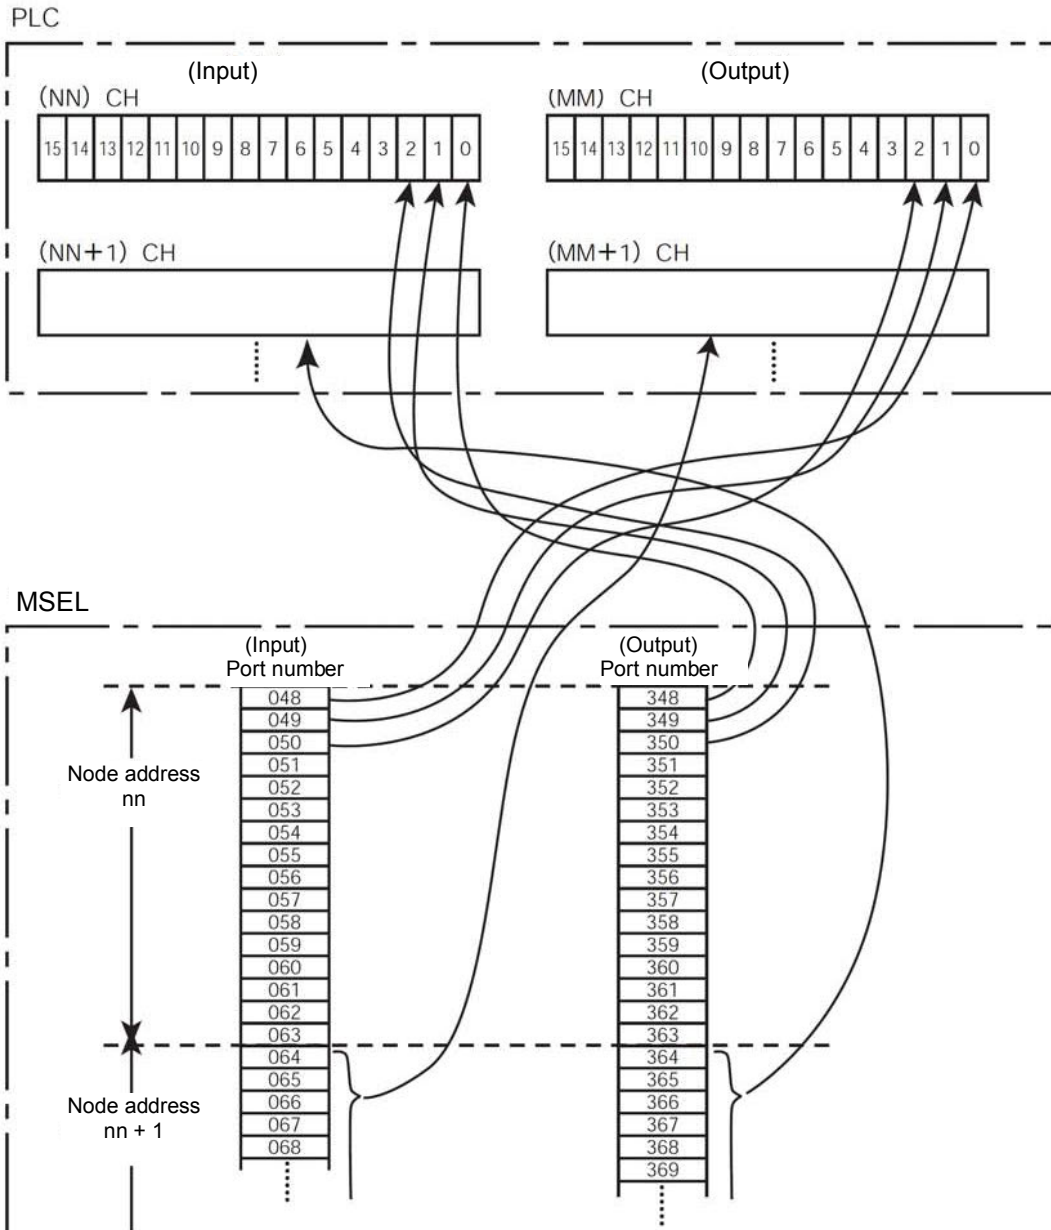

The numbers under (NN)/(MM) CH are PLC channel addresses corresponding to node address nn. Since node addresses (nn, nn+1, nn+2, and so on) are occupied in accordance with the numbers of input/output points used, pay attention to prevent duplicate node addresses.

4.7 Troubleshooting

- 1) In case it is not possible to connect the network, check the current condition on the display of monitoring LEDs of DeviceNet Board. [Refer to Section 4.2]
Check the settings of the MSEL and the settings of the master unit referring to the instruction manuals of the master unit.
- 2) When an alarm is issued, an alarm code gets output to the panel window.
 - (1) Find the alarm code that you see on the window from the alarm code list shown below.
Deal with it based on the description for the alarm code in question.
 - (2) In case the alarm code is not found in the following list, search in the alarm contents list contained in MSEL Instruction Manual. Deal with it based on the description for the alarm code in question.

Alarm Code (Fieldbus related items are chosen below)

No.	Error name	Contents and Treatment
A6B	Fieldbus error (FBRS link error)	MSEL starts up faster than the host (master unit). Change the setting in I/O Parameter No. 121 Bit 16 to 23 to have the time extended before timeout.
D56	Fieldbus error (MinACK Timeout)	A communication error was detected. Check the condition of PLC, and reboot the MSEL unless there is an error. If the same error occurs again, please contact us.
D59	Fieldbus error (DPRAM writing and reading)	The writing and reading error was detected in the internal memory. MSEL reboot the controller. If the same error occurs again, please contact us.
D5A	Fieldbus error (TOGGLE Timeout)	A communication error was detected. MSEL reboot the controller. If the same error occurs again, please contact us.
D5B	Fieldbus error (Access right retry over)	A communication board error was detected. MSEL reboot the controller. If the same error occurs again, please contact us.
D5D	Fieldbus error (FBRS link error)	This occurs when the network connection is not established. 1) Check the station number, the parameters for communication speed and parameters on higher-order side. 2) It is concerned the startup of MSEL is faster than that of PLC. Change the settings in I/O Parameter No. 121. [Refer to Section 4.4 [7] for the details.]
D5E	Fieldbus error (Mail BOX response)	A communication error was detected. Reboot the MSEL. If the same error occurs again, please contact us.
D5F	Network I/F Module Class Mismatch Error	The setting of I/O Parameter No. 225 Network I/F Module Class does not match with that of the communication board mounted. Check the contents of the settings in I/O Parameter No. 225, and in case no doubt is found, please contact us.
D75	Fieldbus Parameter Error	There is an error in a parameter. Check I/O Parameter No. 226, 227 and 237, 238. Example) · A node address out of the range was set. · A communication speed out of the range is set.
D76	Fieldbus Module Unmounted Error	DeviceNet board is not mounted.
D77	Fieldbus error (Exception)	A communication board error was detected. Reboot the MSEL. If the same error occurs again, please contact us.
E1F	I/O Assignment Parameter Error	It is a parameter setting error. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to MSEL Instruction Manual.]

No.	Error name	Contents and Treatment
E20	I/O Duplication Assignment Error	I/O assignment is duplicated. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to MSEL Instruction Manual.] Check the number of the ports that I/O boards are mounted.
E21	I/O Assignment Number Overflow Error	I/O assignment has exceeded the specified range. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to MSEL Instruction Manual.] Check the number of the ports that I/O boards are mounted.
E8F	Fieldbus logic error	It is a logic error at the Fieldbus initializing.

5.2 Interface Specifications



Item	Specification			
Communication protocol	DeviceNet 2.0			
	Group 2 only server			
	Network-powered insulation node			
Communication specification	Master Slave connection		Bit strobe	
			Polling	
			Cyclic/Change of State	
Baud rate	500k/250k/125kpbs (Software setting by I/O parameter)			
Communication cable length	Communication speed	Network Max. length	Maximum branch line length	Total branch line length
	500kpps	100m	6m	39m
	250kpps	250m		78m
	125kpps	500m		156m
Note When a large-size DeviceNet cable is used.				
Communication power supply	24V DC (supplied from DeviceNet)			
Consumption current of communication power supply	60mA			
Number of occupied nodes	1 Node			
Note address	0 to 63 (Software setting by I/O parameter)			
Connector	MSTB2.5/5-GF-5.08 AU (*1) by Phoenix Contact			

(*1) The cable-end connector is a standard accessory.
MSTB2.5/5-STF-5.08 AU M by Phoenix Contact

5.3 DeviceNet Interface

Two pieces of DeviceNet board can be mounted at the maximum.

 (1) Name of Each Part

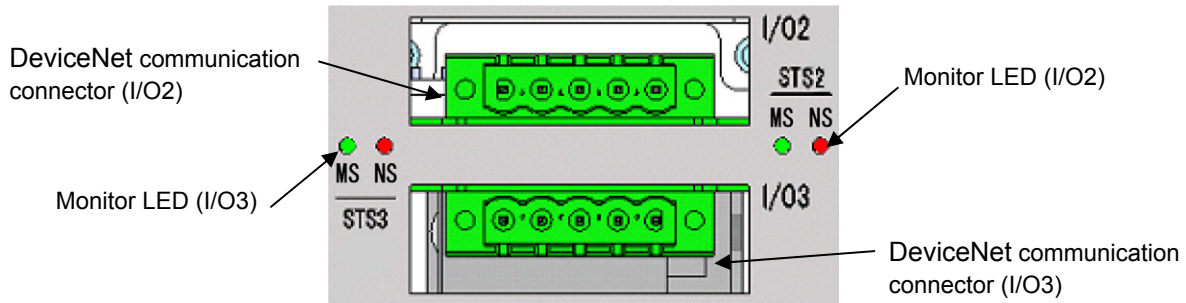

Black
 Blue
 None
 White
 Red

Pin color	Details
Black	Negative side of communication power line
Blue	Low side of signals
None	Shield
White	High side of signals
Red	Positive side of communication power line

(2) Monitor LED indications

The board operation status and network condition are obtained with the two LEDs located in the front of the communication board.

○ : Illuminating × : OFF ☆ : Flashing

LED	Color	Illumination Status	Indication Description (Detailed Explanation)
NS (Network Status)	Green	○	• Online, Communication in normal condition
		☆	• Online, No connection established
	Orange	○	• Critical link error
		☆	• Connection timeout
	Green/Orange	Blink by turn	• Self-testing
-	×	• Offline / No power supply confirmed	
MS (Module Status)	Green	○	• Normal Operation
		☆	• Configuration setting not established or not complete, test run required
	Orange	○	• An error that cannot be recovered
		☆	• An error that can be recovered
	Green/Orange	Blink by turn	• Self-testing
-	×	No power supply confirmed	

5.4 Parameter Settings


Set to the I/O parameters in the controller by using a teaching tool.

Note The setting parameter number will differ depending on the slot number (I/O2 or I/O3) mounting DeviceNet.
Check on which slot the DeviceNet board is mounted in your TTA before starting the setting work.

Set the mode switchover switch on the front panel to MANU side.

The teaching tool version applicable for TTA is as shown below:

- XSELPC software : V10.00.00.00 to
- TB-01 : V1.00 to
- TB-02 : V1.00 to

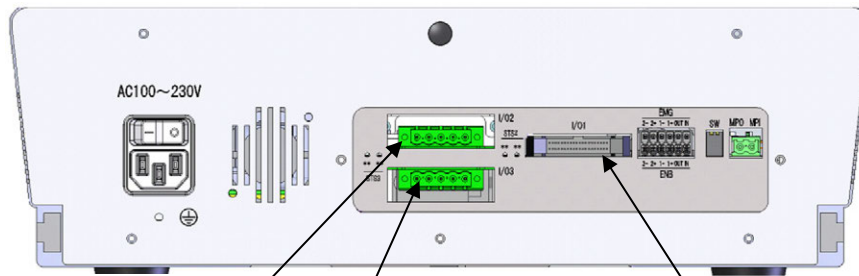

DeviceNet board (I/O2)
 < Setting Parameter >
 I/O Parameter No.14
 I/O Parameter No.15
 I/O Parameter No.16
 I/O Parameter No.17
 I/O Parameter No.18
 I/O Parameter No.225
 I/O Parameter No.226
 I/O Parameter No.227

DeviceNet board (I/O3)
 < Setting Parameter >
 I/O Parameter No.225
 I/O Parameter No.231
 I/O Parameter No.232
 I/O Parameter No.233
 I/O Parameter No.234
 I/O Parameter No.235
 I/O Parameter No.237
 I/O Parameter No.238

I/O board 1 (I/O1)
 < Setting Parameter >
 I/O Parameter No.2
 I/O Parameter No.3
 I/O Parameter No.10

[1] Network Setting Check

Confirm that the I/O Parameter No. 225 Network I/F Module Control setting is showing “2” (DeviceNet).
(The setting of this parameter is to be established before delivery)

Note The digit to check will differ depending on the position to mount DeviceNet (Mounted on I/O2: 1st digit, mounted on I/O3: 2nd digit)

No.	Parameter name	Default	Input Range	Unit	Remarks
225	Extension I/O Control	*2 2* 22	02 _H to 22 _H	-	Bits 0-3(First digit): I/O2 module type Bits 4-7(2nd digit): I/O3 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO)

[2] DeviceNet Board Use Setting

Have I/O Parameter No. 18 and 235 set to “1” (Monitor: use DeviceNet board) in accordance with the position to mount DeviceNet board.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
18	I/O2 Error Monitoring	1	0 to 5	-	0: No Monitoring (Not to use DeviceNet board) 1: Monitoring
235	I/O3 Error Monitoring	1	0 to 5	-	0: No Monitoring (Not to use DeviceNet board) 1: Monitoring

[3] Node address setting

Have the node address set in I/O Parameter No. 226 and 237 in accordance with the position to mount DeviceNet board.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
226	I/O2 Fieldbus Node Address	0	0 to 63	-	DeviceNet node address range: 1 to 63
237	I/O3 Fieldbus Node Address	0	0 to 63	-	DeviceNet node address range: 1 to 63

Note If a number out of the settable range is selected, “D75: Fieldbus Parameter Error” will occur.

[4] Communication Speed Setting

Have the baud rate set in I/O Parameter No. 227 and 238 in accordance with the position to mount DeviceNet board. Match the setting to the communication speed of the master unit.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
227	I/O2 Fieldbus Baud Rate	0	0 to 2	-	0: 125Kbps 1: 250Kbps 2: 500Kbps
238	I/O3 Fieldbus Baud Rate	0	0 to 2	-	0: 125Kbps 1: 250Kbps 2: 500Kbps

Note If a number out of the settable range is selected, "D75: Fieldbus Parameter Error" will occur.

[5] Number of I/O Port Setting

Have the port numbers to be used set in I/O Parameter No. 14, 15, 231 and 232 in accordance with the position to mount DeviceNet board.

Note Set a number that is a multiple of 8.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	-	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	-	8 port unit
231	I/O3 Fieldbus Remote Input Ports	0	0 to 240	-	8 port unit
232	I/O3 Fieldbus Remote Output Ports	0	0 to 240	-	8 port unit



Caution

The available number of ports to be used is 240 at the maximum no matter if the number of mounted DeviceNet board is 1 piece or 2 pieces.

[6] I/O Port Top Number Setting

Have the top port number in the port range to be used set in I/O Parameter No. 16, 17, 233 and 234 in accordance with the position to mount DeviceNet board.

Note The values entered into these parameters must be evenly divisible by 8.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
16	I/O2 Fixed Assignment Input Port Start Number	-1	-1 to 299	-	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	-1	-1 300 to 599	-	300+(Multiples of 8) [Ineffective when -1 is selected]
233	I/O3 Fixed Assignment Input Port Start Number	-1	-1 to 299	-	0+(Multiples of 8) [Ineffective when -1 is selected]
234	I/O3 Fixed Assignment Output Port Start Number	-1	-1 300 to 599	-	300+(Multiples of 8) [Ineffective when -1 is selected]

[7] Time Setting to Wait for DeviceNet Communication Establishment

In I/O Parameter No. 121, set the time until check is to be held to see if the DeviceNet communication is established at the startup. Change the parameter in case D5D or A6B error occurs due to a faster startup of TTA than the master unit.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
121	Network Attribute 2	C80000 _H	0 to FFFFFFF _H	100ms	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (Example) The initial value C80000 _H is bit 16 to 27 = C8 _H = 200 (in 100ms unit) 200×100ms = 20sec Check in 20sec after startup

[8] Data Retaining Setting at DeviceNet Communication Error


Have the setting established in I/O Parameter No. 120 and 121 whether to clear the input port data at 0 or to remain the data when a communication error is occurred in accordance with the position to mount DeviceNet.

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
120	Network Attribute 1	640001 _H	0 to FFFFFFF _H	-	Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained
121	Network Attribute 2	C80000 _H	0 to FFFFFFF _H	-	Bits 8 to 11: Input port data selected at I/O3 Fieldbus link error 0: Input port data clear 1: Input port data retained

5.5 Setting Example

(1) Example for when using only DeviceNet (I/O2)

It is how to establish the setting when using DeviceNet (I/O2) to 16 ports of each input and output from the top of the standard I/O ports, and no other I/O port (for I/O board, etc.) is to be used.

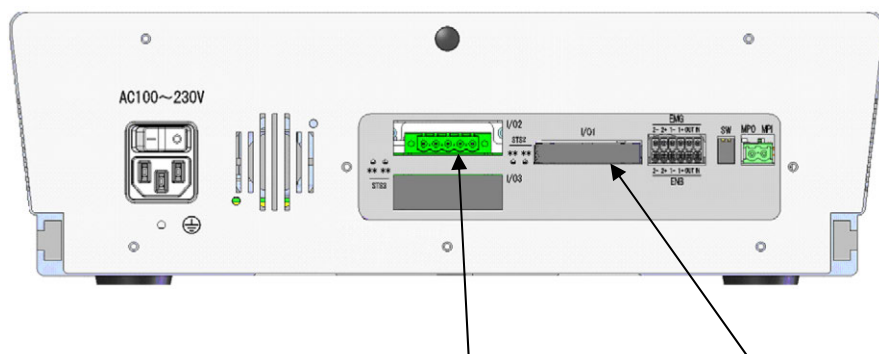

Input Port No.48 to 63
Output Port No.348 to 363
(DeviceNet board (I/O2))


Not Applicable (I/O board)

• I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
2	I/O1 Fixed Assignment Input Port Start Number	0	-1 to 299	0	0+(Multiples of 8) [Ineffective when -1 is selected]
3	I/O1 Fixed Assignment Output Port Start Number	300	-1 300 to 599	300	300+(Multiples of 8) [Ineffective when -1 is selected]
10	I/O1 Error Monitoring	1	0 to 5	0	0: No Monitoring (Not to use I/O board) 1: Monitoring 2: Monitoring (Not to monitor 24V I/O power related error) 3: Monitoring (To monitor only 24V I/O power related error)
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	16	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	16	8 port unit
16	I/O2 Fixed Assignment Input Port Start Number	-1	-1 to 299	48	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	-1	-1 300 to 599	348	300+(Multiples of 8) [Ineffective when -1 is selected]
18	I/O2 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring
120	Network Attribute 1	640001 _H	0 to FFFFFFF _H	Optional	Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
121	Network Attribute 2	C80000 _H	0 to FFFFFFFF _H	Optional	Bits 8 to 11: Input port data selected at I/O3 Fieldbus link error 0: Input port data clear 1: Input port data retained Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)
225	Extension I/O Control	02	02 _H to 22 _H	-	Bits 0-3(First digit): I/O2 module type Bits 4-7(2nd digit): I/O3 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO)
226	I/O2 Fieldbus Node Address	0	0 to 63	Optional	DeviceNet node address range: 1 to 63
227	I/O2 Fieldbus Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps
235	I/O2 Error Monitoring	1	0 to 5	-	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring

- (2) Example for when using DeviceNet and I/O Board 1 together
 This is a setting to use I/O board (16 points each for input and output) and DeviceNet on I/O port (I/O2) at 240 points of ports each for input and output on the ports.

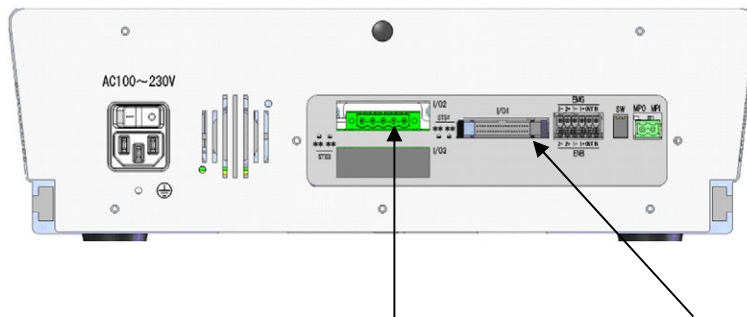

Extended Input Ports No.48 to 271
 Extended Output Ports No.348 to 571
 (DeviceNet board (I/O2))


Standard Input Port No.16 to 31
 Standard Output Port No.316 to 331
 (I/O board (I/O1))

● I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
2	I/O1 Fixed Assignment Input Port Start Number	0	-1 to 299	0	0+(Multiples of 8) [Ineffective when -1 is selected]
3	I/O1 Fixed Assignment Output Port Start Number	300	-1 300 to 599	300	300+(Multiples of 8) [Ineffective when -1 is selected]
10	I/O1 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use I/O board) 1: Monitoring 2: Monitoring (Not to monitor 24V I/O power related error) 3: Monitoring (To monitor only 24V I/O power related error)
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	224	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	224	8 port unit
16	I/O2 Fixed Assignment Input Port Start Number	-1	-1 to 299	48	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	-1	-1 300 to 599	348	300+(Multiples of 8) [Ineffective when -1 is selected]
18	I/O2 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring
120	Network Attribute 1	640001 _H	0 to FFFFFFF _H	Optional	Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
121	Network Attribute 2	C8000H	0 to FFFFFFFFH	Optional	Bits 8 to 11: Input port data selected at I/O3 Fieldbus link error 0: Input port data clear 1: Input port data retained Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)
225	Extension I/O Control	02	02H to 22H	-	Bits 0-3(First digit): I/O2 module type Bits 4-7(2nd digit): I/O3 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO)
226	I/O2 Fieldbus Node Address	0	0 to 63	Optional	DeviceNet node address range: 1 to 63
227	I/O2 Fieldbus Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps
235	I/O3 Error Monitoring	1	0 to 5	-	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring

- (3) Example for when using DeviceNet (I/O2 and I/O3) together
 This is a setting to mount two pieces of DeviceNet and use 120 points on each port.

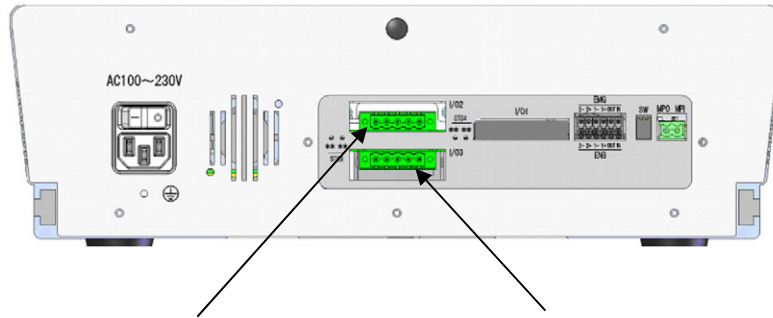

Extended Input Ports No.48 to 167
 Extended Output Ports No.348 to 467
 (DeviceNet board (I/O2))

Standard Input Port No.168 to 287
 Standard Output Port No.468 to 587
 (DeviceNet board (I/O3))

● I/O Parameters

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
2	I/O1 Fixed Assignment Input Port Start Number	0	-1 to 299	0	0+(Multiples of 8) [Ineffective when -1 is selected]
3	I/O1 Fixed Assignment Output Port Start Number	300	-1 300 to 599	300	300+(Multiples of 8) [Ineffective when -1 is selected]
10	I/O1 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use I/O board) 1: Monitoring 2: Monitoring (Not to monitor 24V I/O power related error) 3: Monitoring (To monitor only 24V I/O power related error)
14	I/O2 Fieldbus Remote Input Ports	0	0 to 240	224	8 port unit
15	I/O2 Fieldbus Remote Output Ports	0	0 to 240	224	8 port unit
16	I/O2 Fixed Assignment Input Port Start Number	-1	-1 to 299	48	0+(Multiples of 8) [Ineffective when -1 is selected]
17	I/O2 Fixed Assignment Output Port Start Number	-1	-1 300 to 599	348	300+(Multiples of 8) [Ineffective when -1 is selected]
18	I/O2 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use Network I/F Module 1) 1: Monitoring
120	Network Attribute 1	640001 _H	0 to FFFFFFF _H	Optional	Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus Bits 28 to 31: Input port data selected at I/O2 Fieldbus link error 0: Input port data clear 1: Input port data retained

No.	Parameter name	Default (Reference)	Input Range	Unit	Remarks
121	Network Attribute 2	C80000 _H	0 to FFFFFFFF _H	Optional	Bits 8 to 11: Input port data selected at I/O3 Fieldbus link error 0: Input port data clear 1: Input port data retained Bits 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100ms)
225	Extension I/O Control	22	02 _H to 22 _H	-	Bits 0-3(First digit): I/O2 module type Bits 4-7(2nd digit): I/O3 module type (0h: Not Mounted 1h: CC-Link, 2h: DeviceNet, 3h: PROFIBUS, 4h to 5h: System Reservation, 6h: EtherCAT® 7h: EtherNet/IP, 8h: System Reservation, 9h: PIO)
226	I/O2 Fieldbus Node Address	0	0 to 63	Optional	DeviceNet node address range: 1 to 63
227	I/O2 Fieldbus Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps
231	I/O3 Fieldbus Remote Input Ports	0	0 to 240	120	8 port unit
232	I/O3 Fieldbus Remote Output Ports	0	0 to 240	120	8 port unit
233	I/O3 Fixed Assignment Input Port Start Number	-1	-1 to 299	168	0+(Multiples of 8) [Ineffective when -1 is selected]
234	I/O3 Fixed Assignment Output Port Start Number	-1	-1 300 to 599	468	300+(Multiples of 8) [Ineffective when -1 is selected]
235	I/O3 Error Monitoring	1	0 to 5	1	0: No Monitoring (Not to use CC-Link board) 1: Monitoring
237	I/O3 Fieldbus Node Address	0	0 to 63	Optional	DeviceNet node address range: 1 to 63
238	I/O3 Fieldbus Baud Rate	0	0 to 2	Follow master unit setting	0: 125Kbps 1: 250Kbps 2: 500Kbps

5.6 I/O Ports of the TTA


It is available to add special functions beside the general-purposed input and output in the I/O ports.
 [Refer to TTA Controller Operation Manual 4.6 How to Use Internal DIO, Chapter 5 Parameter for the details.]

● I/O Port Setting at Delivery

	Port No.	Function		Port No.	Function
Internal DI (I/O1)	000	Start	Internal DO (I/O1)	300	ALM (LED on the front panel)
	001	Switch No.1 (Additional Switch)		301	RDY (LED on the front panel)
	002	For future expansion		302	EMG (LED on the front panel)
	003			303	Automatic operation mode (start switch LED)
	004			304	HPS (LED on the front panel)
	005	Switch No.2 (Additional Switch)		305	For future expansion
	006	Switch No.3 (Additional Switch)		306	
	007	Program number specification		307	
	008	Ones place of the digital switch		308	Internal DI No. 001 ON/OFF
	009			309	Internal DI No. 002 ON/OFF
	010	Program number specification		310	Internal DI No. 003 ON/OFF
	011			311	Internal DI No. 004 ON/OFF
	012			312	Internal DI No. 005 ON/OFF
	013	Tens place of the digital switch		313	Internal DI No. 006 ON/OFF
	014	Switch No.4 (Additional Switch)		314	For future expansion
015	315		Internal DI No. 015 ON/OFF		
External DI (I/O1)	016 to 031	General-purpose input (I/O connector on the rear panel)	External DO (I/O1)	316 to 331	General-purpose output (I/O connector on the rear panel)
Internal DI (I/O1)	032	For future expansion	Internal DO (I/O1)	332	7-segment user display digit specification
	033			333	7-segment user display digit specification
	034			For future expansion	
	035				335
	036				336
	037			337	7-segment display refresh
	038			338	7-segment user/system alternate display
	039			339	7-segment user display specification
	040			340	DT0 (7-segment user display bit)
	041			341	DT1 (7-segment user display bit)
	042			342	DT2 (7-segment user display bit)
	043			343	DT3 (7-segment user display bit)
	044			344	DT4 (7-segment user display bit)
	045			345	DT5 (7-segment user display bit)
	046			346	DT6 (7-segment user display bit)
047	347	For future expansion			

	Port No.	Function		Port No.	Function
External DI (Device Net)	048	General-purpose input	External DO (Device Net)	348	Alarm output
	049	(Software reset)		349	Ready output
	050	(Servo ON)		350	Emergency stop output
	051	(Auto program start)		351	General-purpose output
	052	(Software interlock)		352	
	053	(Pause reset)		353	
	054	(Pause)		354	
	055	General-purpose input		355	
	056			356	
	057			357	
	058			358	
	059			359	
	060	General-purpose input		360	
	061			361	
	062			362	
063	363				
064	General-purpose input		364	General-purpose output	
to		to			
287		587			

In this table, shows the settings when DeviceNet Connection Board is installed in "I/O2".
For when the board is installed in "I/O3", refer to Instruction Manual of TTA.

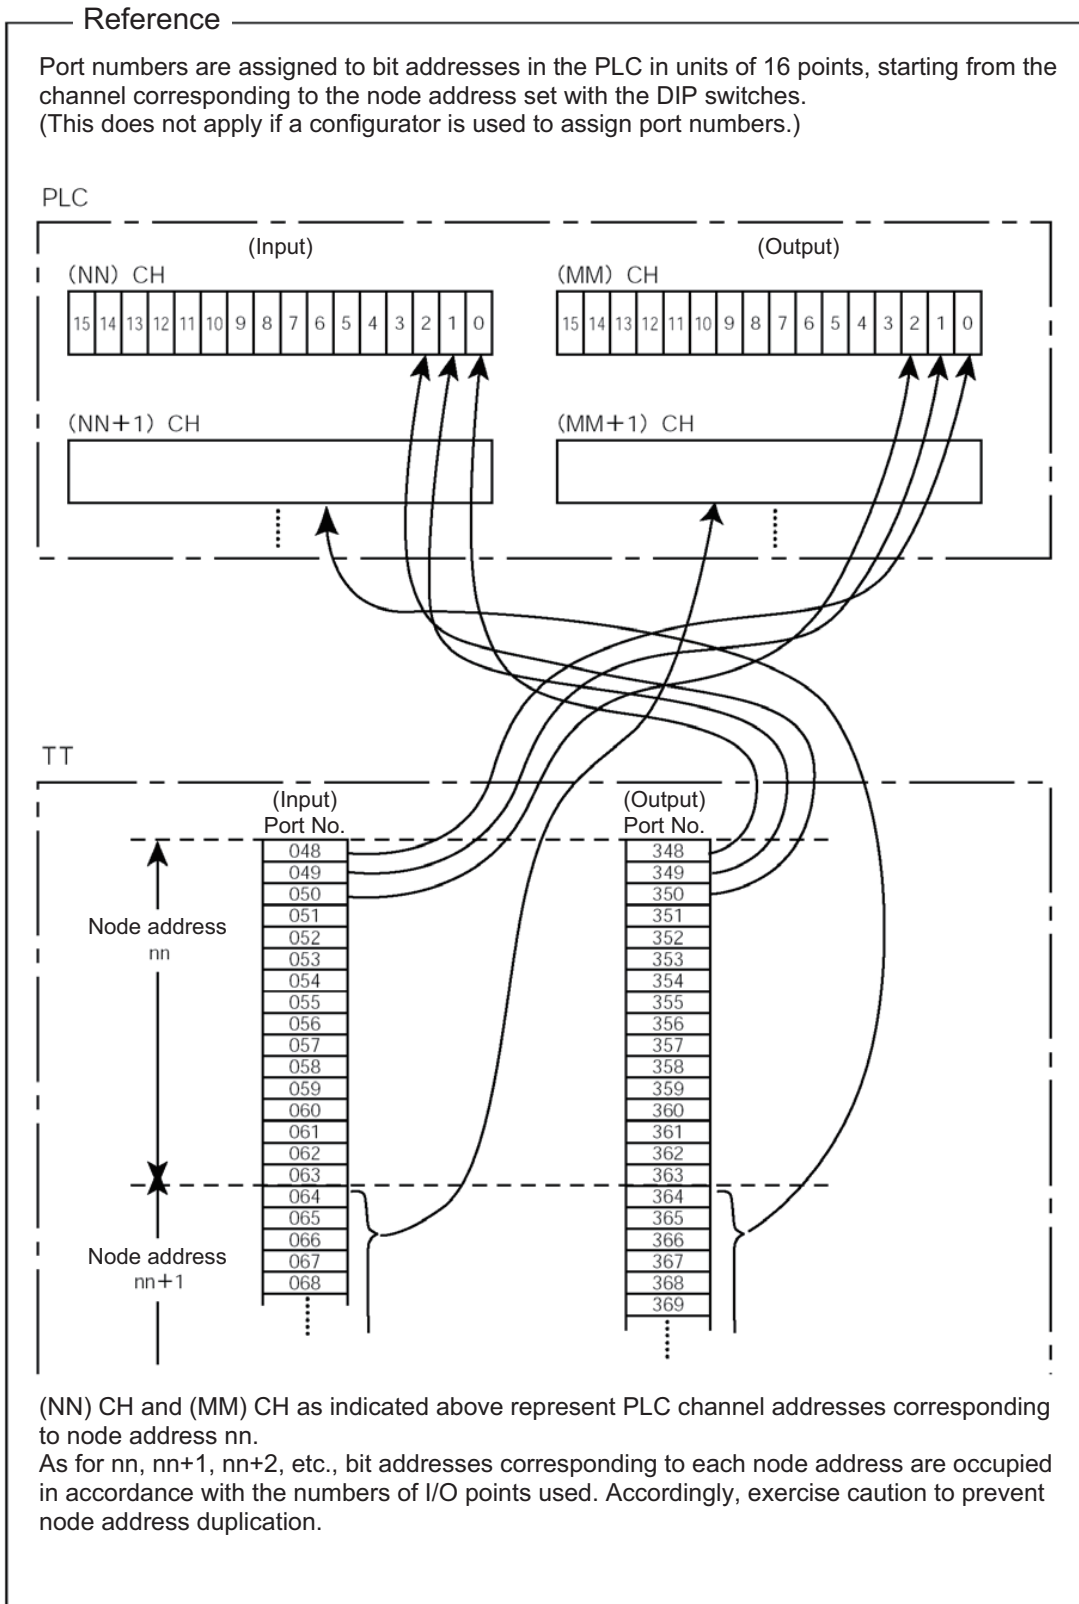

5.7 Troubleshooting

- 1) In case it is not possible to connect the network, check the current condition on the display of monitoring LEDs of DeviceNet Board. [Refer to Section 5.2]
Check the settings of the TTA and the settings of the master unit referring to the instruction manuals of the master unit.
- 2) When an alarm is issued, an alarm code gets output to the panel window.
 - (1) Find the alarm code that you see on the window from the alarm code list shown below.
Deal with it based on the description for the alarm code in question.
 - (2) In case the alarm code is not found in the following list, search in the alarm contents list contained in Tabletop Robot TTA Instruction Manual. Deal with it based on the description for the alarm code in question.

Alarm Code (Fieldbus related items are chosen below)

No.	Error name	Contents and Treatment
A6B	Fieldbus error (FBRS link error)	TTA starts up faster than the host (master unit). Change the setting in I/O Parameter No. 121 Bit 16 to23 to have the time extended before timeout.
D56	Fieldbus error (MinACK Timeout)	A communication error was detected. Check the condition of PLC, and reboot the TTA unless there is an error. If the same error occurs again, please contact us.
D59	Fieldbus error (DPRAM writing and reading)	The writing and reading error was detected in the internal memory. TTA reboot the controller. If the same error occurs again, please contact us.
D5A	Fieldbus error (TOGGLE Timeout)	A communication error was detected. TTA reboot the controller. If the same error occurs again, please contact us.
D5B	Fieldbus error (Access right retry over)	A communication board error was detected. TTA reboot the controller. If the same error occurs again, please contact us.
D5D	Fieldbus error (FBRS link error)	This occurs when the network connection is not established. 1) Check the station number, the parameters for communication speed and parameters on higher-order side. 2) It is concerned the startup of TTA is faster than that of PLC. Change the settings in I/O Parameter No. 121. [Refer to Section 5.3 (7) for the details.]
D5E	Fieldbus error (Mail BOX response)	A communication error was detected. Reboot the TTA. If the same error occurs again, please contact us.
D5F	Network I/F Module Class Mismatch Error	The setting of I/O Parameter No. 225 Network I/F Module Class does not match with that of the communication board mounted. Check the contents of the settings in I/O Parameter No. 225, and in case no doubt is found, please contact us.
D75	Fieldbus Parameter Error	There is an error in a parameter. Check I/O Parameter No. 226 to 227 and 237 to 238. Example) · A node address out of the range was set. · A communication speed out of the range is set.
D76	Fieldbus Module Unmounted Error	DeviceNet board is not mounted.
D77	Fieldbus error (Exception)	A communication board error was detected. Reboot the TTA. If the same error occurs again, please contact us.


No.	Error name	Contents and Treatment
E1F	I/O Assignment Parameter Error	It is a parameter setting error. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to TTA Instruction Manual.]
E20	I/O Duplication Assignment Error	I/O assignment is duplicated. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to TTA Instruction Manual.] Check the number of the ports that I/O boards are mounted.
E21	I/O Assignment Number Overflow Error	I/O assignment has exceeded the specified range. Check to see that a number out of the I/O port number (except for -1) is not set to I/O Parameters No. 2 to 9, a number out of indication is not input to I/O port start number, or a number out of indication is not input to I/O Parameters No. 14 to 17. [Refer to TTA Instruction Manual.] Check the number of the ports that I/O boards are mounted.
E8F	Fieldbus logic error	It is a logic error at the Fieldbus initializing.

6. Tabletop Robot TT

6.1 Model

Model: TT-□-I-□-PV

Maximum numbers of network I/O points: 240/240

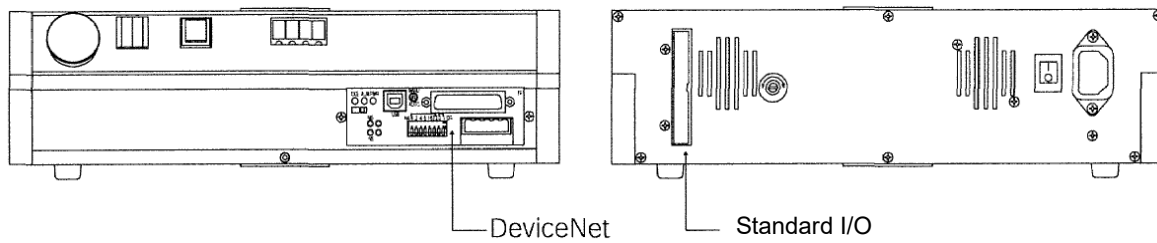

A DeviceNet board is installed in the installation position of field network board.

6.2 Interface Specifications


The DeviceNet interface specifications are summarized below.

Item	Specification			
Communication protocol	A certified DeviceNet 2.0 interface module is used (certification pending).			
	Group 2 only server			
	Network-powered insulation node			
Communication specification	Master-slave connection		Bit strobe	
			Polling	
			Cyclic	
Baud rate	500 k / 250 k / 125 kbps (selectable by DIP switches)			
Communication cable length	Baud rate	Maximum network length	Maximum branch line length	Total branch line length
	500 kbps	100 m	6 m	39 m
	250 kbps	250 m		78 m
	125 kbps	500 m		156 m
Note) When a large-size DeviceNet cable is used.				
Communication power supply	24 VDC (supplied from DeviceNet)			
Consumption current of communication power supply	60 mA			
Number of occupied nodes	1 node			
Connector	MSTBA2.5/5-G-5.08 ABGY AU (*1) by Phoenix Contact			

(*1) The cable-end connector is a standard accessory.
MSTB2.5/5-ST-5.08 ABGY AU by Phoenix Contact

6.3 DeviceNet board

6.3.1 Name of Each Part

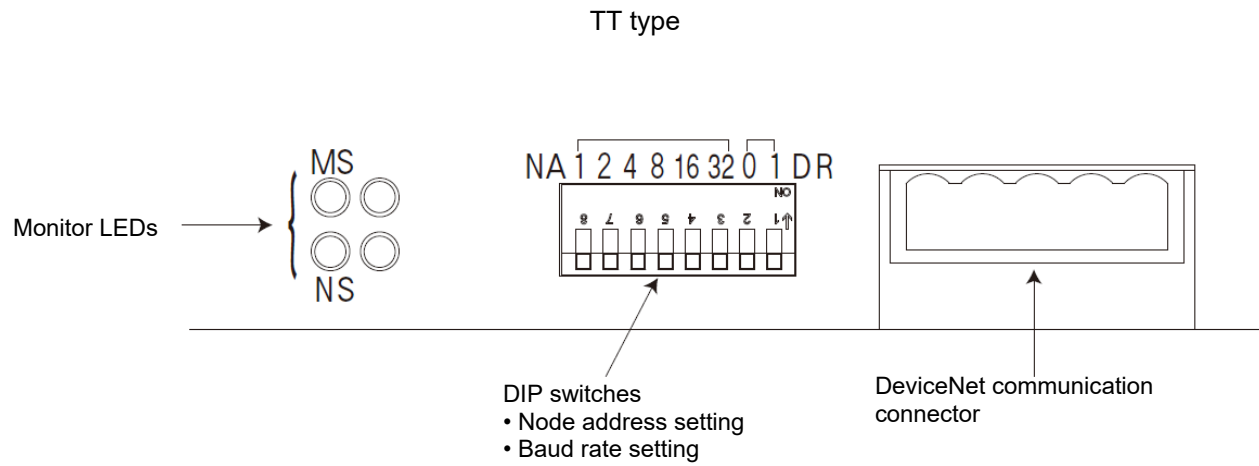

6.3.2 DIP Switch Settings

The DIP switches are used to set the following items:

- (1) Node address
- (2) Baud rate

(Note) Turn off the controller power before setting the DIP switches.

(1) Setting the node address (MAC ID)

Set the node address (MAC ID) using a hexadecimal value according to the table below.

1: ON 0: OFF

Node address (MAC ID)	DIP switches					
	NA32	NA16	NA8	NA4	NA2	NA1
0	0	0	0	0	0	0
1	0	0	0	0	0	1
2	0	0	0	0	1	0
3	0	0	0	0	1	1
⋮	⋮	⋮	⋮	⋮	⋮	⋮
60	1	1	1	1	0	0
61	1	1	1	1	0	1
62	1	1	1	1	1	0
63	1	1	1	1	1	1

(Note) The node address corresponds to the remote I/O address in the PLC. This DeviceNet card supports a maximum of 240 input points and 240 output points. Accordingly, the node address corresponding to the I/O points used will be occupied in the PLC.

Take note that all node addresses must be unique.

(For details, refer to the operation manual for the PLC.)

(2) Setting the baud rate

Set the baud rate according to the table below.

1: ON 0: OFF

Baud rate	DIP switches	
	DR1	DR0
125 kbps	0	0
250 kbps	0	1
500 kbps	1	0
Setting prohibited	1	1

6.3.3 Monitor LED Indicators

The two LEDs, MS and NS, provided on the front panel of the board are used to check the board (node) condition and network condition. (The remaining two LEDs are not currently used.)

The LEDs illuminate in two colors (red and green), and you can monitor the conditions listed in the table below based on the illumination status and color of each LED.

MS (Module Status) LED: Condition of the board (node) itself

NS (Network Status) LED: Condition of the network

LED	Color	Illumination status	Description (meaning)
MS	Green	Steady light	The board is operating normally.
		Blinking	A hardware error occurred. The board must be replaced.
	Red	Steady light	A minor error occurred, such as a DIP switch setting error or configuration error. The error can be reset by, for example, reconfiguring the applicable setting.
		Blinking	
-	Off	Power is not supplied.	
NS	Green	Steady light	Network connection has been established and the board is communicating normally.
		Blinking	The board is online, but network connection is not yet established. Communication is stopped. (The network is normal.)
	Red	Steady light	Node address duplication or bus-off state was detected. Communication is not possible.
		Blinking	A communication error occurred (communication time-out occurred).
	-	Off	<ul style="list-style-type: none"> • The board is not online. • DeviceNet power is not supplied.

Self test is performed when the power is turned on.

During the test, the monitor LEDs cycle in the following sequence:


- [1] NS turns off.
- [2] MS illuminates in steady green (approx. 0.25 second).
- [3] MS illuminates in steady red (approx. 0.25 second).
- [4] MS illuminates in steady green.
- [5] NS illuminates in steady green (approx. 0.25 second).
- [6] NS illuminates in steady red (approx. 0.25 second).
- [7] NS turns off.

When the self test is finished and the board starts communicating normally, both the MS and NS LEDs change to steady green.

6.4 Setting of I/O Parameters (Assignment of I/O Ports)

Set the TT I/O ports to be used in DeviceNet communication.

(1) Board Installation Position (Slot) and I/O Parameter Numbers

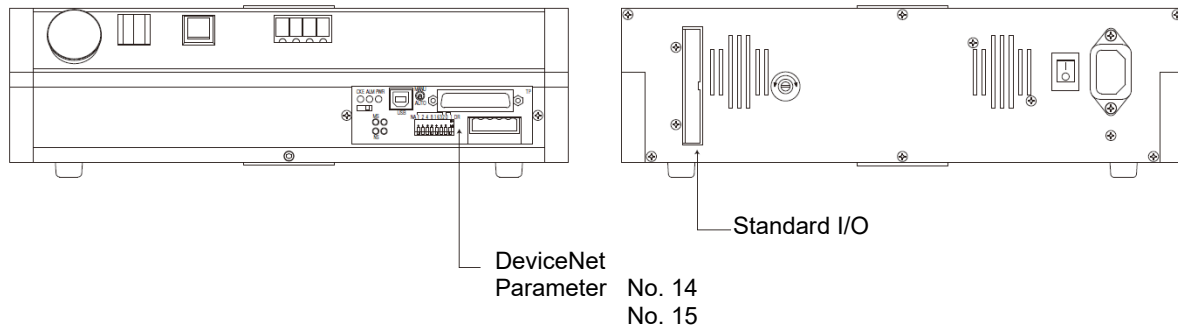

TT robots are shipped with the input ports and output ports used in DeviceNet communication both set to 64 points.

(2) Factory-set parameters for TT type

No.	Parameter name	Input range	Setting	Remarks
1	I/O port assignment type	0	Reference only	0: Fixed assignment
2	Input port start number for standard I/O1 based on fixed assignment	000	Reference only	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O1 based on fixed assignment	300	Reference only	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for standard I/O2 based on fixed assignment	32	Reference only	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
5	Output port start number for standard I/O2 based on fixed assignment	316	Reference only	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O1 based on fixed assignment (Network I/F module)	48	-1 ~ 299	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O1 based on fixed assignment (Network I/F module)	348	-1 300 ~ 599	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Reserved by the system	-1	-1 ~ 599	
9	Reserved by the system	-1	-1 ~ 599	
10	Error monitor for standard I/O1	0	0 ~ 5	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) 3: Monitor (Monitor 24-V I/O power supply errors only) * Some exceptions apply.
11	Error monitor for standard I/O2	0	0 ~ 5	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) 3: Monitor (Monitor 24-V I/O power supply errors only) * Some exceptions apply.
12	Error monitor for expansion I/O1 (Network I/F module)	1	0 ~ 5	0: Do not monitor 1: Monitor * Some exceptions apply.
13	Reserved by the system	1	0 ~ 5	
14	Number of ports used for remote input via network I/F card	64	0 ~ 240	Multiple of 16
15	Number of ports used for remote output via network I/F card	64	0 ~ 240	Multiple of 16
122	Network attribute 3	14H	0H to FFFFFFFH	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (Main application of Ver.0.31 or later)

On TT robots, the numbers of available DeviceNet ports can be changed using applicable parameters. The DeviceNet I/O port start numbers are fixed.

DeviceNet input port start No. 48

DeviceNet output port start No. 348

The I/O port numbers for standard I/Os (connected via the rear panel I/O connector) are fixed.

Standard input port Nos. 16 to 31

Standard output port Nos. 316 to 331

(3) Parameter setting example for tabletop robot TT

Assign 240 input points and 240 output points to the DeviceNet as general-purpose I/O ports.


On TT robots, the I/O port start numbers are fixed.

Input port start No. 48

Output port start No. 348

Ports are assigned in units of 16 points. Since the port start numbers are fixed, the maximum numbers of input points and output points are set to 240, respectively.

Accordingly, set "240" in I/O Parameter Nos. 14 and 15.

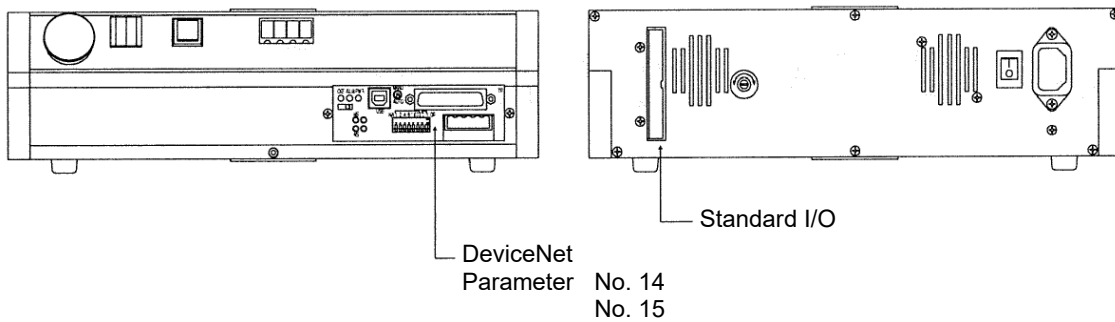

I/O parameters for TT type

No.	Parameter name	Default value	Input range	Setting	Remarks
1	I/O port assignment type	0	Reference only	0	0: Fixed assignment
2	Input port start number for standard I/O1 based on fixed assignment	000	Reference only	000	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
3	Output port start number for standard I/O1 based on fixed assignment	300	Reference only	300	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
4	Input port start number for standard I/O2 based on fixed assignment	32	Reference only	32	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
5	Output port start number for standard I/O2 based on fixed assignment	316	Reference only	316	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
6	Input port start number for expansion I/O1 based on fixed assignment (Network I/F module)	48	-1 ~ 299	48	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
7	Output port start number for expansion I/O1 based on fixed assignment (Network I/F module)	348	-1 300 ~ 599	348	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
8	Reserved by the system	-1	-1 ~ 599	-1	
9	Reserved by the system	-1	-1 ~ 599	-1	
10	Error monitor for standard I/O1	0	0 ~ 5	0	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) 3: Monitor (Monitor 24-V I/O power supply errors only) * Some exceptions apply.
11	Error monitor for standard I/O2	0	0 ~ 5	0	0: Do not monitor 1: Monitor 2: Monitor (Do not monitor 24-V I/O power supply errors) 3: Monitor (Monitor 24-V I/O power supply errors only) * Some exceptions apply.
12	Error monitor for expansion I/O1 (Network I/F module)	1	0 ~ 5	1	0: Do not monitor 1: Monitor * Some exceptions apply.
13	Reserved by the system	1	0 ~ 5	1	
14	Number of ports used for remote input via network I/F card	64	0 ~ 240	240	Multiple of 16
15	Number of ports used for remote output via network I/F card	64	0 ~ 240	240	Multiple of 16
122	Network attribute 3	14H	0H to FFFFFFFH	Optional	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (Main application of Ver.0.31 or later)


6.5 I/O Port Numbers for TT Robots

The table below lists the I/O port numbers for TT robots.
 (For details, refer to the “Controller Operation Manual for Tabletop Robot TT.”)

	Port No.	Function		Port No.	Function
Internal DI	000	Start	Internal DO	300	ALM (front panel LED)
	001	(Soft reset)		301	RDY (front panel LED)
	002	(Servo on)		302	EMG (front panel LED)
	003	(Start via auto start)		303	Auto mode
	004	(Soft interlock)		304	HPS (front panel LED)
	005	(Pause release)		305	Reserved by the system
	006	(Pause)		306	Reserved by the system
	007			307	Reserved by the system
	008	Digital program number specification		308	Internal DI-No. 001 ON/OFF
	009	switch for ones' place		309	Internal DI-No. 002 ON/OFF
	010			310	Internal DI-No. 003 ON/OFF
	011	Digital program number specification		311	Internal DI-No. 004 ON/OFF
	012	switch for tens' place		312	Internal DI-No. 005 ON/OFF
	013			313	Internal DI-No. 006 ON/OFF
	014	(Drive-source cutoff input)		314	Internal DI-No. 014 ON/OFF
015	(Home return, etc.)	315	Internal DI-No. 015 ON/OFF		
External DI	016 ~ 031	General-purpose input (rear panel I/O connector)	External DO	316 ~ 331	General-purpose output (rear panel I/O connector)
Internal DI	032	Reserved by the system	Internal DO	332	Specification for 7-segment user display digits
	033			333	Specification for 7-segment user display digits
	034			334	Reserved by the system
	035			335	Reserved by the system
	036			336	Reserved by the system
	037			337	7-segment display refresh
	038			338	7-segment user display/system display switching
	039			339	Specification for 7-segment user display
	040			340	DT0 (7-segment user display bit)
	041			341	DT1 (7-segment user display bit)
	042			342	DT2 (7-segment user display bit)
	043			343	DT3 (7-segment user display bit)
	044			344	DT4 (7-segment user display bit)
	045			345	DT5 (7-segment user display bit)
046	346	DT6 (7-segment user display bit)			
047	347	Reserved by the system			
External DI	048 ~ 287	For DeviceNet	External DO	348 ~ 587	For DeviceNet

Reference

Port numbers are assigned to bit addresses in the PLC in units of 16 points, starting from the channel corresponding to the node address set with the DIP switches.
 (This does not apply if a configurator is used to assign port numbers.)

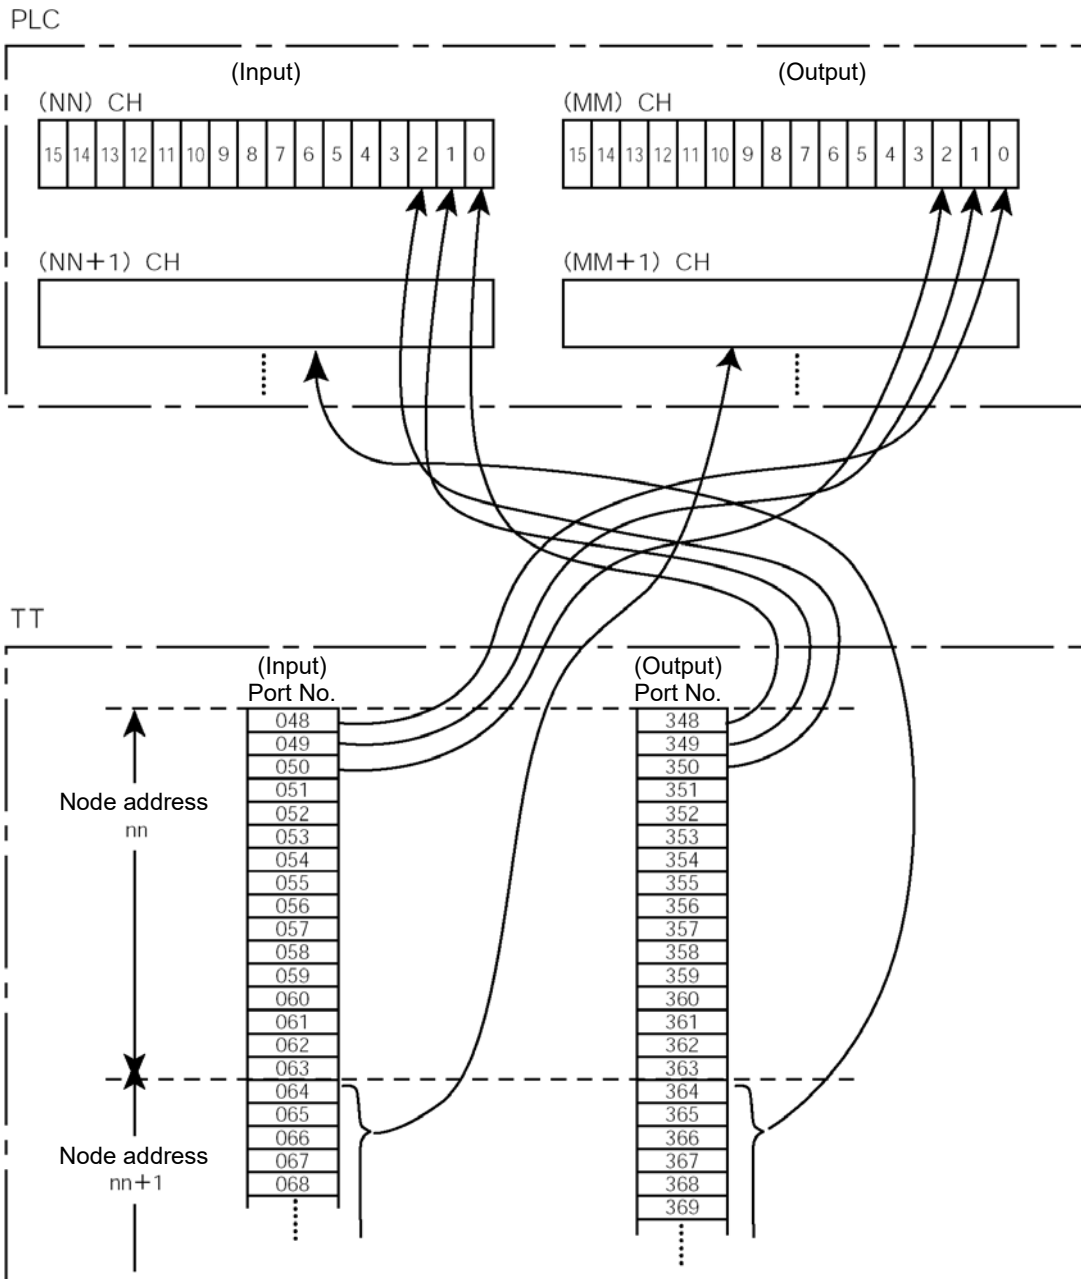

(NN) CH and (MM) CH as indicated above represent PLC channel addresses corresponding to node address nn.
 As for nn, nn+1, nn+2, etc., bit addresses corresponding to each node address are occupied in accordance with the numbers of I/O points used. Accordingly, exercise caution to prevent node address duplication.

7. RCS-C and E-Con


7.1 Model

DeviceNet-ready RCS-C and E-Con controllers are shown below.


(1) RCS-C

Model: RCS-C-□-DV-□-□

Number of I/O points: 8 dedicated input points, 10 dedicated output points

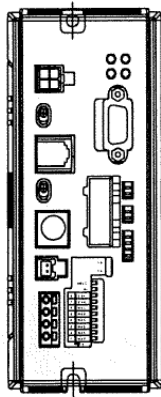

24-V type

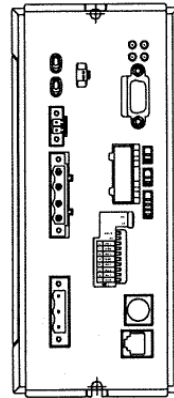


100-V/200-V types

(2) E-Con

Model: ECON-□-□-DV-□-□

Number of I/O points: 10 dedicated input points, 12 dedicated output points

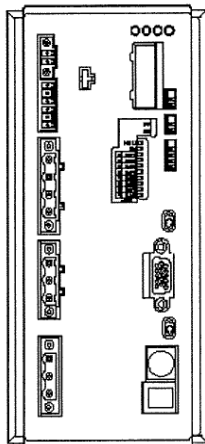

7.2 Interface Specifications


Item	Specification			
Communication protocol	DeviceNet 2.0 (*1)			
	Group 2 only server			
	Network-powered insulation node			
Support connection	Master-slave connection		Bit strobe	
			Polling	
Baud rate	500 k / 250 k / 125 kbps (selectable by DIP switches)			
Communication cable length	Baud rate	Maximum network length	Maximum branch line length	Total branch line length
	500 kbps	100 m	6 m	39 m
	250 kbps	250 m		78 m
	125 kbps	500 m		156 m
Note) When a large-size DeviceNet cable is used.				
Communication power supply	24 VDC (supplied from DeviceNet)			
Consumption current of communication power supply	60 mA			
Number of occupied nodes	1 node			
Connector	MSTBA2.5/5-G-5.08 AU (*2) by Phoenix Contact			

(*1) RCS-C controllers are already certified (test version 15).
Certification is pending for E-Con controllers.

(*2) The cable-end connector is a standard accessory.
SMSTB2.5/5-ST-5.08 AU by Phoenix Contact

7.3 DeviceNet Interface

7.3.1 Name of Each Part

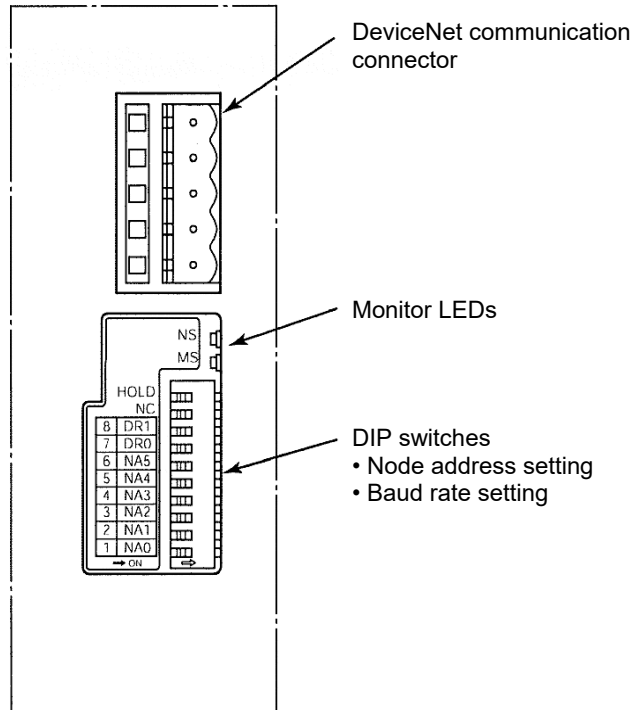

7.3.2 DIP Switch Settings

The DIP switches are used to set the following items:

- (1) Node address
- (2) Baud rate

(Note) Turn off the controller power before setting the DIP switches.

(1) Setting the node address (MAC ID)

Set the node address (MAC ID) using a hexadecimal value according to the table below.

1: ON 0: OFF

Node address (MAC ID)	DIP switches					
	NA5	NA4	NA3	NA2	NA1	NA0
0	0	0	0	0	0	0
1	0	0	0	0	0	1
2	0	0	0	0	1	0
3	0	0	0	0	1	1
⋮	⋮	⋮	⋮	⋮	⋮	⋮
60	1	1	1	1	0	0
61	1	1	1	1	0	1
62	1	1	1	1	1	0
63	1	1	1	1	1	1

(Note) The node address corresponds to the remote I/O address in the PLC. (For details, refer to the operation manual for the PLC.)

(2) Setting the baud rate

Set the baud rate according to the table below.

1: ON 0: OFF

Baud rate	DIP switches	
	DR1	DR0
125 kbps	0	0
250 kbps	0	1
500 kbps	1	0
Setting prohibited	1	1

7.3.3 Monitor LED Indicators

The two LEDs, MS and NS, provided on the front panel of the controller are used to check the interface (node) condition and network condition.

The LEDs illuminate in two colors (red and green), and you can monitor the conditions listed in the table below based on the illumination status and color of each LED.

MS (Module Status) LED: Condition of the interface (node) itself

NS (Network Status) LED: Condition of the network

LED	Color	Illumination status	Description (meaning)	
MS	Green	Steady light	The board is operating normally.	
		Blinking	A hardware error occurred. The controller must be repaired.	
	Red	Steady light	A minor error occurred, such as a DIP switch setting error or configuration error. The error can be reset by, for example, reconfiguring the applicable setting.	
		Blinking	A minor error occurred, such as a DIP switch setting error or configuration error. The error can be reset by, for example, reconfiguring the applicable setting.	
-	Off	Power is not supplied.		
NS	Green	Steady light	Network connection has been established and the board is communicating normally.	
		Blinking	The board is online, but network connection is not yet established. Communication is stopped. (The network is normal.)	
	Red	Steady light	Node address duplication or bus-off state was detected. Communication is not possible.	
		Blinking	A communication error occurred (communication time-out occurred).	
	-	Off		<ul style="list-style-type: none"> • The board is not online. • DeviceNet power is not supplied.

Self test is performed when the power is turned on.

During the test, the monitor LEDs cycle in the following sequence:

- [1] NS turns off.
- [2] MS illuminates in steady green (approx. 0.25 second).
- [3] MS illuminates in steady red (approx. 0.25 second).
- [4] MS illuminates in steady green.
- [5] NS illuminates in steady green (approx. 0.25 second).
- [6] NS illuminates in steady red (approx. 0.25 second).
- [7] NS turns off.

When the self test is finished and the board starts communicating normally, both the MS and NS LEDs change to steady green.

7.4 Input/Output (I/O)

The I/O specifications of RCS-C and E-Con controllers are as follows:

- (1) RCS-C: 8 dedicated input points, 10 dedicated output points
- (2) E-Con: 10 dedicated input points, 12 dedicated output points

The details are explained below.

(For details on each signal, refer to the “Operation Manual for RCS Series ROBO Cylinder Controller, RCS-C Type” or “Operation Manual for E-Con Controller.”)

(1) RCS-C signal assignments

8-bit input		10-bit output	
Input No.	Signal name	Output No.	Signal name
0	Command position 1	0	Completed position 1
1	Command position 2	1	Completed position 2
2	Command position 4	2	Completed position 4
3	Command position 8	3	Completed position 8
4	Start	4	Position complete
5	Reset	5	Home return complete
6	Servo on	6	Zone
7	*Pause	7	*Alarm
8	Not used	8	*Emergency stop
9	Not used	9	Moving
10	Not used	10	*Battery alarm (Note 1)
11	Not used	11	Not used (Note 2)
12	Not used	12	Not used
13	Not used	13	Not used
14	Not used	14	Not used
15	Not used	15	Not used

The signals denoted by * are always ON.

(Note 1) This signal is available only on controllers that operate on a mains voltage of 100 or 200 V. The ON/OFF state of the signal is indeterminable on 24-VDC controllers.

(Note 2) The ON/OFF state of signals denoted by “Not used” is indeterminable.

(2) E-Con signal assignments

10-bit input		12-bit output	
Input No.	Signal name	Output No.	Signal name
0	Command position 1	0	Completed position 1
1	Command position 2	1	Completed position 2
2	Command position 4	2	Completed position 4
3	Command position 8	3	Completed position 8
4	Command position 16	4	Completed position 16
5	Command position 32	5	Completed position 32
6	Not used	6	Not used (Note 2)
7	Not used	7	Not used (Note 2)
8	Start	8	Position complete
9	Reset	9	Home return complete
10	Servo on	10	Zone
11	*Pause	11	*Alarm
12	Not used	12	*Emergency stop
13	Not used	13	Moving
14	Not used	14	*Battery alarm (Note 1)
15	Not used	15	Not used (Note 2)


The signals denoted by * are always ON.

(Note 1) The ON/OFF state of this signal is indeterminable if an incremental encoder is used.

(Note 2) The ON/OFF state of signals denoted by "Not used" is indeterminable.

Reference

Inputs and outputs are assigned to bit addresses in the PLC sequentially from the youngest number, for the channel corresponding to the node address set with the DIP switches.

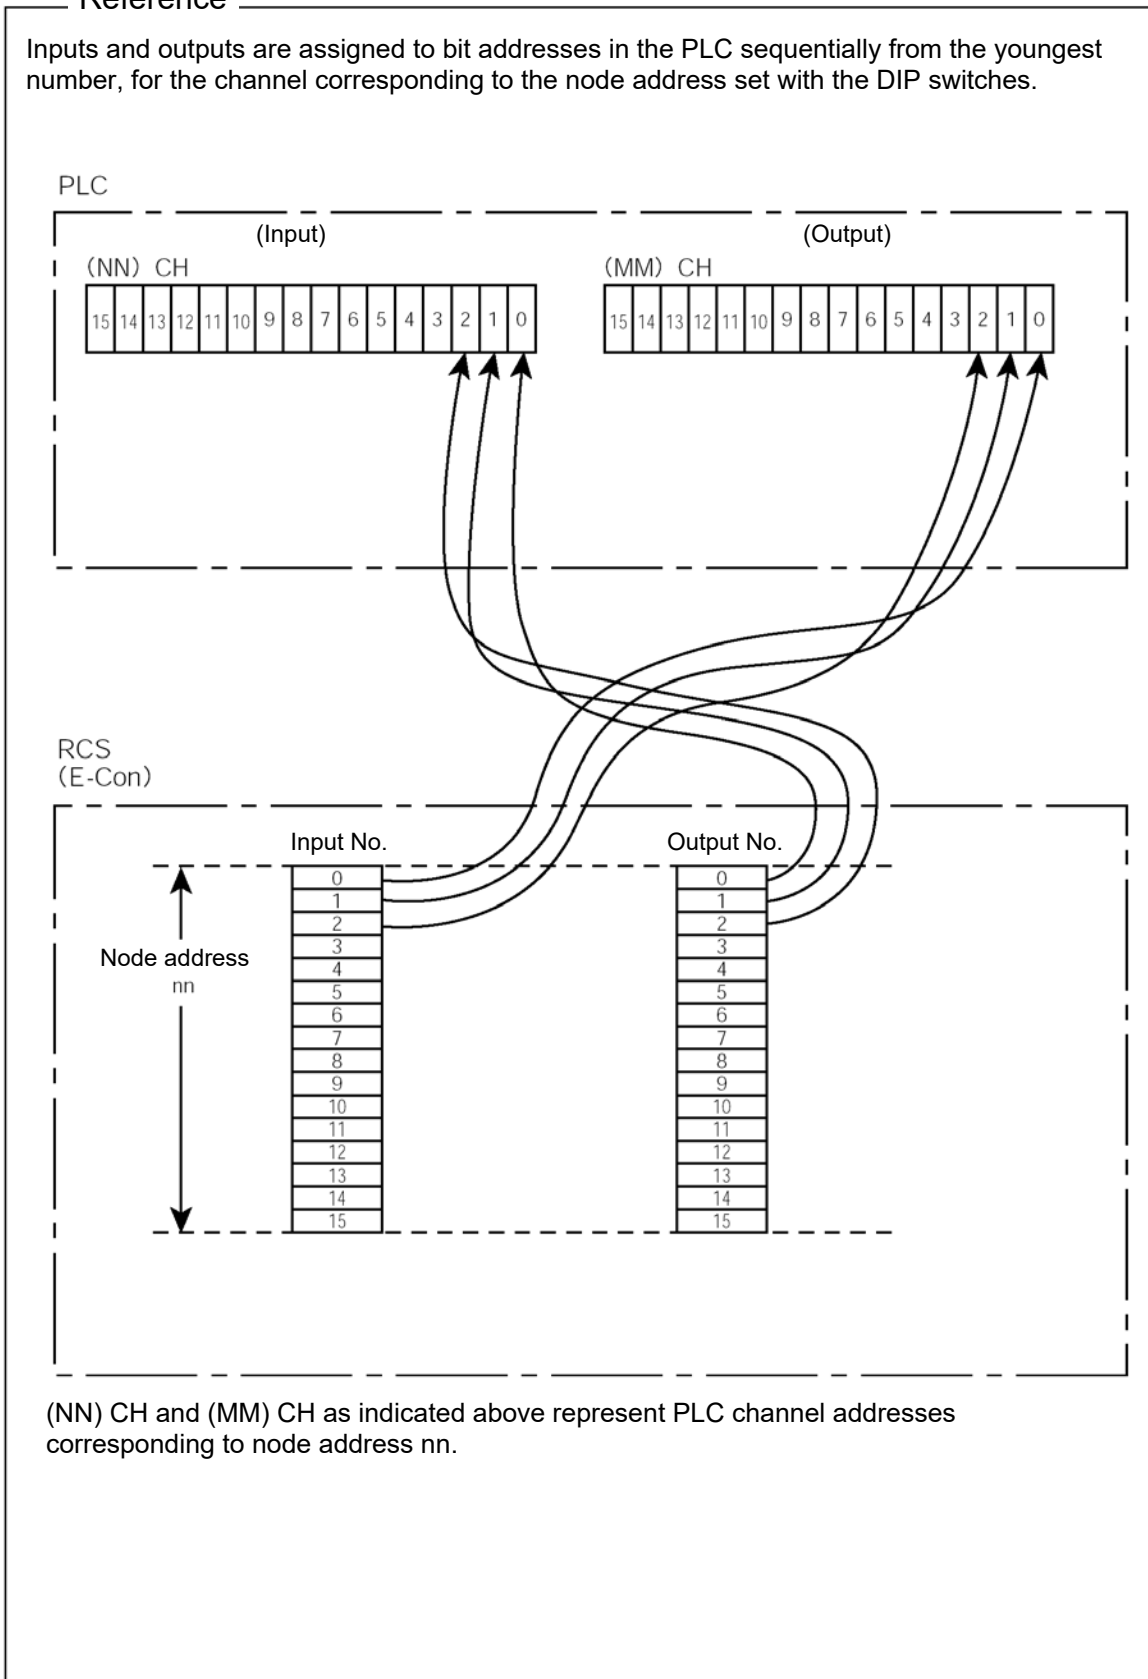

(NN) CH and (MM) CH as indicated above represent PLC channel addresses corresponding to node address nn.


8. SCON-C

8.1 Model

A DeviceNet-ready SCON-C controller is shown below.
SCON

Model: SCON-C-□□-DV-□-□

Number of I/O points: 16 dedicated input points, 16 dedicated output points

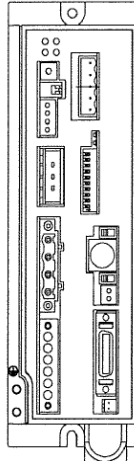


8.2 Interface Specifications

Item	Specification			
Communication protocol	DeviceNet 2.0			
	Group 2 only server			
	Network-powered insulation node			
Support connection	Master-slave connection		Bit strobe	
			Polling	
Baud rate	500 k / 250 k / 125 kbps (selectable by DIP switches)			
Communication cable length	Baud rate	Maximum network length	Maximum branch line length	Total branch line length
	500 kbps	100 m	6 m	39 m
	250 kbps	250 m		78 m
	125 kbps	500 m		156 m
Note) When a large-size DeviceNet cable is used.				
Communication power supply	24 VDC (supplied from DeviceNet)			
Consumption current of communication power supply	60 mA			
Number of occupied nodes	1 node			
Connector	MSTBA2.5/5-G-5.08 AU (*1) by Phoenix Contact			

(*1) The cable-end connector is a standard accessory.
SMSTB2.5/5-ST-5.08 AU by Phoenix Contact

8.3 DeviceNet Interface

8.3.1 Name of Each Part

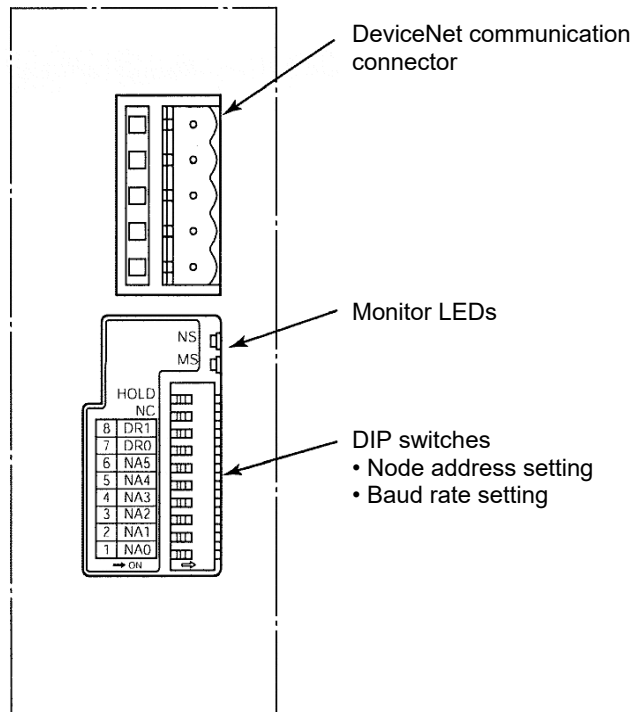

8.3.2 DIP Switch Settings

The DIP switches are used to set the following items:

- (1) Node address
- (2) Baud rate

(Note) Turn off the controller power before setting the DIP switches.

(1) Setting the node address (MAC ID)

Set the node address (MAC ID) using a hexadecimal value according to the table below.

1: ON 0: OFF

Node address (MAC ID)	DIP switches					
	NA5	NA4	NA3	NA2	NA1	NA0
0	0	0	0	0	0	0
1	0	0	0	0	0	1
2	0	0	0	0	1	0
3	0	0	0	0	1	1
⋮	⋮	⋮	⋮	⋮	⋮	⋮
60	1	1	1	1	0	0
61	1	1	1	1	0	1
62	1	1	1	1	1	0
63	1	1	1	1	1	1

(Note) The node address corresponds to the remote I/O address in the PLC. (For details, refer to the operation manual for the PLC.)

(2) Setting the baud rate

Set the baud rate according to the table below.

1: ON 0: OFF

Baud rate	DIP switches	
	DR1	DR0
125 kbps	0	0
250 kbps	0	1
500 kbps	1	0
Setting prohibited	1	1

8.3.3 Monitor LED Indicators

The two LEDs, MS and NS, provided on the front panel of the controller are used to check the interface (node) condition and network condition.

The LEDs illuminate in two colors (red and green), and you can monitor the conditions listed in the table below based on the illumination status and color of each LED.

MS (Module Status) LED: Condition of the interface (node) itself

NS (Network Status) LED: Condition of the network

LED	Color	Illumination status	Description (meaning)
MS	Green	Steady light	The board is operating normally.
	Red	Steady light	A hardware error occurred. The controller must be repaired.
		Blinking	A minor error occurred, such as a DIP switch setting error or configuration error. The error can be reset by, for example, reconfiguring the applicable setting.
	-	Off	Power is not supplied.
NS	Green	Steady light	Network connection has been established and the board is communicating normally.
		Blinking	The board is online, but network connection is not yet established. Communication is stopped. (The network is normal.)
	Red	Steady light	Node address duplication or bus-off state was detected. Communication is not possible.
		Blinking	A communication error occurred (communication time-out occurred).
	-	Off	<ul style="list-style-type: none"> • The board is not online. • DeviceNet power is not supplied.

Self test is performed when the power is turned on.

During the test, the monitor LEDs cycle in the following sequence:

- [1] NS turns off.
- [2] MS illuminates in steady green (approx. 0.25 second).
- [3] MS illuminates in steady red (approx. 0.25 second).
- [4] MS illuminates in steady green.
- [5] NS illuminates in steady green (approx. 0.25 second).
- [6] NS illuminates in steady red (approx. 0.25 second).
- [7] NS turns off.

When the self test is finished and the board starts communicating normally, both the MS and NS LEDs change to steady green.

8.4 Assignment of I/O Signals

The I/O specifications of SCON controllers are as follows:

16 dedicated input points, 16 dedicated output points

The details are explained below.

Six I/O patterns are available, from which a desired pattern can be selected using Parameter No. 25 (PIO pattern selection).

For details on each signal, refer to the "Operation Manual for SCON Controller."

		Setting of Parameter No. 25					
		Positioning mode (standard)		Teaching mode (teaching type)		256-point mode (256-point type)	
		0		1		2	
Category	Port No.	Signal name	Symbol	Signal name	Symbol	Signal name	Symbol
Input	0	Command position number	PC1	Command position number	PC1	Command position number	PC1
	1		PC2		PC2		PC2
	2		PC4		PC4		PC4
	3		PC8		PC8		PC8
	4		PC16		PC16		PC16
	5		PC32		PC32		PC32
	6	Not available.	-	Teaching mode command (operation mode)	MODE	Not available.	PC64
	7		-	Jog/inch switching	JISL		PC128
	8		-	+Jog	JOG+		-
	9	Forced brake release	BKRL	-Jog	JOG-	Forced brake release	BKRL
	10	Operation mode	RMOD	Operation mode	RMOD	Operation mode	RMOD
	11	Home return	HOME	Home return	HOME	Home return	HOME
	12	Pause	*STP	Pause	*STP	Pause	*STP
	13	Positioning start	CSTR	Positioning start/position-data read command	CSTR/PWRT	Positioning start	CSTR
	14	Reset	RES	Reset	RES	Reset	RES
15	Servo ON command	SON	Servo ON command	SON	Servo ON command	SON	
Output	0	Completed position number	PM1	Completed position number	PM1	Completed position number	PM1
	1		PM2		PM2		PM2
	2		PM4		PM4		PM4
	3		PM8		PM8		PM8
	4		PM16		PM16		PM16
	5		PM32		PM32		PM32
	6	Moving signal	MOVE	Moving signal	MOVE	Moving signal	PM64
	7	Zone 1	ZONE1	Teaching mode signal	MODES	Zone 1	PM128
	8	Position zone	PZONE	Position zone	PZONE	Position zone	PZONE
	9	Operation mode status	RMDS	Operation mode status	RMDS	Operation mode status	RMDS
	10	Home return complete	HEND	Home return complete	HEND	Home return complete	HEND
	11	Position complete signal	PEND	Position complete signal/position-data read complete	PEND/WEND	Position complete signal	PEND
	12	Ready	SV	Ready	SV	Ready	SV
	13	Emergency stop	*EMGS	Emergency stop	*EMGS	Emergency stop	*EMGS
	14	Alarm	*ALM	Alarm	*ALM	Alarm	*ALM
15	Battery alarm	*BALM	Battery alarm	*BALM	Battery alarm	*BALM	

The signals indicated by * are ON in a normal state.

The signals denoted by "Not available" are not controlled (their ON/OFF status is indeterminable).

The battery alarm signal is always (mount to) ON if an incremental encoder is used.


		Setting of Parameter No. 25					
		512-point mode		Solenoid mode 1		Solenoid mode 2	
		3		4		5	
Category	Port No.	Signal name	Symbol	Signal name	Symbol	Signal name	Symbol
Input	0	Command position number	PC1	Start position 0	ST0	Start position 0	STO
	1		PC2	Start position 1	ST1	Start position 1	ST1
	2		PC4	Start position 2	ST2	Start position 2	ST2
	3		PC8	Start position 3	ST3	Not available.	-
	4		PC16	Start position 4	ST4		-
	5		PC32	Start position 5	ST5		-
	6		PC64	Start position 6	ST6		-
	7		PC128	Not available.	-	-	-
	8	PC256	-		-	-	
	9	Forced brake release	BKRL	Forced brake release	BKRT	Forced brake release	BKRL
	10	Operation mode	RMOD	Operation mode	RMOD	Operation mode	RMOD
	11	Home return	HOME	Home return	HOME	Not available.	-
	12	Pause	*STP	Pause	*STP		-
	13	Positioning start	CSTR	Not available.	-		-
	14	Reset	RES	Reset	RES	Reset	RES
15	Servo ON command	SON	Servo ON command	SON	Servo ON command	SON	
Output	0	Completed position number	PM1	Position 0 complete	PE0	Limit switch 0	LS0
	1		PM2	Position 1 complete	PE1	Limit switch 1	LS1
	2		PM4	Position 2 complete	PE2	Limit switch 2	LS2
	3		PM8	Position 3 complete	PE3	Not available.	-
	4		PM16	Position 4 complete	PE4		-
	5		PM32	Position 5 complete	PE5		-
	6		PM64	Position 6 complete	PE6		-
	7		PM128	Zone 1	ZONE1	Zone 1	ZONE1
	8	PM256	Position zone	PZONE	Position zone	PZONE	
	9	Operation mode output	RMDS	Operation mode output	RMDS	Operation mode output	RMDS
	10	Home return complete	HEND	Home return complete	HEND	Home return complete	HEND
	11	Position complete signal	PEND	Position complete signal	PEND	Not available.	-
	12	Ready	SV	Ready	SV	Ready	SV
	13	Emergency stop	*EMGS	Emergency stop	*EMGS	Emergency stop	*EMGS
	14	Alarm	*ALM	Alarm	*ALM	Alarm	*ALM
15	Battery alarm	*BALM	Battery alarm	*BALM	Battery alarm	*BALM	

The signals indicated by * are ON in a normal state.

The signals denoted by "Not available" are not controlled (their ON/OFF status is indeterminable).

The battery alarm signal is always (mount to) ON if an incremental encoder is used.

8.5 Assignment of DeviceNet Addresses

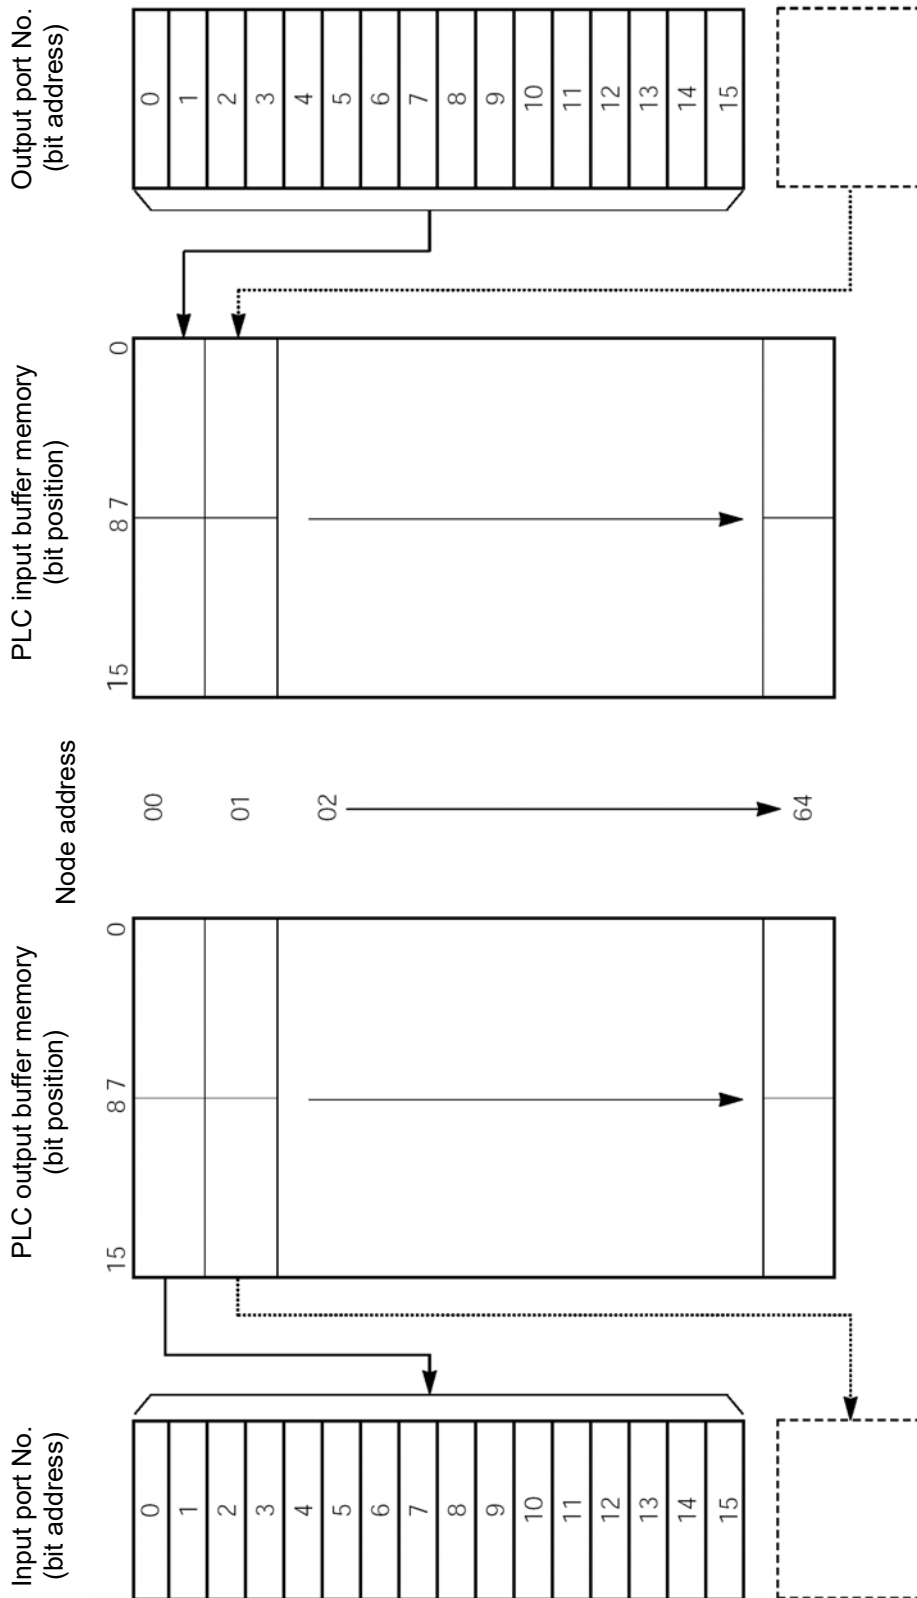

- The above figure assumes that the node address of the controller's DeviceNet board is set to "0."
- I/O ports are assigned in units of 16 points to the memory area corresponding to one DeviceNet node address.
- I/P ports are assigned sequentially from the youngest number, to the bits in the buffer memory starting from the lower bit.

9. ASEL, PSEL and SSEL

ASEL, PSEL and SSEL controllers of DeviceNet specification can handle up to 256 input points and 256 output points.


9.1 Models

9.1.1 ASEL, PSEL

The ASEL and PSEL models supporting DeviceNet are respectively indicated as follows:

- 1 axis
- ASEL-CS-1-□-DV-□
- PSEL-CS-1-□-DV-□
- 2 axes
- ASEL-CS-2-□-DV-□
- PSEL-CS-2-□-DV-□

Exterior view

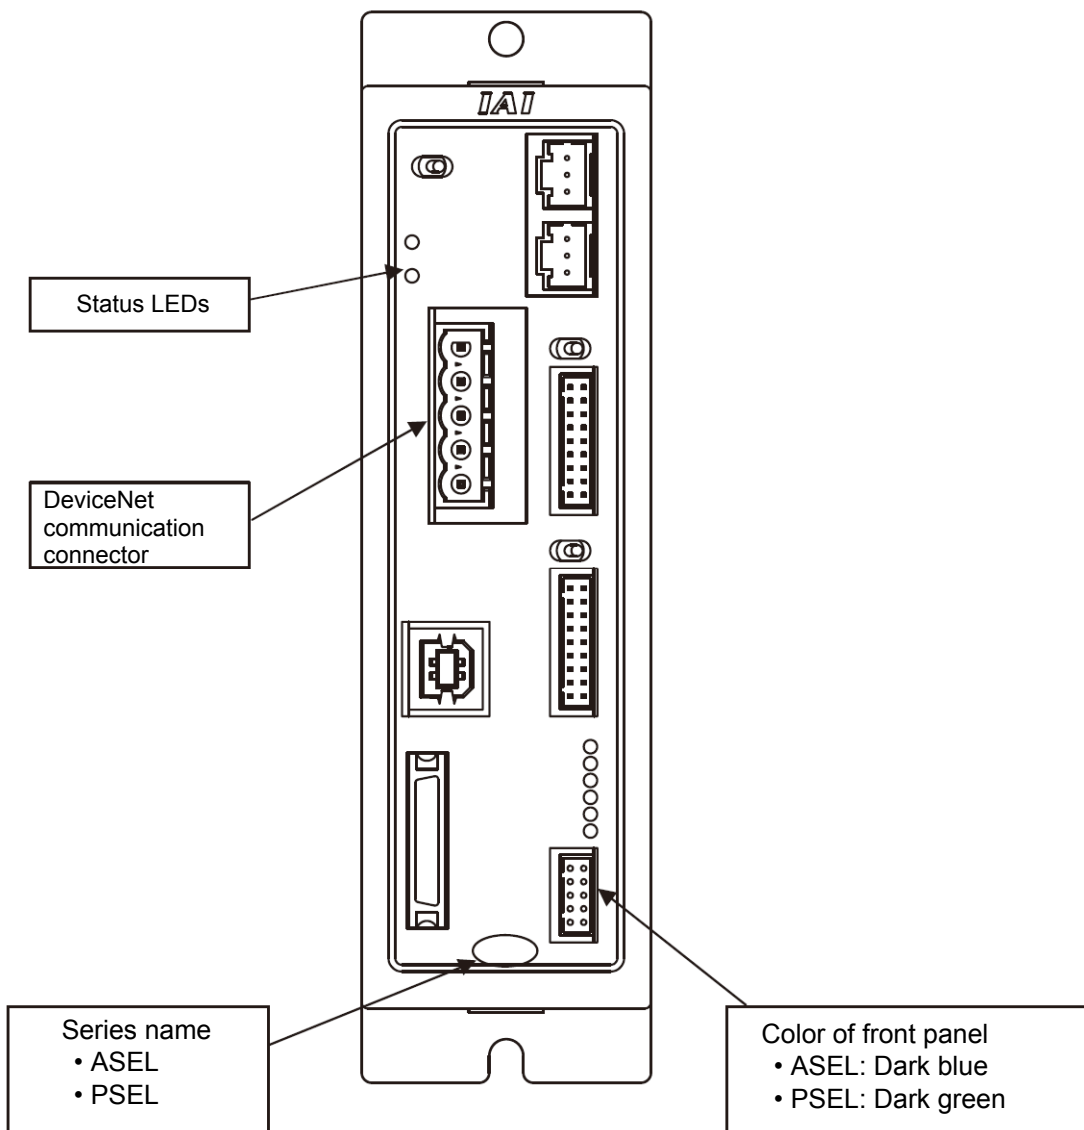

9.1.2 SSEL

The SSEL models supporting DeviceNet are indicated as follows:


1 axis

SSEL-CS-1-□-DV-□

2 axes

SSEL-CS-2-□-DV-□

Exterior view

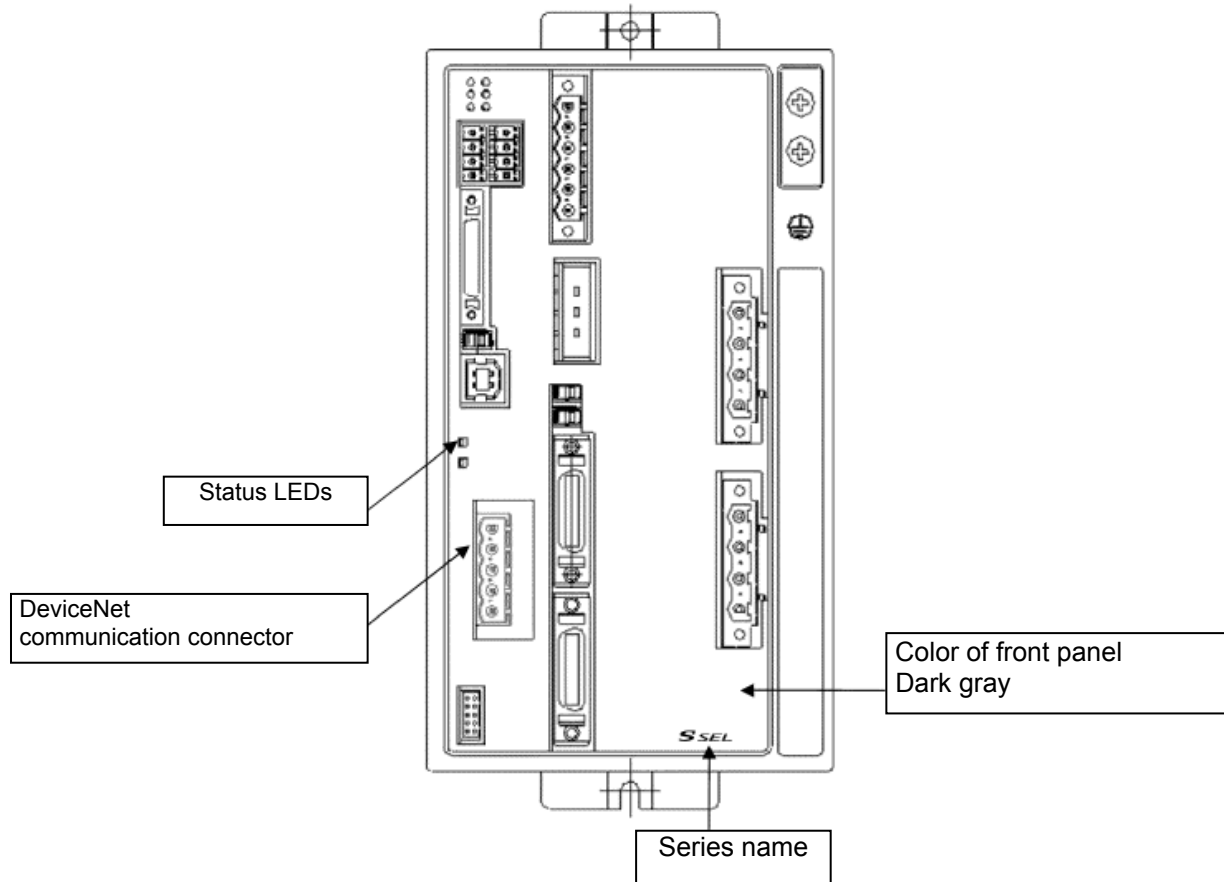

9.2 Interface Specifications

Item	Specification			
Communication protocol	DeviceNet 2.0.			
	Group 2 only server			
	Network-powered insulation node			
Communication specification	Master-slave connection		Bit strobe	
			Polling	
Baud rate	500 k / 250 k / 125 kbps (automatically set to the same value as the band rate set in the master)			
Communication cable length	Baud rate	Maximum network length	Maximum branch line length	Total branch line length
	500 kbps	100 m	6 m	39 m
	250 kbps	250 m		78 m
	125 kbps	500 m		156 m
	Note) When a large-size DeviceNet cable is used.			
Communication power supply	24 VDC (supplied from DeviceNet)			
Consumption current of communication power supply	Typ. 30mA/Max. 55 mA			
Number of occupied nodes	1 node			
Connector	MSTBA2.5/5-G-5.08 AU (*1) by Phoenix Contact			


(*1) The cable-end connector is a standard accessory.
SMSTB2.5/5-ST-5.08 AU by Phoenix Contact

9.3 DeviceNet Interface

(1) Name of Each Part

●ASEL, PSEL

●SSEL

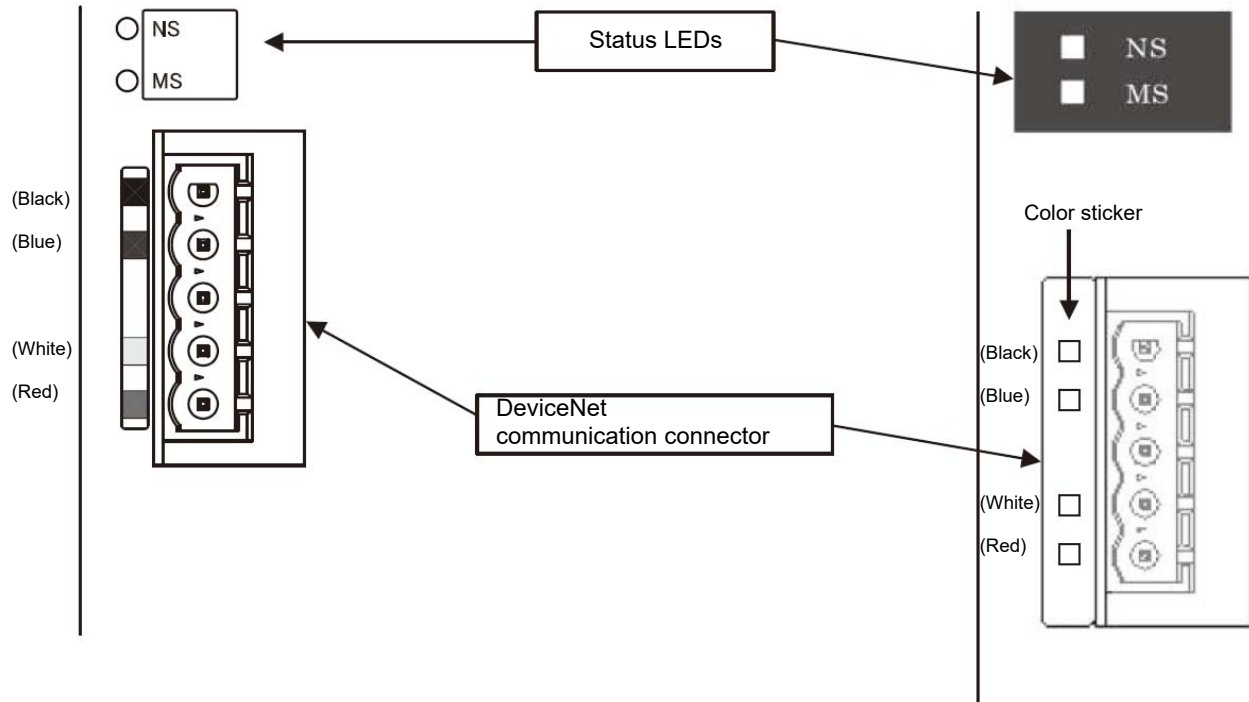

(2) Status LED indications

The operating condition of the DeviceNet board, as well as network condition, can be checked using the two LEDs provided on the front panel of the controller.

NS (Network Status) LED: Condition of DeviceNet communication

MS (Module Status) LED: Condition of the controller (node)

LED	Color	Illumination status	Description
NS	Green	Steady light	Connection has been established and communication is being performed properly.
		Blinking (1Hz)	The status is online, but connection is not established yet. Communication is stopped (network is normal).
	Orange	Steady light	Communication is disabled due to a node address duplication or bus OFF error.
		Blinking (1Hz)	A communication error has occurred due to a timeout.
	-	Off	The status is not online. <ul style="list-style-type: none"> • Still checking the baud rate • Still checking for node address duplication • DeviceNet power is not supplied. • A WDT (watchdog timer) error is present.
MS	Green	Steady light	The controller is operating normally (initialization has completed).
		Blinking (1Hz)	A user interruption timeout has occurred.
	Orange	Steady light	A hardware error, DP-RAM error or WDT (watchdog timer) error is present.
		Blinking (1Hz)	A user setting error or EEP-ROM checksum error is present.
	-	Off	Power is not supplied to the fieldbus module. The controller is being initialized.

A self-test is performed when the power is turned on. Both the NS and MS LEDs alternate between orange and green during the self-test. Once the self-test has completed and the DeviceNet/controller conditions have been confirmed normal, both LEDs change to a steady green light.

(3) DeviceNet connectors

The following connectors by Phoenix Contact are used for the board-end and cable-end connectors:

Board-end connector: MSTBA2.5/5-G-5.08 AU

Cable-end connector: SMSTB2.5/5-ST-5.08 AU

Color stickers corresponding to the wire colors are attached on each connector.

The cable-end connector is a standard accessory.

For the details of signals assigned to respective pins, refer to Chapter 9, "Common Items and Others."



Caution

- (1) The baud rate is automatically set to the same value as the baud rate set in the master. Accordingly, you need not set the baud rate.
- (2) The node address is set by I/O parameter No. 226.

9.4 Setting of I/O Parameters

Set the node address, I/O ports and other parameters of the of the ASEL, PSEL and SSEL controller used for DeviceNet communication.

(1) Network type setting

I/O parameter No. 225, "Network I/F module control" has been set to "2H" (DeviceNet) at the factory. (This parameter need not be set.)

(2) Node address

Set the node address in I/O parameter No. 226, "Network I/F module – Communication attribute 1." The setting range is 0 to 63. (Factory setting: 0)

(Note) If the set address is outside the above range, "D75: Fieldbus parameter error" will occur.

(3) I/O port assignments

Set the numbers of physical input/output ports of the ASEL, PSEL or SSEL used on the DeviceNet system, as well as port assignments, in the I/O parameters specified below:

- | | | |
|--------|---|------------|
| No. 1 | "I/O port assignment type" | } See 6.5. |
| No. 14 | "Network I/F module – Number of available remote input ports" | |
| No. 15 | "Network I/F module – Number of available remote output ports" | |
| No. 16 | "Network I/F module – First input port number based on mount assignment" | |
| No. 17 | "Network I/F module – First output port number based on mount assignment" | |

For details, refer to "List of ASEL, PSEL, SSEL network I/O parameters" on the next page.

(Note) With ASEL, PSEL and SSEL controllers, the following I/O parameters are invalid when the DeviceNet module is used. Even if these parameters are set, they will not affect the numbers of available DeviceNet ports, assigned port numbers, etc.

- No. 2 "Standard I/O – First input port number based on mount assignment (I/O1)"
- No. 3 "Standard I/O – First output port number based on mount assignment (I/O1)"
- No. 10 "Standard I/O – Error monitor"

(4) Network error monitor

Set whether or not to monitor the network using I/O parameter No. 18, "Network I/F module – Error monitor."

Set the error check time in bits 4 to 11 of I/O parameter No. 120, "Network attribute 1."

A system error will generate if a network link error occurs and remains for the time set in parameter No. 120 or longer.

For details, refer to the "List of ASEL, PSEL, SSEL network I/O parameters" on the next page.

List of ASEL, PSEL and SSEL network I/O parameters

No.	Parameter name	Factory setting	Input range	Remarks
1	I/O port assignment type	0	0~20	0: Fixed assignment 1: Automatic assignment
14	Network I/F module – Number of available remote input ports	64	0~256	Multiple of 8
15	Network I/F module – Number of available remote output ports	64	0~256	Multiple of 8
16	Network I/F module – First input port number based on mount assignment	0	-1~299	0 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
17	Network I/F module – First output port number based on mount assignment	300	-1 300~599	300 + (multiple of 8) (Invalid, if a value is entered with a negative sign.)
18	Network I/F module – Error monitor	1	0~5	0: Do not monitor 1: Monitor * If a network link error status has continued for at least the network-link error check timer value, a system error will occur. (Refer to I/O parameter No. 120.) * Some exceptions apply.
120	Network attribute 1	1H	0H~ FFFFFFFFH	Bits 0 to 3: Reserved by the system. Bits 4 to 11: Network-link error check timer value (Setting unit: 10 msec) This parameter is valid only when I/O parameter No. 18 is set to "1." (Example) If the set value (bits 4 to 11) is "05H," the timer period becomes 10 ms x 5 = 50 ms. If the set value is "0H," a system error will occur immediately upon occurrence of a network link error.
121	Network attribute 2	C80000H	0H~ FFFFFFFFH	Bit 16 to 27: Value of Link Timeout at initializing of the Fieldbus (100msec) (ASEL/PSEL: Main application of Ver.0.36 or later SSEL: Main application of Ver.0.42 or later) (Example) The initial value C80000H is bit 16 to 27 = C8H = 200 (in 100ms unit) 200 x 100ms = 20sec It waits for communication to be established for 20sec at the maximum from the startup.

No.	Parameter name	Factory setting	Input range	Remarks
122	Network Attribute 3	10H	0H~ FFFFFFFFH	Bits 0 to 11: "PC/TP Reconnection Latency at Software Reset" added time (sec) when fieldbus in use * Valid Values from 0 to 500 (sec) (ASEL/PSEL: Main application of Ver.0.36 or later SSEL: Main application of Ver.0.42 or later)
225	Network I/F module control	2H	Read only	Bits 0 to 3: Network I/F module type (0: Not installed, 1: CC-Link module, 2: DeviceNet module)
226	Network I/F module – Communication attribute 1	0	0~999	Node address of the network I/F module * DeviceNet module: 0 to 63
227	Network I/F module – Communication attribute 2	0H	0H~ FFFFFFFFH	Bits 0 to 3: Baud rate type of the network I/F module * With the DeviceNet module, the baud rate is automatically set to the same value as the baud rate set in the master. Accordingly, you need not set the baud rate.


9.5 Assignment of I/O Port Numbers and DeviceNet Addresses

ASEL, PSEL and SSEL controllers provide the program mode and positioner mode, but the principles of how ports and addresses are assigned are the same in both modes. To be specific, I/O port numbers are assigned in units of 16 points from the channel addresses in the PLC buffer memory corresponding to the specified node address. Bits in the PLC buffer memory are assigned to the I/O port numbers, starting from the least significant bit and the youngest port number.

(1) Basic example

The figure below shows the correlation of relevant items when the I/O parameters are set as follows:

- No. 16 = 0 (First input port number)
- No. 17 = 300 (First output port number)
- No. 14 = No. 15 = 16 (Numbers of input/output ports)
- No. 266 = nn (Node address)

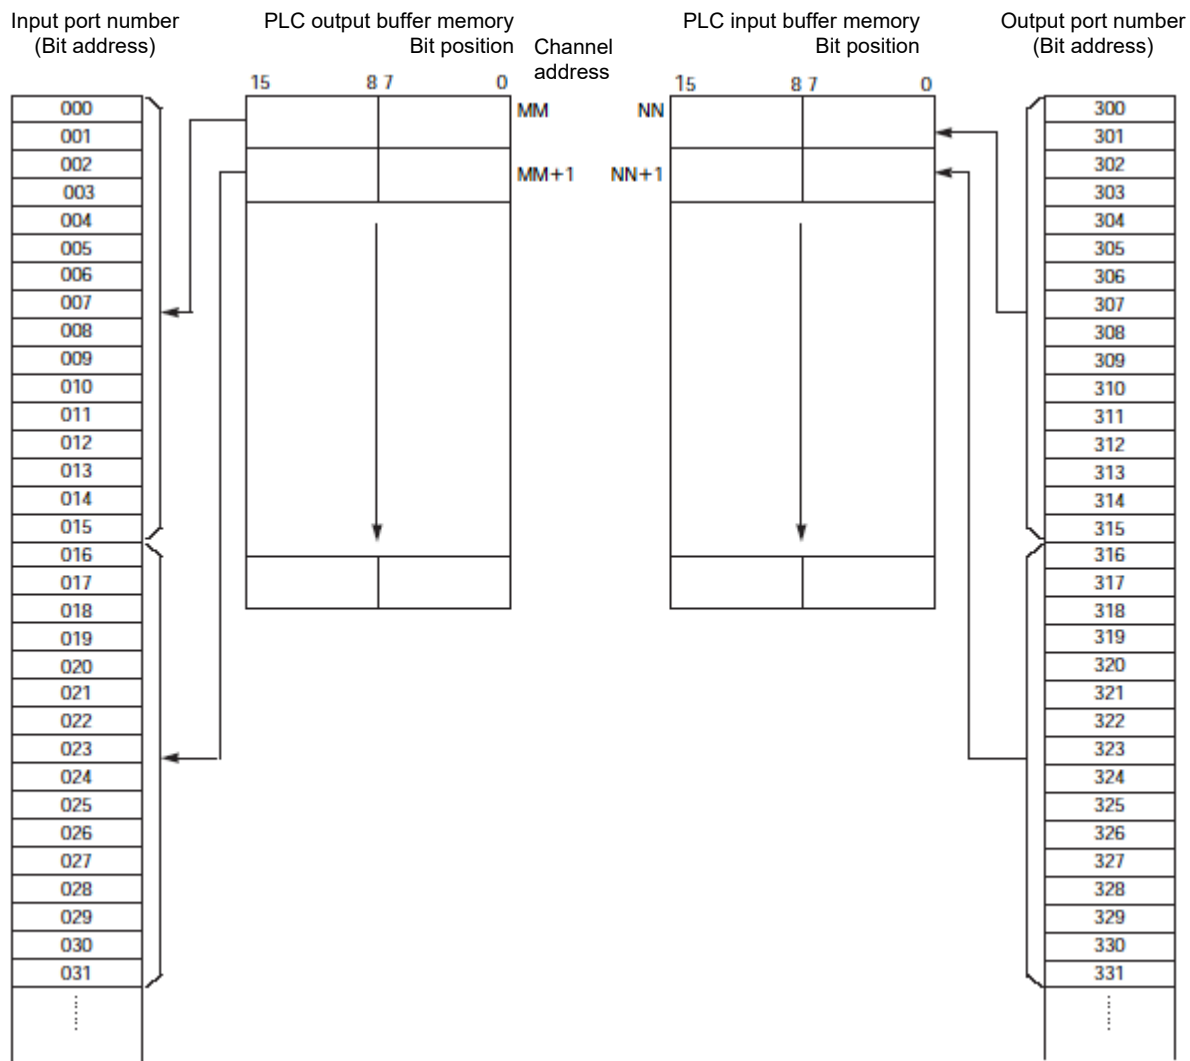

(Note) NN and MM indicate PLC channel addresses corresponding to node address nn. Node addresses nn, nn+1, nn+2, and so on, are occupied according to the numbers of input/output points used. Accordingly, exercise caution to avoid node address duplication.

(2) Using in the positioner mode

Regardless of the settings of I/O parameter Nos. 1, 16 and 17, physical input ports are assigned from No. 0, while physical output ports are assigned from No. 300.

Use input port Nos. 0 to 23 and output port Nos. 300 to 307 according to the I/O port tables for respective controllers provided on the pages that follow.

I/O parameter Nos. 14 and 15 are both set to "24."

(Note) I/O parameter Nos. 14 and 15 should be set to the same value corresponding to either the number of input ports or output ports whichever is greater.

ASEL I/O port table in positioner mode

Category	Port No.	Positioner mode				
		Standard mode	Type switching mode	2-axis independent mode	Teaching mode	DC-S-C1 compatible mode
Input	16	Position input 10	Input 10	Position input 7	Axis 1 jog-	Position No. 1000 input
	17	Position input 11	Input 11	Position input 8	Axis 2 jog+	-
	18	Position input 12	Input 12	Position input 9	Axis 2 jog-	-
	19	Position input 13	Input 13	Position input 10	Inch (0.01 mm)	-
	20	-	Input 14	Position input 11	Inch (0.1 mm)	-
	21	-	Input 15	Position input 12	Inch (0.5 mm)	-
	22	-	Input 16	Position input 13	Inch (1 mm)	-
	23	Error reset	Error reset	Error reset	Error reset	CPU reset
	0	Start	Start	Axis 1 start	Start	Start
	1	Home return	Home return	Home return	Servo ON	Pause
	2	Servo ON	Servo ON	Axis 1 servo ON	*Pause	Cancel
	3	Push motion	Push motion	*Axis 1 pause	Position input 1	Interpolation setting
	4	*Pause	*Pause	*Axis 1 cancel	Position input 2	Position input 1
	5	*Cancel	*Cancel	Axis 2 start	Position input 3	Position input 2
	6	Interpolation	Interpolation	Axis 2 home return	Position input 4	Position input 4
	7	Position input 1	Input 1	Axis 2 servo ON	Position input 5	Position input 8
	8	Position input 2	Input 2	*Axis 2 pause	Position input 6	Position input 10
	9	Position input 3	Input 3	*Axis 2 cancel	Position input 7	Position input 20
	10	Position input 4	Input 4	Position input 1	Position input 8	Position input 40
	11	Position input 5	Input 5	Position input 2	Position input 9	Position input 80
12	Position input 6	Input 6	Position input 3	Position input 10	Position input 100	
13	Position input 7	Input 7	Position input 4	Position input 11	Position input 200	
14	Position input 8	Input 8	Position input 5	Teaching mode specification	Position input 400	
15	Position input 9	Input 9	Position input 6	Axis 1 jog+	Position input 800	
Output	300	*Alarm	*Alarm	*Alarm	*Alarm	Alarm
	301	Ready	Ready	Ready	Ready	Ready
	302	Position complete	Position complete	Axis 1 position complete	Position complete	Position complete
	303	Home return complete	Home return complete	Axis 1 home return complete	Home return complete	-
	304	Servo ON output	Servo ON output	Axis 1 servo ON	Servo ON output	-
	305	Push motion complete	Push motion complete	Axis 2 position complete		-
	306	System battery error	System battery error	Axis 2 home return complete	System battery error	System battery error
	307	Absolute battery error	Absolute battery error	Axis 2 servo ON	Absolute battery error	Absolute battery error

*: Contact B

PSEL I/O port table in positioner mode

Category	Port No.	Positioner mode				
		Standard mode	Type switching mode	2-axis independent mode	Teaching mode	DC-S-C1 compatible mode
Input	16	Position input 10	Input 10	Position input 7	Axis 1 jog-	Position No. 1000 input
	17	Position input 11	Input 11	Position input 8	Axis 2 jog+	-
	18	Position input 12	Input 12	Position input 9	Axis 2 jog-	-
	19	Position input 13	Input 13	Position input 10	Inch (0.01 mm)	-
	20	-	Input 14	Position input 11	Inch (0.1 mm)	-
	21	-	Input 15	Position input 12	Inch (0.5 mm)	-
	22	-	Input 16	Position input 13	Inch (1 mm)	-
	23	Error reset	Error reset	Error reset	Error reset	CPU reset
	0	Start	Start	Axis 1 start	Start	Start
	1	Home return	Home return	Home return	Servo ON	Pause
	2	Servo ON	Servo ON	Axis 1 servo ON	*Pause	Cancel
	3	Push motion	Push motion	*Axis 1 pause	Position input 1	Interpolation setting
	4	*Pause	*Pause	*Axis 1 cancel	Position input 2	Position input 1
	5	*Cancel	*Cancel	Axis 2 start	Position input 3	Position input 2
	6	Interpolation	Interpolation	Axis 2 home return	Position input 4	Position input 4
	7	Position input 1	Input 1	Axis 2 servo ON	Position input 5	Position input 8
	8	Position input 2	Input 2	*Axis 2 pause	Position input 6	Position input 10
	9	Position input 3	Input 3	*Axis 2 cancel	Position input 7	Position input 20
	10	Position input 4	Input 4	Position input 1	Position input 8	Position input 40
	11	Position input 5	Input 5	Position input 2	Position input 9	Position input 80
12	Position input 6	Input 6	Position input 3	Position input 10	Position input 100	
13	Position input 7	Input 7	Position input 4	Position input 11	Position input 200	
14	Position input 8	Input 8	Position input 5	Teaching mode specification	Position input 400	
15	Position input 9	Input 9	Position input 6	Axis 1 jog+	Position input 800	
Output	300	*Alarm	*Alarm	*Alarm	*Alarm	Alarm
	301	Ready	Ready	Ready	Ready	Ready
	302	Position complete	Position complete	Axis 1 position complete	Position complete	Position complete
	303	Home return complete	Home return complete	Axis 1 home return complete	Home return complete	-
	304	Servo ON output	Servo ON output	Axis 1 servo ON	Servo ON output	-
	305	Push motion complete	Push motion complete	Axis 2 position complete		-
	306	System battery error	System battery error	Axis 2 home return complete	System battery error	System battery error
	307	-	-	Axis 2 servo ON	-	-

*: Contact B

SSEL I/O port table in positioner mode

Category	Port No.	Positioner mode				
		Standard mode	Type switching mode	2-axis independent mode	Teaching mode	DC-S-C1 compatible mode
Input	16	Position input 10	Input 10	Position input 7	Axis 1 jog-	Position No. 1000 input
	17	Position input 11	Input 11	Position input 8	Axis 2 jog+	Position No. 2000 input
	18	Position input 12	Input 12	Position input 9	Axis 2 jog-	Position No. 4000 input
	19	Position input 13	Input 13	Position input 10	Inch (0.01 mm)	Position No. 8000 input
	20	Position input 14	Input 14	Position input 11	Inch (0.1 mm)	Position No. 10000 input
	21	Position input 15	Input 15	Position input 12	Inch (0.5 mm)	Position No. 20000 input
	22	Position input 16	Input 16	Position input 13	Inch (1 mm)	(Mount to OFF)
	23	Error reset	Error reset	Error reset	Error reset	CPU reset
	0	Start	Start	Axis 1 start	Start	Start
	1	Home return	Home return	Home return	Servo ON	Pause
	2	Servo ON	Servo ON	Axis 1 servo ON	*Pause	Cancel
	3	Push motion	Push motion	*Axis 1 pause	Position input 1	Interpolation setting
	4	*Pause	*Pause	*Axis 1 cancel	Position input 2	Position input 1
	5	*Cancel	*Cancel	Axis 2 start	Position input 3	Position input 2
	6	Interpolation	Interpolation	Axis 2 home return	Position input 4	Position input 4
	7	Position input 1	Input 1	Axis 2 servo ON	Position input 5	Position input 8
	8	Position input 2	Input 2	*Axis 2 pause	Position input 6	Position input 10
	9	Position input 3	Input 3	*Axis 2 cancel	Position input 7	Position input 20
	10	Position input 4	Input 4	Position input 1	Position input 8	Position input 40
	11	Position input 5	Input 5	Position input 2	Position input 9	Position input 80
12	Position input 6	Input 6	Position input 3	Position input 10	Position input 100	
13	Position input 7	Input 7	Position input 4	Position input 11	Position input 200	
14	Position input 8	Input 8	Position input 5	Teaching mode specification	Position input 400	
15	Position input 9	Input 9	Position input 6	Axis 1 jog+	Position input 800	
Output	300	*Alarm	*Alarm	*Alarm	*Alarm	Alarm
	301	Ready	Ready	Ready	Ready	Ready
	302	Position complete	Position complete	Axis 1 position complete	Position complete	Position complete
	303	Home return complete	Home return complete	Axis 1 home return complete	Home return complete	-
	304	Servo ON output	Servo ON output	Axis 1 servo ON	Servo ON output	-
	305	Push motion complete	Push motion complete	Axis 2 position complete		-
	306	System battery error	System battery error	Axis 2 home return complete	System battery error	System battery error
	307	Absolute battery error	Absolute battery error	Axis 2 servo ON	Absolute battery error	Absolute battery error

*: Contact B

10. Troubleshooting

If you encountered a problem concerning DeviceNet, check the operating condition using the table below and remove the cause of the problem. The monitor LEDs, MS and NS, illuminate in two colors (red and green), and you can check the condition of DeviceNet based on the illumination status and color of each LED.

If an error occurred, MS or NS should change to steady or blinking red. If you spot a steady or blinking red light, check (reconfigure) the connections of the power supply and communication cable, DIP switch settings, parameter settings, etc., and then reconnect the power.

○: Steady light, ●: Blinking, ⊙: Off

Monitor LEDs				Condition	Remedial action
MS		NS			
Grn	Red	Grn	Red		
○	-	○	-	Operating normally	
○	-	●	●	Waiting for completion of node address duplication check by the master.	<ul style="list-style-type: none"> Confirm that the baud rate of the master is the same as the baud rates of all slaves. If not, correct the applicable settings and then restart the system. Confirm that the connectors are connected correctly. Confirm that the communication power (24 VDC) is supplied. Confirm that the master is operating correctly. Confirm that the communication cable is not broken.
○	-	⊙	-	Waiting for connection to be established with the master.	<ul style="list-style-type: none"> Confirm that the master is operating correctly. Confirm that the applicable slave is registered in the master scan list.
-	○	●	●	A hardware error occurred.	<ul style="list-style-type: none"> Contact IAI. (The DeviceNet board may have to be replaced.)
-	⊙	●	●	Incorrect DIP switch setting.	<ul style="list-style-type: none"> Confirm that the baud rate of the slave is the same as the baud rate of the master. Confirm that the configuration is correct. After correcting the applicable settings, restart the system.
○	-	-	○	Detected a node address duplication or bus-off state (communication was stopped due to frequent data errors).	<ul style="list-style-type: none"> Correct the node address, and then restart the system. Confirm that the baud rate of the slave is the same as the baud rate of the master. Confirm that the communication cable length is appropriate. Check the communication cable for wire breakage or loose or disconnected connector. Confirm that the terminal resistors are installed correctly. Confirm that no noise sources are located nearby, that the communication cable is not wired in parallel with any power line, and that the system is not otherwise affected by noise. After correcting the applicable settings, restart the system.
○	-	-	⊙	A communication time out occurred.	<ul style="list-style-type: none"> Confirm that the baud rate of the slave is the same as the baud rate of the master. Confirm that the communication cable length is appropriate. Check the communication cable for wire breakage or loose or disconnected connector. Confirm that the terminal resistors are installed correctly. Confirm that no noise sources are located nearby, that the communication cable is not wired in parallel with any power line, and that the system is not otherwise affected by noise. After correcting the applicable settings, restart the system.
NS switches repeatedly between steady green and blinking green. Or, NS switches repeatedly between blinking red and blinking green.				A communication error occurred.	<ul style="list-style-type: none"> Confirm that the applicable slave is registered in the master scan list. Confirm that any of the I/O area is not used by other slave. Confirm that the I/O area does not exceed the area permitted for use by the master unit (in the case of fixed assignment).

11. Common Items and Others

11.1 Communication Cable

For the DeviceNet communication cable, use a dedicated 5-wire DeviceNet cable conforming to the DeviceNet Specification. There are two types of dedicated cables: large size and small size.

(Note) Take note that if a small-size cable is used, the maximum network length becomes 100 m or less regardless of the baud rate setting.

Cables by Omron or SWCC Showa Holdings

Item	Large-size cable (thick cable)		Small-size cable (thin cable)	
	Signal line	Power line	Signal line	Power line
Model	DCA2-5C10, TDN18 series		DCA1-5C10, TDN24 series	
Conductor cross-section area	0.86 mm ²	2.17 mm ²	0.20 mm ²	0.38 mm ²
Conductor outer diameter	1.21 mm	1.92 mm	0.60 mm	0.80 mm
Color	Blue, white	Red, black	Blue, white	Red, black
Impedance	120 Ω ± 10%	-	120 Ω ± 10%	-
Propagation delay	1.36 ns/ft	-	1.36 ns/ft	-
Attenuation ratio	500 kHz: 0.25 dB/ft 125 kHz: 0.13 dB/ft	-	500 kHz: 0.50 dB/ft 125 kHz: 0.29 dB/ft	-
Conductor resistance (at 20°C)	6.9 Ω/1000 ft 22.6 Ω/1000 m	2.7Ω/1000 ft 8.9Ω/1000 m	28 Ω/1000 ft 91.9 Ω/1000 m	17.5 Ω/1000 ft 57.4 Ω/1000 m
Maximum current	-	8A	-	3A
Outer diameter of finished cable	11.2 ~ 12.1 mm		6.9 mm	

Cables by Allen-Bradley

Item	Large-size cable (thick cable)		Small-size cable (thin cable)	
	Signal line	Power line	Signal line	Power line
Model	1485C-P1-A50		1485C-P1-C50	
Conductor cross-section area	0.82 mm ²	1.65 mm ²	0.20 mm ²	0.33 mm ²
Conductor outer diameter	1.17 mm	1.68 mm	0.60 mm	0.79 mm
Color	Blue, white	Red, black	Blue, white	Red, black
Impedance	120 Ω ± 10%	-	120 Ω ± 10%	-
Propagation delay	1.36 ns/ft	-	1.36 ns/ft	-
Attenuation ratio	500 kHz: 0.25 dB/ft 125 kHz: 0.13 dB/ft	-	500 kHz: 0.50 dB/ft 125 kHz: 0.29 dB/ft	-
Conductor resistance	6.9Ω/1000 ft 22.6Ω/1000 m	3.6Ω/1000 ft 11.8Ω/1000 m	28 Ω/1000 ft 91.9 Ω/1000 m	17.5 Ω/1000 ft 57.4 Ω/1000 m
Maximum current	-	8A	-	3A
Outer diameter of finished cable	11.2 ~ 12.1 mm		6.9 mm	

11.2 Connection of Communication Cable Connector

Connect the communication cable in accordance with the connector table below.

Pin No.	Cable wire color	Signal name	Description
1	Black	V-	Network power supply -
2	Blue	CAN_L	Signal wire, differential -
3	Shield	Drain	Drain (shield)
4	White	CAN_H	Signal wire, differential +
5	Red	V+	Network power supply +

Color-coded seals corresponding to the cable wire colors shown in the table above are attached on the supplied cable-end connector.

11.3 Power Supply Connection and Terminal Resistor

11.3.1 Power Supply Connection

The DeviceNet system supplies power to the network.

The supply voltage is 24 VDC, which is applied between the terminals for red (V+) and black (V-) wires in the main line (5-wire cable).

Use a dedicated power tap or T-junction tap to connect the power supply directly to the communication cable connector.

11.3.2 Terminal Resistor

A terminal resistor must be connected on both ends of the main DeviceNet line.

Each controllers have no built-in terminal resistors.

To connect a terminal resistor, prepare a dedicated terminal-block type terminal resistor ($121 \Omega \pm 1\%$, 1/4 W) or terminal resistor with T-junction tap ($121 \Omega \pm 1\%$, 1/4 W), or other resistor of equivalent specification, and connect it directly to the communication cable connector.

(Note) For details, refer to the operation manual for the master unit.

11.4 Useful Functions You Should Know When Adjusting an XSEL Controller

- (1) In the case of an XSEL K-type controller in which a standard or expansion I/O board is installed, the XSEL controller can be started on its own without connecting a 24-VDC I/O power supply.
- (2) If a DeviceNet board is installed, the XSEL controller can be started on its own before network connection is established.

In either case, the applicable parameters (I/O Parameter Nos. 10 to 13) must be set to "0: Do not monitor."

(Note) After the necessary operation or adjustment is completed, be sure to reset the parameters to their original settings. If the parameters are not reset, error check will not be performed for the board in each applicable slot.

12. EDS File

If you need an EDS file for any of these controllers, following download it from IAI's website.

Website: <http://www.iai-robot.co.jp>

Reference

Using Omron's configurator

1. Install the EDS file in the configurator.
On an XSEL controller, the EDS file is installed under the name "AnyBus-S DeviceNet" in the "Communications Adapter" subfolder located in the "HMS Fieldbus Systems AB" folder.
On an RCS-C, E-Con or SCON-C controller, the EDS file is installed under the name "RCS-C-DV," "ECON-C-DV" or "S-CON-C-DV," respectively, in the "Generic Device" subfolder located in the "IAI Corporation" folder.
On an ASEL, PSEL, or SSEL, the EDS file is installed under the name "IAFD3803" (same for all five models) in the "Generic Device" subfolder located in the "IAI Corporation" folder.
 2. Build and set up a network using the configurator.
On an XSEL controller, use the EDS file to perform the necessary settings.
On an RCS-C, E-Con or SCON-C controller, 16 input points and 16 output points (fixed) are set as remote I/Os. It is also possible to set I/Os offline and then upload the settings. If the I/Os of the applicable device are fixed, uploading different settings will automatically set a number of bytes that can be used to store I/O property information.
- [Setting for XSEL, MSEL, TTA, TT, ASEL, PSEL and SSEL controller]
- (1) For an XSEL, MSEL, TTA, TT, ASEL, PSEL and SSEL controller use the EDS file to set the number of bytes to be used to store I/O property information.
The number of bytes should correspond to the available I/O ports set by the applicable I/O parameters.
If the EDS file has been installed in a PC, the necessary settings can be done offline and then uploaded.
 - (2) After the settings are complete, open the parameter window in the master (PLC). The applicable device should be found in the unregistered device list. Register the device in the registered device list.
(Note) Whether or not to select "Enable automatic assignment upon registration" should be determined in accordance with the assignment method selected for the entire system.
 - (3) If automatic assignment is not enabled at the time of registration, drag the registered device and insert it in the first address of the bytes to be used for I/O assignment. The byte addresses to be used will be assigned automatically. You can also select the edit function to specify the first address.
Repeat this process to set byte addresses for both inputs and outputs.
 - (4) Download the settings to the PLC.
 - (5) The XSEL controller has been registered in the DeviceNet system (master PLC). Perform a final check to confirm that all settings are correct.

Change History

Revision Date	Description of Revision
November 2011	Eighteenth Edition <ul style="list-style-type: none"> • Contents changed in Safety Guide • Caution notes added for when working with two or more persons Deleted ACON and PCON.
May 2012	Nineteenth Edition <ul style="list-style-type: none"> • Page 1 to 7 Contents changed and added in Safety Guide • Page 81 Statement "EDS file is enclosed in standard for XSEL provided in a floppy disc." deleted.
July 2012	Twentieth edition <ul style="list-style-type: none"> • Contents changed in Safety Guide • Page 10 Part Number "J/K/P/Q/JX/KX/PX/QX" added on "2. XSEL" • Page 35 to 51 3. XSEL-R/S/RX/SX/RXD/SXD on added
September 2013	Twenty first edition <ul style="list-style-type: none"> • 4. Tabletop Robot TTA on added
March 2014	Twenty second edition <ul style="list-style-type: none"> • Connector Model Code Changed
May 2014	Twenty third edition <ul style="list-style-type: none"> • 4. MSEL on added
August 2014	Edition 23B <ul style="list-style-type: none"> • Made applicable for MSEL Cartesian Type
July 2016	Twenty Third Edition <ul style="list-style-type: none"> • XSEL-RA/SA series added
August 2017	Edition 24B <ul style="list-style-type: none"> • Model code changed for applicable models • Descriptions revised for I/O Parameters No. 2 to 17, 120 to 122 and 223 to 225 • Correction made
November 2017	Edition 24C <ul style="list-style-type: none"> • Descriptions revised for I/O Parameters No. 14 to 17 • Description revised regarding 11.3.2 Terminal Resistors • Correction made
May 2018	Edition 24D <ul style="list-style-type: none"> • 4.6, 5.6 Contents revised in delivery setting table for I/O ports on MSEL and TTA
September 2018	Edition 24E <ul style="list-style-type: none"> • 5.3 TTA Status LED correction made to description
March 2019	Edition 24F <ul style="list-style-type: none"> • Chapter 2 to Chapter 9 Interface Specifications : Correction made to connector models

Revision Date	Description of Revision
June 2021	Edition 25 <ul style="list-style-type: none"> • CC-Link IE Field to XSEL-RA/SA Series Network I/F Module added • Changed the remarks column for Extension I/O Control in the MSEL Parameter table • Changed the remarks column for Extension I/O Control in the TTA Parameter table • Correction made
January 2022	Edition 26 <ul style="list-style-type: none"> • Change made to cover page design • Description revised for the [Please Read Before Use] • Description revised in Safety Guide • RCON-NCN added to list of instruction manuals for separate reference
February 2024	Edition 26B <ul style="list-style-type: none"> • 2.2, 3.2, 6.2, 7.2, 8.2, 9.2 Interface Specifications The cable-end connector model of changed • 9.3 DeviceNet Interface Specifications is connector model of cable side changed



IAI Corporation

Head Office: 577-1 Obane Shimizu-KU Shizuoka City Shizuoka 424-0103, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL +1-310-891-6015 FAX +1-310-891-0815
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173
TEL +1-847-908-1400 FAX +1-847-908-1399
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL +1-678-354-9470 FAX +1-678-354-9471
website: www.intelligentactuator.com

Technical Support available in Europe

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL +49(0)6196-88950 FAX +49(0)6196-889524
website: www.iai-automation.com

Technical Support available in Great Britain



Duttons Way, Shadsworth Business Park, Blackburn, Lancashire, BB1 2QR, United Kingdom
TEL +44(0)1254-685900
website: www.lcautomation.com

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL +86-21-6448-4753 FAX +86-21-6448-3992
website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825 PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand
TEL +66-2-361-4458 FAX +66-2-361-4456
website: www.iai-robot.co.th