



IS Series Actuator

First Step Guide Eighth Edition

ISB • ISPB, SSPA

Thank you for purchasing our product.
Make sure to read the Safety Guide and detailed Instruction Manual as well as this First Step Guide to ensure correct use.
This Instruction Manual is original.

Warning : Read the instruction manual carefully and follow the instruction manual when handling this equipment.
Please downloaded the user's manual from our website.
You can download it free of charge. User registration is required for first time users.
URL:www.iai-robot.co.jp/data_dl/CAD_MANUAL/

Keep a printout of the introduction manual near the equipment in which this product is installed so that it can be checked at all times, or display it on your computer, tablet terminal, etc. so that you can check it immediately.
If you need a bound copy of the instruction manual, order it from the nearest sales office listed in the First Step Guide or at the end of the instruction manual. It will be provided for a fee.

- Using or copying all or part of this Instruction Manual without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the sentences are registered trademarks.

Product Check

 
This product is comprised of the following parts if it is of standard configuration.
If you find any fault in the contained model or any missing parts, contact us or our distributor.

1. Parts (The option is excluded.)

No.	Part Name	Model	Remarks
1	Main Body	Refer to "How to read the model plate", "How to read the model No."	
Accessories			
2	Motor • Encoder Cable*1		
3	Dedicated washer		Enclosed to M, L and W sizes in ISB and ISPB
4	Safety Guide	M0194	


*1 Please refer to [Wiring] for the applicable cables.

2. How to read the model plate



* The model (WXM) with "V1" put at the end of the serial numbers has increased the payload in the vertical direction. Refer to [Instruction Manual 2. Specifications] for details.

3. How to read the model No.

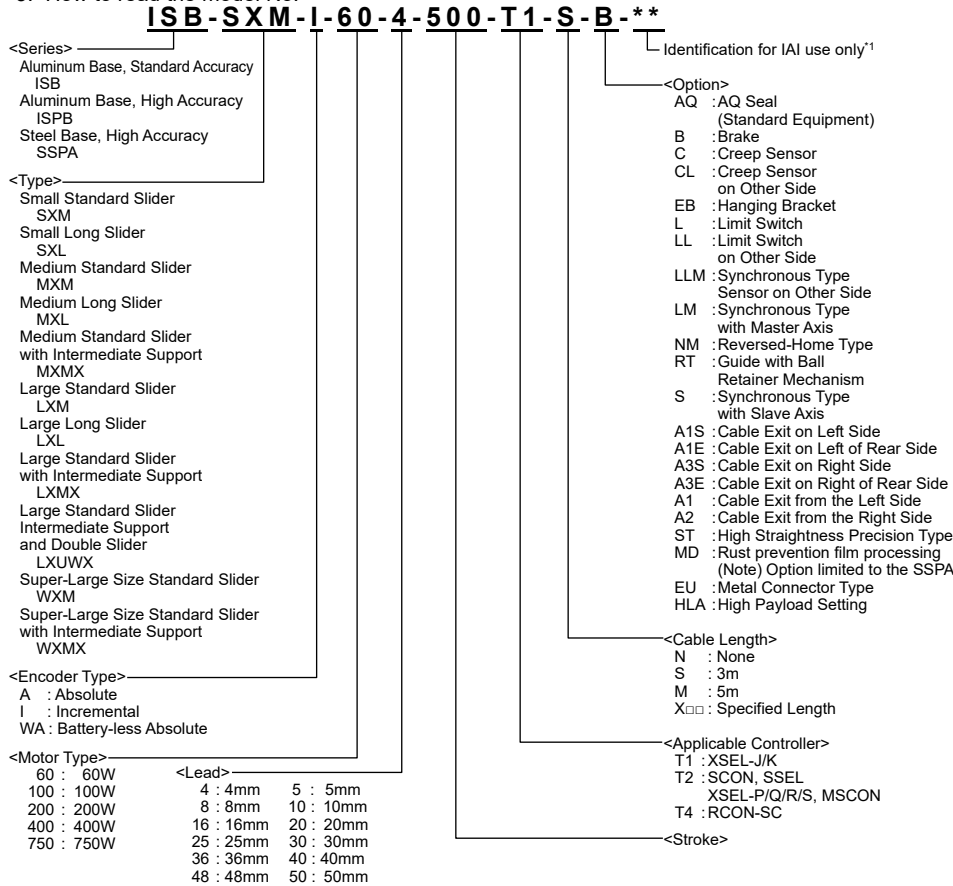

*1 This may be displayed for the manufacturing reason. (This is not to indicate the manufacturing model code.)
(Note) SSPA is no setting on WA (Battery-less Absolute).
(Note) In WA (battery-less absolute type) in ISPB, RT (guide with ball retention mechanism) cannot be selected.
(Note) In ISPB and SSPA, lead 36mm and 48mm cannot be selected.
(Note) The controllers applicable for WA (battery-less absolute) are SCON-CB/CGB, SCON-CAL/CGAL, MCON, SSEL-CS and XSEL-P/Q/R/S/RA/SA.
(Note) The options for WXM are limited to A1, A3, AQ, B, HLA, L, LM, NM, S, EB, EU and W.
(Note) The options for WXXM are limited to A1, A3, AQ, B, L, LM, NM, S, EB, EU and W.

Precautions in Handling

1. Handling of Robot

1.1 Handling of the Packed Product

Unless otherwise specified, the actuator is shipped with each axis packaged separately.

- Do not damage or drop. The package is not supplied with any special treatment that enables it to resist an impact caused by a drop or crash.
- Transport a heavy package with at least more than two operators. Consider an appropriate method for transportation.
- If the shipping box is to be left standing or transporting, it should be in a horizontal position. Follow the instruction if there is any for the packaging condition.
- Do not get on the package.
- Do not put any load that may cause a deformation or breakage of the package.


1.2 Handling of Robot without Package

(1) ISB, ISPB

- Do not carry the actuator by holding the cable, or do not move it by pulling the cable.
 - Hold the body base when transporting the actuator.
 - When carrying the actuator, exercise caution not to bump it against nearby objects or structures.
 - Do not give any excessive force to any of the sections in the actuator.
 - In the case of the high-precision straightness specification type, be careful not to make a damage and the traces of hitting at the base bottom.
- There is a possibility that the running accuracy changes.

(2) SSPA

- There are 4 eyebolts attached on the unit. Use these to transport it.
- The appearance of the unit is as shown below once it is unpackaged.

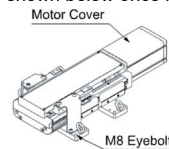

- Do not hold the motor cover when transporting the unit. Doing so may damage the motor cover with the actuator weight and the unit may drop.
 - The motor cover is allowed to be held only when changing the orientation of the installation and removing the metal components provided for transportation.
 - Do not carry the actuator by holding the cable, or do not move it by pulling the cable.
 - When carrying the actuator, exercise caution not to bump it against nearby objects or structures.
 - Do not give any excessive force to any of the sections in the actuator.
 - In the case of the high-precision straightness specification type, be careful not to make a damage and the traces of hitting at the base bottom.
- There is a possibility that the running accuracy changes.

2. Handling of Multi-Axes Type

2.1 Handling of the Packed Product

Multi-axes type will be delivered in a package with an outer case fixed to a wooden base. Sliders are fixed so they would not accidentally move while in transportation. The end of the actuator is also fixed to avoid it swinging by external vibration.

- Do not damage or drop. The package is not supplied with any treatment that enables it to resist an impact caused by a drop or crash.
- Transport a heavy package with at least more than two operators. Consider an appropriate method for transportation.
- When suspending the package using ropes, pass the ropes from underneath the reinforcement frames at the bottom of the base. When lifting with a forklift, also place the forks underneath the base.
- Do not apply an impact on the package or let it bounce when putting it down.
- Do not get on the package.
- Do not put any load that may cause a deformation or breakage of the package.

2.2 Handling of Robot without Package

- Secure the sliders to prevent sudden movement during transport.
- If any end of the actuator is overhanging, secure it properly to avoid significant movement due to external vibration.
- In the case that the actuator needs to be carried up with ropes or another method, be sure to use an appropriate cushioning to avoid the robot being deformed or put on an excessive pressure. And also, be sure to keep the robot in a stable and horizontal posture. Utilize the screw holes on the bottom of the base to attach a tool to suspend the package if necessary.
- Be careful not to apply a load on any of the actuator brackets or covers or on the connector box. Also, avoid the cables being pinched or caused an excessive deformation.

3. Handling of Robot Mounted on Mechanical Equipment (System)

In this section, explains how to handle the actuator when transporting it in the whole mechanical equipment (system) that the actuator is installed to.

- Secure the sliders to prevent sudden movement during transport.
- If any end of the actuator is overhanging, secure it properly to avoid significant movement due to external vibration.
- If the actuator assembly is transported without the ends being secured, do not apply impact of 0.3G or more.
- When suspending the mechanical equipment (system) with ropes, avoid applying force to actuator, connector box, etc. Also, avoid the cables being pinched or caused an excessive deformation.

Environments for Installation, Storage and Preservation

1. Installation Environment

Please attempt to avoid installing the product to such places as listed below.
It is generally the environment where a worker can work without any protection gear.
Also, make sure to keep enough space necessary for maintenance work.

- Place where exposed to radiant heat from a huge heat source such as heat treatment
- Place where the ambient temperature goes out of the applicable range from 0 to 40°C
- Place where condensation would occur due to sudden temperature change
- Place where the relative humidity exceeds 85% RH
- Place where exposed to the direct sunlight
- Place where corrosive gas or flammable gas exist
- Place where it contains a lot of dust, salt or iron (Outside of an ordinary assembly plant)
- Place where water, oil (includes oil mist and cutting fluid) or chemical is splashed
- Place where the product main body receives vibration or hit impact

Make sure to have a treatment for blocking when using in the following conditions:

- Place where noise is generated by such facts as static electricity
- Place where exposed to the influence of strong electric or magnetic field
- Place where exposed to the influence of ultraviolet or radiant rays

2. Storage and Preservation Environment

The storage and preservation environment should comply with the same standards as those for the installation environment. In particular, when the machine is to be stored for a long time, pay close attention to environmental conditions so that no dew condensation forms.

Unless specially specified, moisture absorbency protection is not included in the package when the machine is delivered. In the case that the machine is to be stored and preserved in an environment where dew condensation is anticipated, take the condensation preventive measures from outside of the entire package, or directly after opening the package.


For storage and preservation temperature, the machine withstands temperatures up to 60°C for a short time, but in the case of the storage and preservation period of 1 month or more, control the temperature to 50°C or less.

The product should be settled in the horizontal orientation while in storage and reservation. In the case it is stored in the packaged condition, follow the posture instruction if any displayed on the package.


Names of the Parts

1. ISB, ISPB


[Except for WXM, WXXM]

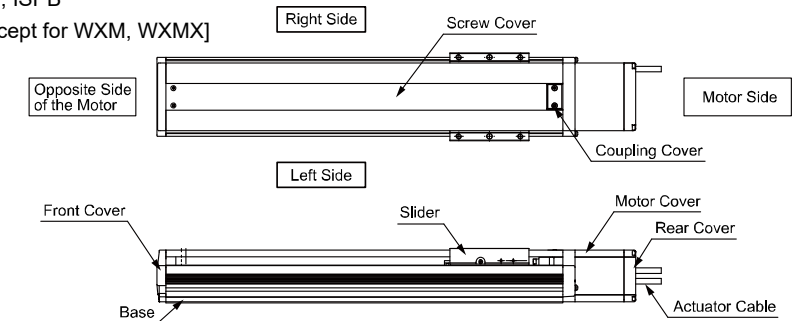

[WXM, WXXM]

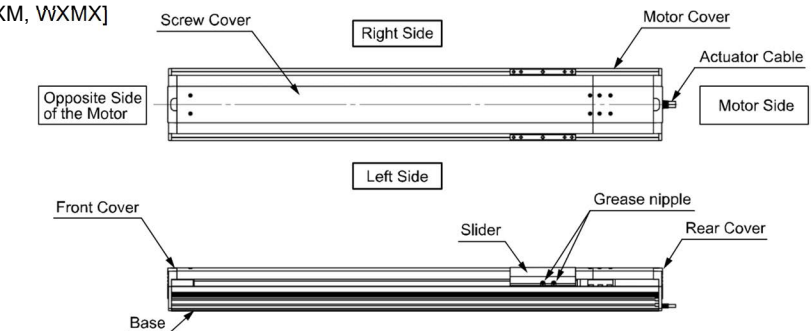


2. SSPA

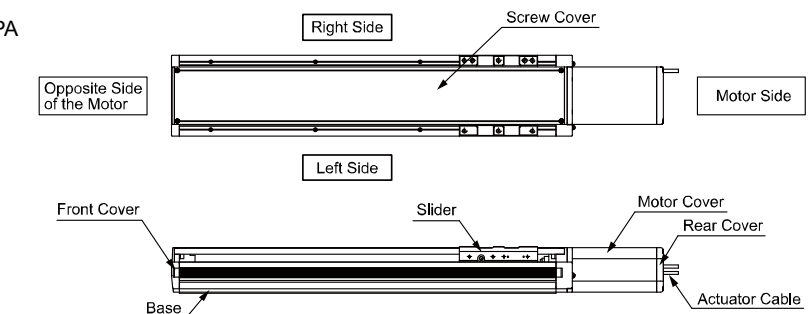

Refer to the Catalog or Instruction Manual for the dimensioned drawing and the detailed appearance drawing.

Attachment


Refer to the Instruction Manual for the attachments of the actuator and loads.
[Precautions for Attachments]

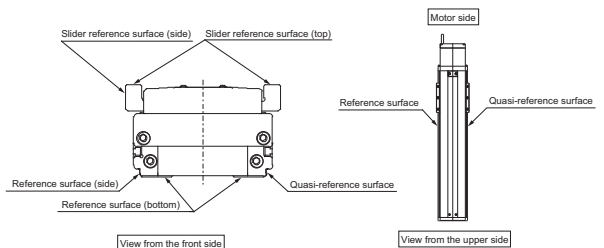No.	Item	Precautions
1	Installation	<ul style="list-style-type: none"> ISB and MXMX/LXMX/LXUWX in ISPB cannot be mounted vertically, horizontally oriented on the wall or on the ceiling. WXXMX cannot be mounted horizontally oriented on the wall or on the ceiling. Avoid using an actuator with no brake in the vertical orientation. WXXMX should require different parameters between when mounted vertically and when mounted horizontally oriented on the wall. When the brake-equipped option is selected, the delivery should be made with the parameters for vertical mount while it made with the parameters for horizontal orientation on the wall when this option is not selected. It will require the parameters to be changed when brake-equipped WXXMX is to be used in horizontal orientation on the ceiling. Consult with IAI in such a case.
2	Attachment Surface	<ul style="list-style-type: none"> The base has to have a structure with sufficient rigidity to prevent oscillation. The basis of measurement of the running accuracy of the slider is from the lower side and motor side to right side. If accuracy for its run is required, use these surfaces as a datum of the installation. In view of the motor side, the parallelism of the quasi-reference surface of left side to the reference surface is 0.1mm or less.  <ul style="list-style-type: none"> Except for High Straightness Precision Type (Model Name: ST (Option)), the actuator mounting surface and other surfaces that are used as a datum should be flat enough with an accuracy of machining or equivalent treatment, and the flatness of the mounting surface needs to be 0.05mm/m or less. For High Straightness Precision Type (Model Name: ST (Option)), the actuator should be mounted on a surface that has the flatness of 0.02mm/m or less after any dirt is removed. Secure the space where maintenance work can be performed.
3	Bolts to be used	<ul style="list-style-type: none"> For the bolts to be used, a high-tensile bolt complying with ISO-10.9 or more is recommended. If using the screw holes, use screws with the thread length dimension being less than the effective depth of the holes. In case the screw hole is a through hole, be careful so the screw tip does not exceed the surface of the tapped hole. For the actuator mounting, use a bolt with the dimension of its effective mating length to the screw hole size as stated below. If screw hole in steel → thread length same as nominal diameter. If screw hole in aluminum → thread length 2 times longer than nominal diameter. When using a base for installation to a platform or equivalent, in order to protect the foot base, apply washers dedicated for high-tensile bolt if using bolts of M8 or larger. No washer is needed for M6 or smaller bolts. Also, do not use a normal washer.
4	Tightening Torque	<ul style="list-style-type: none"> Please follow the specification values stated in the Instruction Manual for the tightening torque. Failure to do so may cause an operation problem.
5	Load Moment and Overhung length	<ul style="list-style-type: none"> Please follow the specification values stated in the Instruction Manual for the load moment and the overhung length. Failure to do so may cause abnormal vibration or noise, and also may remarkably shorten the product life.


Wiring

For the controller, only the dedicated controller manufactured by our company can be used.
For the connection between the actuator and controller, use the attached dedicated connection cable.


[Connection to the X-SEL J/K controller]

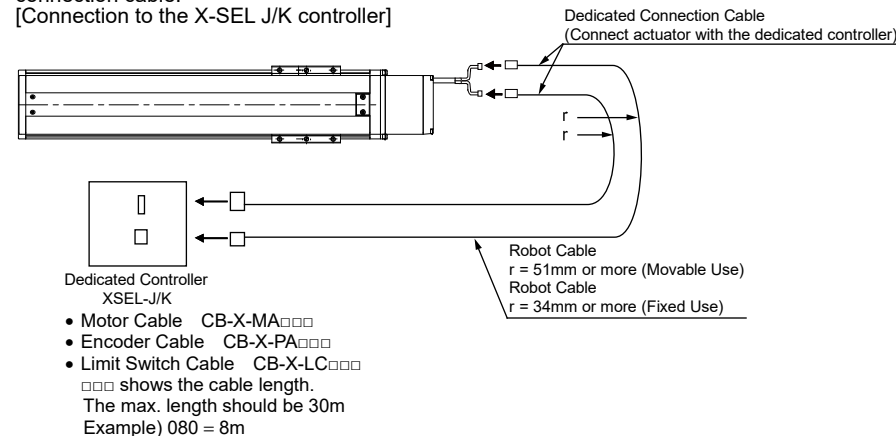

[Connection to the XSEL-P/Q/R/S/RA/SA, SSEL, SCON and MSCON controller]

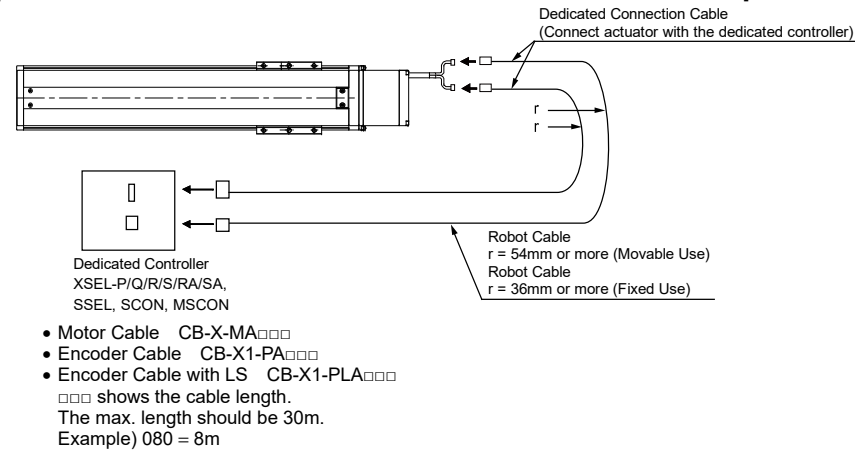


[Connection to the RCON and RSEL system]

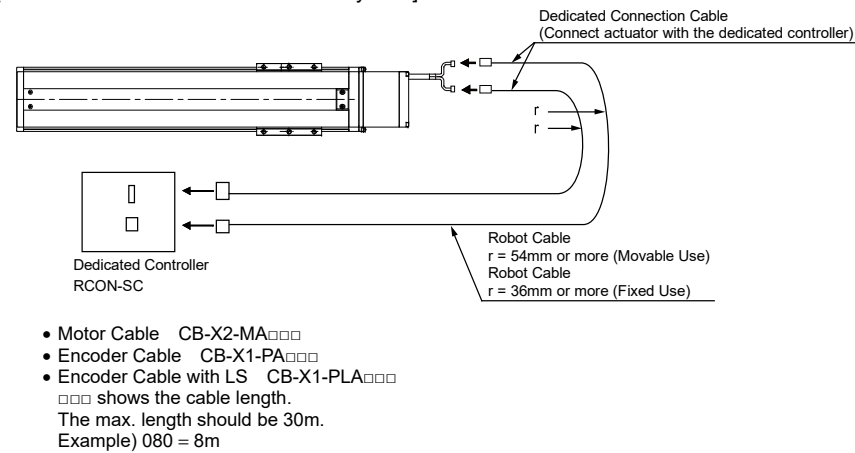


[Prohibited Items in the Cable Processing]


- Do not pull or bend forcibly the cable so as not to give any extra load or tension to the cable.
- Do not process the cable to extend or shortening by means of cutting out, combination or connecting with another cable.
- Do not let the cable flex at a single point.

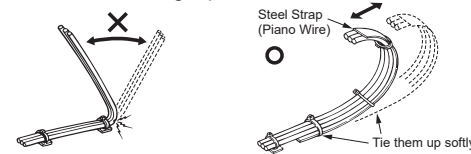


- Do not let the cable bend, kink or twist.

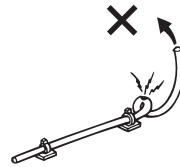


- Do not pull the cable with a strong force.

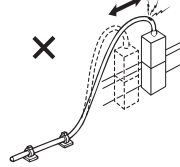


- Do not let the cable receive a turning force at a single point.

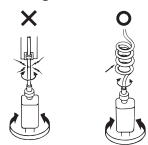

 
- Do not pinch, drop a heavy object onto or cut the cable.



- When fixing the cable, provide a moderate slack and do not tension it too tight.

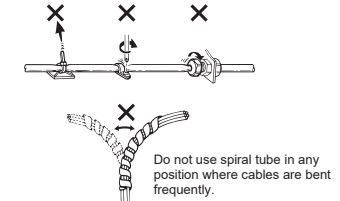


- Separate the I/O line, communication line and power line from each other. Do not store in the same duct.

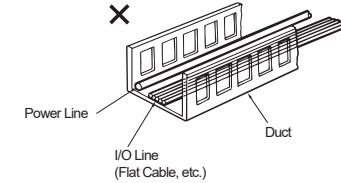

Follow the instructions below when using a cable track.

- If there is an indication to the cable for the space factor in a cable track, refer to the wiring instruction given by the supplier when storing the cable in the cable track.
- Avoid the cables to get twined or twisted in the cable track, and also to have the cables move freely and do not tie them up. (Avoid tension being applied when the cables are bent.)
- Do not pile up cables. It may cause faster abrasion of the sheaths or cable breakage.

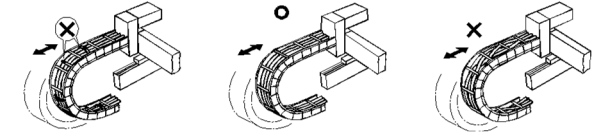

Note:

- When the cable is connected or disconnected, make sure to turn off the power to the controller. When the cable is connected or disconnected with the controller power turned ON, it might cause a malfunction of the actuator and result in a serious injury or damage to the machinery.
- When the connector connection is not correct, it would be dangerous because of a malfunction of the actuator. Make sure to confirm that the connector is connected correctly.



IAI Corporation

Head Office: 1210 Iharacho Shimizu-KU Shizuoka City Shizuoka 424-0114, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL +1-310-891-6015 FAX +1-310-891-0815
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173
TEL +1-847-908-1400 FAX +1-847-908-1399
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL +1-678-354-9470 FAX +1-678-354-9471
website: www.intelligentactuator.com

Technical Support available in Europe

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL +49(0)6196-88950 FAX +49(0)6196-889524
website: www.iai-automation.com

Technical Support available in Great Britain



Duttons Way, Shadsworth Business Park, Blackburn, Lancashire, BB1 2QR, United Kingdom
TEL +44(0)1254-685900
website: www.lcautomation.com

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL +86-21-6448-4753 FAX +86-21-6448-3992
website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825 PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand
TEL +66-2-361-4458 FAX +66-2-361-4456
website: www.iai-robot.co.th